

NIH Image

(Version 1.61)

Introduction.....	2
System Requirements	2
Acknowledgments.....	2
Overview.....	3
Menus.....	9
File.....	9
Edit.....	19
Options.....	23
Process.....	28
Analyze.....	36
Special.....	44
Stacks	49
Windows.....	57
Tools.....	59
Windows	64
Map.....	65
Histogram.....	65
LUT	66
Paste Control.....	67
Plot	68
Info.....	69
Techniques	70
Analyzing Electrophoretic Gels	70
Using Selections.....	71
Using Image with Flatbed Scanners.....	73
Recovering Data from Line Plots	74
Using the Option Key.....	75
Frequently Asked Questions.....	76
Appendices	79
A. Macro Programming Language.....	79
B. Frame Grabber Cards.....	94
C. Cameras and Light Boxes.....	95
D. Alternative Macintosh Analysis Systems.....	96
E. File Formats.....	98
F. Program Limitations	98
G. Shortcuts	99
H. References.....	100
I. Updated Versions and Bug Reports.....	101
Index.....	102

INTRODUCTION

NIH *Image* is a public domain image processing and analysis program for the Macintosh. It can acquire, display, edit, enhance, analyze and animate images. It reads and writes TIFF, PICT, PICS and QuickTime files, providing compatibility with many other applications, including programs for scanning, processing, editing, publishing and analyzing images. It supports many standard image processing functions, including contrast enhancement, density profiling, smoothing, sharpening, edge detection, median filtering, and spatial convolution with user defined kernels.

Image can be used to measure area, mean, centroid, perimeter, etc. of user defined regions of interest. It also performs automated particle analysis and provides tools for measuring path lengths and angles. Spatial calibration is supported to provide real world area and length measurements. Density calibration can be done against radiation or optical density standards using user specified units. Results can be printed, exported to text files, or copied to the Clipboard.

A tool palette supports editing of color and gray scale images, including the ability to draw lines, rectangles and text. It can flip, rotate, invert and scale selections. It supports multiple windows and 8 levels of magnification. All editing, filtering, and measurement functions operate at any level of magnification and are undoable.

Image directly supports several frame grabber cards for capturing images or movie sequences using a TV camera. It also supports QuickTime compatible video digitizers such as those built into "AV" Macs and the Power Mac 7600/8500. Acquired images can be shading corrected and frame averaged.

Image can be customized in three ways: via a built-in Pascal-like macro language, via externally compiled plug-in modules and on the Pascal source code level. Example macros, plug-ins and complete source code are available from the NIH Image Web site (<http://rsb.info.nih.gov/nih-image/>) or by anonymous FTP from zippy.nimh.nih.gov.


System Requirements

Image requires a color capable Macintosh and at least 2MB of free RAM. A Macintosh with 16MB or more of RAM is recommended for working with 3D images, 24-bit color or animation sequences. System 7.0 or later is required. *Image* directly supports, or is compatible with, large monitors, flatbed scanners, film recorders, graphics tablets, PostScript laser printers, photo typesetters and color printers.

Acknowledgments

The author wishes to thank the following individuals for their help, encouragement, and contributions: Peter Ahrens, Joseph Ayers, Greg Brown, Mike Castle, Rick Chapman, Dennis Chesters, David Chow, Ted Colburn, Cyrus Daboo, Andras Eke, Chuck Fiori, Garth Fletcher, Tom Ford-Holevinski, Keith Gorlen, Joseph Hennessey, Greg Hook, Marshal Housekeeper, Edward J. Huff, Werner Klee, John Ladwig, Cary Mariash, Kelly Martin, Reuben Mezrich, Tom Marschner, Ranney Mize, Jim Nash, Ed Nater, Steve Pequigney, David Powell, Ira Rampil, Arlo Reeves, Robert Rimmer, Bob Rodieck, Stein Roervik, Christian Russ, John Russ, Matthew Russotto, Bruce Smith, Seth Snyder, Roy Standing, Cliff Stoll, Steve Ruzin, Norbert Vischer and Mark Vivino.

OVERVIEW

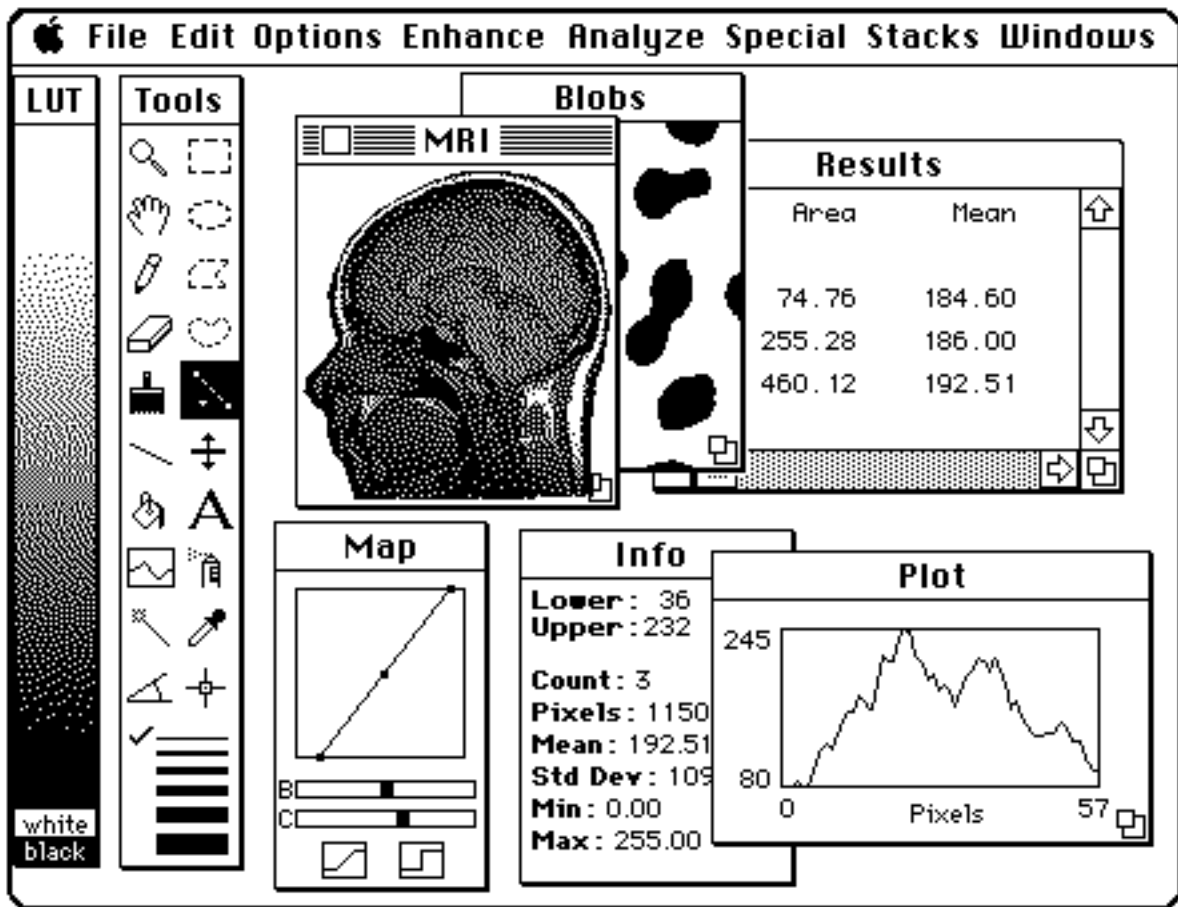

Windows

Image displays images, measurement results, profile plots, etc. in windows. Windows can be dragged around the screen by their title bars. In addition, some windows can be resized (e.g. the Plot window) using the “drag box” in their lower right corner. A window buried underneath other windows can be activated by selecting it in the Windows menu.

The LUT window displays the current video look-up table. The Tools window contains a palette of tools for making selections, editing images, drawing text, and making measurements. The Map window is used for adjusting the contrast and brightness of images and for enabling and disabling thresholding. The Info window displays status information, such as cursor position and value, and the most recent measurement results. The Results window displays the current table of measurement results. The Plot window displays density profile and calibration plots. The currently active window (e.g., the MRI window above) has a highlighted menu bar.

Images

Image manipulates, displays and analyses images. Images are two dimensional arrays of pixels (picture elements). Pixels are represented by 8-bit unsigned integers, ranging in value from 0 to 255. *Image* follows the Macintosh convention and displays zero pixels as white and those with a value of 255 as black. 16-bit images, however, can be imported

and scaled to 8-bits. The 16-bit (up to 65,000 gray levels) to 8-bit (256 gray levels) scaling can be controlled by the user or performed automatically based on the minimum and maximum gray values in the 16-bit image. The Rescale command (in the File menu) allows the user to redo the 16-bit to 8-bit scaling at a later time.

Stacks

Image supports the organization and manipulation of a series of 2D images as a 3D array called a stack. A stack contains a set of related 2D images, such as a movie loop or serial sections from a volume. The 2D images that make up a stack are called slices. You can step through the slices using the “>” and “<” keys. The number of the current slice and the total number of slices are displayed in the title bar. The Stacks menu contains commands that work with stacks. Windows to Stack converts a set of 2D images into a stack. Animate animates the images in a stack at a rate up to 100 frames per second. Reslice reconstructs a new 2D image perpendicular to the plane of the slices in a stack. Project does volume rendering, useful for visualizing the internal structures of 3D images. Commands not in the Stacks menu, except for Open, Save and Export, have no knowledge of stacks. For example, the Invert command only inverts the current slice, not the entire stack. Macros are available, however, for performing various operations on all the slices in a stack.

Memory Requirements

Opened images are stored entirely in the Mac’s internal memory, or RAM (Random Access Memory). An image requires one byte of RAM for each pixel plus a few thousand additional bytes for data structures containing information about the image, such as color tables and calibration. For example, a 512 X 512 image requires 262,144 bytes, or 262K, where 1K equals 1024 bytes. A 256 X 256 X 256 stack would require 16,777,216 bytes or 16MB. To see how much RAM an image uses, use the Get Info command, or pull down the Windows menu, which shows the size of all open images.

The number and size of images that *Image* can work with depends on *Image*’s RAM allocation. To check or change the allocation, select *Image*’s icon (a microscope) and use the Finder’s Get Info command. The default allocation is 2500K. To use all of *Image*’s features requires a RAM allocation at least three times the size of the largest image, plus the size of the program (about 300K). The extra RAM is used for a buffer that supports one level of Undo (the Undo Buffer) and a Clipboard buffer that supports copy and paste functions. The default size of these buffers is 300K. This can be changed using the Preferences command in the Options menu. You can find out how much memory is currently available for opening images by selecting “About NIH Image” from the Apple menu.

File Formats

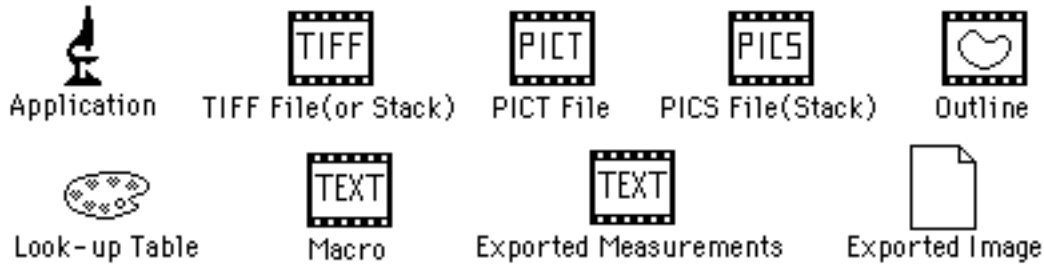


Image supports TIFF, PICT, PICS and MacPaint file formats. Stacks can be saved as either multiple image TIFF files or as a PICS file. The Import and Export commands allow images with arbitrary binary and tab-delimited text (spreadsheet) formats to be read and written. The Open All option of the Open and Import commands allows a series of images to be read automatically. Measurement results can be exported to a text file compatible with spreadsheet and statistical analysis programs.

Macros

Image can be extended using a Pascal-like macro programming language that allows users to customize and automate repetitive and frequent tasks. The easiest way to develop a custom macro is to modify one of the macros in the Macros folder distributed with *Image*. Macros are stored in text files that can be edited using *Image*'s built-in text editor. Using the Load Macros command causes the macros in the file to appear as commands at the bottom of the Special menu. The macro language is described in Appendix A. The description assumes some familiarity with the Pascal programming language. Additional help on macro writing, and other ways to extend *Image*, can be found in a separate document named "Inside Image".

Plug-ins

Image can also be extended using Photoshop compatible plug-ins. Acquisition plug-ins are used to support scanners or frame grabbers, or to read images in file formats that *Image* does not normally support. They are accessed using the Acquire sub-menu. Export plug-ins are used to output to printers that do not have a Chooser selectable driver or to save images in file formats not normally supported by *Image*. They are accessed using the Export sub-menu. Filter plug-ins perform filtering operations on images. They are accessed using the PlugIn Filters sub-menu. *Image* expects to find plug-ins in a folder named Plug-ins located in either the same folder as *Image* or in the System folder.

Video Capture

Using a frame grabber card, *Image* can digitize images from TV cameras, VCRs or video disks. Captured frames can be averaged or integrated. Integration can be done in RAM (using software), on-chip at video rates using Cohu or Dage CCD cameras, or on-board at video rates using the Scion AG-5. The Histogram command will display a continuously updated density histogram during "live" capture. The Make Movie captures a sequence of frames into a stack at rates up to 30 frames per second. The Capture Color command digitizes 24-bit color into a three slice stack. For alignment purposes, Show Paste Control (in the Windows menu) allows "Live" video to be superimposed over a previously captured image. Information about the four frame grabber cards directly supported by *Image* (the Scion LG-3, Scion AG-5, Scion VG-5, and the Data Translation Quick Capture) is provided in Appendix B. *Image* also supports QuickTime compatible video digitizers such as those built into "AV" Macs and the Power Mac 7500/7600/8500.

Image Enhancement

The Process menu provides filters for smoothing, sharpening, finding edges and reducing noise in images. The Convolve command uses user-defined filters that operate on up to 63 X 63 neighborhoods. The Binary sub-menu's Make Binary command converts grayscale images to images consisting of only black and white pixels and includes commands to process such images. Use the Arithmetic sub-menu to add or multiply an image (or selection) by a constant. Arithmetic operations between two images are done using the Image Math command or by using the Paste Control dialog box during paste operations.

Making Measurements



To make a manual area measurement, first outline a region of interest using the rectangular, oval, polygonal, or freehand selection tool. Then select the Measure command, which will compute the area, mean gray value, and the minimum and maximum gray value. Other measurements, such as perimeter, can be enabled using the Options command in the Analysis menu. Measure distances by making a straight, freehand or segmented line selection, and then using the measure command. (Note that the line selection tool uses a pop-up menu for selecting different line types.) Use the angle tool to measure angles. The cross hair tool counts objects, marks them, and records their X-Y coordinates. The wand tools automatically outlines structures isolated using thresholding. Results from the most recent measurement are displayed in the Info window. Use Show Results to display a table of results since the last time the Reset command was used.

The Analyze Particles command automatically counts and measures features of interest. This requires thresholding to discriminate objects of interest from surrounding background based on their gray values. *Image* has two thresholding methods. In thresholding mode (Threshold is checked in the Options menu), all pixels equal to or greater than a single threshold level are displayed in black, and all other pixels (the background) are displayed in white. In Density Slicing mode (Density Slice is checked), all pixels between a lower and upper threshold are highlighted in red. For both modes, you adjust threshold levels by dragging the LUT tool (the one with the double-headed arrow) in the LUT window. For successful thresholding, it may be necessary to use the Subtract Background command to remove the effects of uneven illumination.

Images can be calibrated to either spatial or density standards using the Set Scale and Calibrate commands respectively. To calibrate spatially, use the line selection tool to measure a known distance, then use Set Scale to specify a unit of measurement (e.g. millimeters) and enter the known distance. To calibrate to a set of density standards (e.g. an optical density step tablet), measure the mean gray level of each of the standards, then use the Calibrate command to enter the known values and specify the type of curve fit.

Editing



Image's tool palette contains several tools used for image editing and annotation. The pencil, brush, line, paint bucket and spray draw in the current foreground color (the color of the brush in the Toolbox window). The text tool draws text using the current font, size, style, and foreground color. Click on a color with the eyedropper tool to select a new foreground color. The eraser tool erases to the current background color (the color

of the eraser in the Toolbox window). Click on a color in the LUT window with the eraser to select a new background color.

Commands in the Edit menu operate on the current selection. Cut, Copy and Paste perform the standard Macintosh Clipboard operations. Fill fills the selection in the foreground color. Clear erases it to the background color. Draw Boundary draws a line around the selection. Scale and Rotate enlarges, shrinks and/or rotates the current rectangular selection. Commands are also available for flipping and rotating by 90°.

Text Windows

Image has a built-in text editor that can open and edit text files up to 32K in size. The following command know how to deal with text windows: New, Open, Close, Save, Save As, Print, Cut, Copy, Paste, Clear, Select All, Font, Size, Convolve (uses the kernel in the current text window), and Load Macros (loads the macros contained in the current text window). Also note that the Fill command changes to Find when a text window is active.

Look-up Tables

Each open image has a look-up table (LUT) associated with it. The LUT window displays the contents of the look-up table for the currently active image. The LUT is used to map, at video rates, pixels (in the range 0-255) to screen colors. Click and drag with the LUT tool in the LUT window to adjust brightness and contrast. Measured density values will not change since you are manipulating the look-up table, not the image's pixel values.

Various commands at the top of the Options menu allow you to invert the current LUT, to specify the number of gray levels or colors it uses, or to switch to one of several built-in color tables. LUTs are automatically stored with an image when it is saved to disk, or they can also be saved separately.



On-line Help

Balloon help is available in the Tools, Map and LUT windows, in menu commands, and in most dialog boxes. Balloon help is enabled by selecting Show Balloons from the Help (?) menu. The Tools, Map and LUT windows must be activated (by clicking on them) to get the help messages to appear.

NIH Image Mailing List

No telephone support is available for *Image*. The NIH *Image* mailing list, however, provides a way to get questions answered. It can also be used to contact other users, to keep abreast of new developments, and to get updates via e-mail. To subscribe, send an e-mail message containing the single line

subscribe nih-image <first name> <last name>

to listproc@soils.umn.edu. If you get tired of being bombarded with a dozen e-mail messages a day, you can remove yourself from the list by sending a message containing

the line "unsubscribe nih-image" to listproc@soils.umn.edu. There is also an option to receive messages as a once per day digest. All past messages are archived and available via e-mail, FTP and Gopher. Instructions on how to retrieve archived messages is in the welcome message sent at subscription time. The mailing list, which currently has about 1000 subscribers, is run by the Soil Science Department at the University of Minnesota. Information on other ways to get updates, and on how to report bugs, is given in Appendix I.

Citing NIH Image

Published research assisted by NIH Image should use a statement similar to the following in the materials and methods section "... analysis performed on a Macintosh <model> computer using the public domain NIH Image program (developed at the U.S. National Institutes of Health and available on the Internet at <http://rsb.info.nih.gov/nih-image/>)".


MENUS

File Menu

New...

Creates a new image or text window. Image windows are filled with the current background color. New image windows inherit the look-up table, as well as any spatial or density calibration, of the currently active window. The size of newly created images is limited by the amount of free RAM, which is displayed in the About NIH Image dialog box.

Text windows can be used to create macros accessed using the Load Macros command or convolution kernels to be used by the Convolve command. Text windows have a maximum size of 32K.

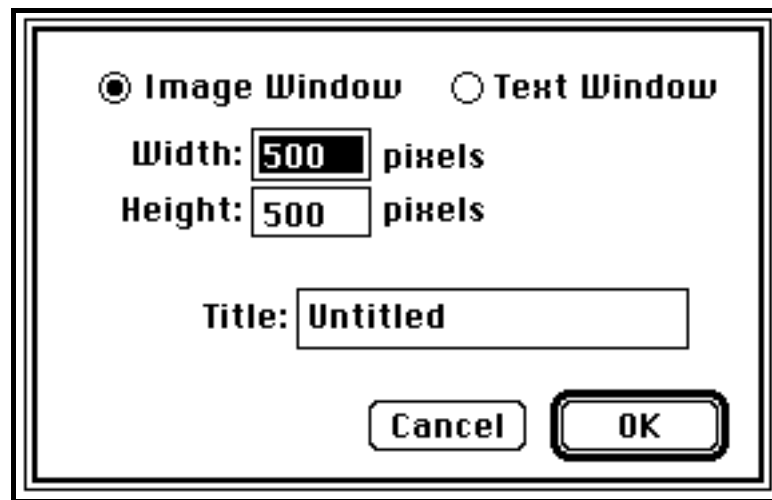


Open...

Use the Open command to load and display images (in TIFF, PICT, PICS and MacPaint format), text files, color look-up tables (LUTs) or region of interest outlines. The following file types are supported:

- 1) TIFF files created by *Image* and many other programs. *Image* will open (as a stack) a TIFF file containing multiple images, but the images must all have the same width and height. *Image* is unable to open bitmap (1-bit) or compressed TIFF files. TIFF files that were created on other systems, such as an IBM-PC, usually need to be opened using the Import command. 16-bit TIFF files can be opened using the Import command. 24-bit (RGB) TIFF files are opened into a 3-slice (red, green and blue) stack.
- 2) PICT files created by *Image* and numerous other Macintosh programs. Check *Keep LUT* in the Open dialog box (shown below) if you want to display the image using the current look-up table, instead of the one contained in the PICT file.
- 3) MacPaint documents. You will want to set *Undo Buffer Size* in Preferences to 405K if you regularly open large MacPaint drawings, since this is the memory required for a full size (576 x 720) MacPaint document.

- 4) PICS files created by *Image* and by many Macintosh animation programs.
- 4) QuickTime movies. The Open command will place images from a QuickTime movie into a new stack. Note, however, that the current LUT is always used. Therefore, before opening the movie, you must switch to the Grayscale LUT when opening a grayscale movie and to the System LUT when opening a color movie.
- 5) Look-up tables created by *Image* and by several other Macintosh programs, including PixelPaint, Canvas and UltraPaint. These programs have palette editors that can be used to create color tables for use by *Image*. The public domain PalEdit program from NCSA (<ftp://zippy.nimh.nih.gov/pub/nih-image/programs/ncsa/PalEdit.hqx>) can also be used to create color tables that can be opened by *Image*.
- 6) Selection outlines created using the Save As command in *Image*.
- 6) Text files, such as macros and convolution kernels, up to 32K in size.

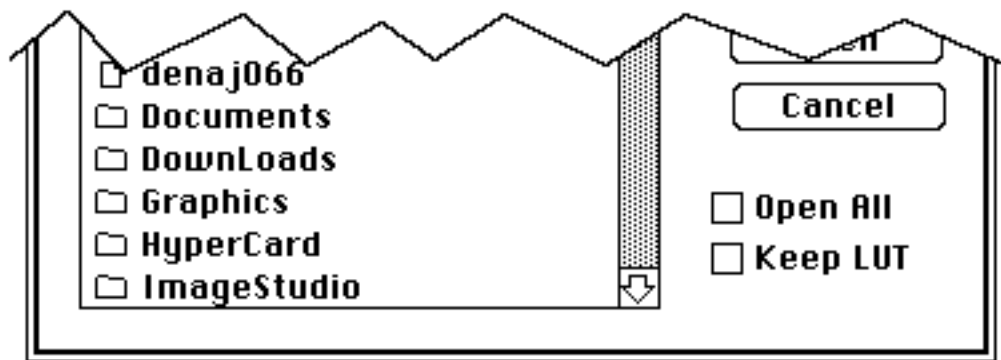


If you check *Open All*, select an image, and then click on the Open button, *Image* will open all the images in that folder, not just the one selected.

Check *Keep LUT* if you want the image to be displayed using the current video look-up table, rather than the one saved with the image. This feature can be used to combine PICT files with different palettes into a montage. When the PICT file is opened, and the image and screen LUTs are different, the pixel values are remapped to make the colors consistent.

Import...

Use this command to read image files created by non-Macintosh based systems, to display spreadsheet data (text) as an image, or to import raw color look-up tables. It presents the following dialog box that allows you to select the type of file to be imported.

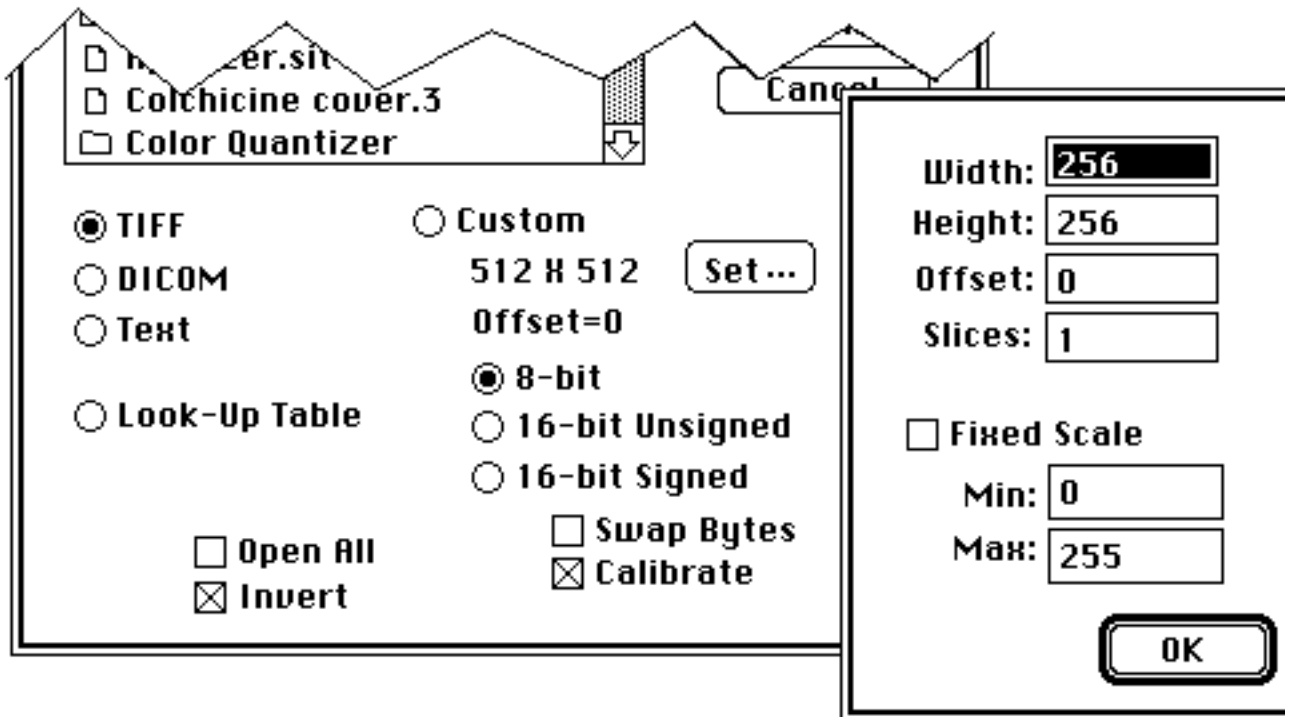

Select *TIFF* to open 8 and 16-bit TIFF files imported from other systems, such as an IBM PC. Once a 16-bit TIFF file has been imported, you can use Rescale (a.k.a. Revert to Saved) to find the optimum 16-bit to 8-bit mapping. 16-bit TIFF files that represent white as zero open inverted.

Select *DICOM* to import 16-bit files in the DICOM-3 (Digital Imaging and Communications in Medicine) and ACR-NEMA formats used in radiology. A DICOM dictionary is required to decode the DICOM or ACR-NEMA header. This dictionary is available from zippy.nimh.nih.gov, in the /pub/nih-image/documents directory. It must be located in the same folder as NIH Image or in the System folder. When opening a DICOM file, hold the option key down to get a full header dump. When using the "Open All" option, hold the shift key down to fix 16-bit to 8-bit scaling.

Select *Text* to import a two-dimensional array of numbers stored in tab-delimited text format, for example, a spreadsheet saved as "Text Only". Values do not have to be in the range 0-255, and may be in decimal or scientific format. By reading in the text file twice, *image* is able to determine the number of rows and columns, and to scale to 8-bits (1-254). Blank cells are assumed to have a value of zero. If *Fixed Scale* is checked then automatic scaling is disabled, values are scaled to 8-bits from the range *Min-Max*, values less than *Min* are set to *Min*, and values greater than *Max* are set to *Max*.

Select *Look-Up Table* to import a 768 byte binary LUT consisting of 256 consecutive red values, 256 consecutive green values, and 256 consecutive blue values. The values should be in the range 0-255.

Select *Custom* to open other types of 8-bit and 16-bit binary images. *Width* is the width of the image in pixels and *Height* is the number of lines in the image. For 16-bit images,

the maximum value that can be entered for *Width* is 4096. *Offset* specifies the number of bytes *Image* will skip before it starts reading the pixel data. For example, use an offset of 512 to skip over a 512 byte file header. Set *Slices* to more than one to import 3D data sets such as multi-slice volumes from medical scanners

Image computes the minimum and maximum pixel values of 16-bit images and uses this information to linearly scale to 8-bits (1-254). Check *Swap Bytes* when importing 16-bit images from “little-endian” systems, such as an IBM-PC or VAX. If *Calibrate* is checked *Image* automatically sets up a linear density calibration function to provide an approximation of the original 16-bit pixel values. The approximated values should not vary from the original 16-bit values by more than $(\text{Max}-\text{Min})/254$, where Min and Max are the minimum and maximum 16-bit values. If *Fixed Scale* is checked then automatic scaling is disabled and the 16-bit data is linearly scaled from *Min-Max* to 1-254. You can redo the 16-bit to 8-bit scaling at any time using the Rescale command. Note that the *Calibrate* feature is disabled when importing a 16-bit stack and *Fixed Scale* is not checked.

Use the Import command to scale 16-bit images from medical scanners to the 8-bit format required by *Image*. For example, to import raw MRI scans from a GE SIGNA scanner, set *width* and *height* to 256, select *16-bit Signed*, and set *Offset* to 14336. The macro “Import GE Signa Files” (in the file Stacks) will automatically import a series of raw GE SIGNA files.

Check *Open All* to import all of the images in a folder. The images must all have the same width, height, etc. *Open All* does not work with imported text files and look-up tables.

Check *Invert* to invert imported 8-bit images.

Close

Closes the currently active image, text, Plot, or Histogram window, i.e., the one with the highlighted title bar. Hold down the option key to close all currently open image windows. Typing option-command-w or option-clicking in the close box of an image window will also close all the image windows.


Save

Resaves the currently active image or text window to disk. You will be prompted for a name in the case of an image newly created using New, Duplicate or Start Capturing. Files are resaved in their original format. In other words, TIFF files are resaved in TIFF format, and PICT files are resaved in PICT format.

Hold down the option key (notice how Save changes to Save All) to save all currently open image windows.

Save As...

Allows you to save the currently active image (or rectangular selection) in TIFF, PICT or MacPaint) format, to save a stack in TIFF or PICS format, or to save the current look-up table, selection outline, or text window.

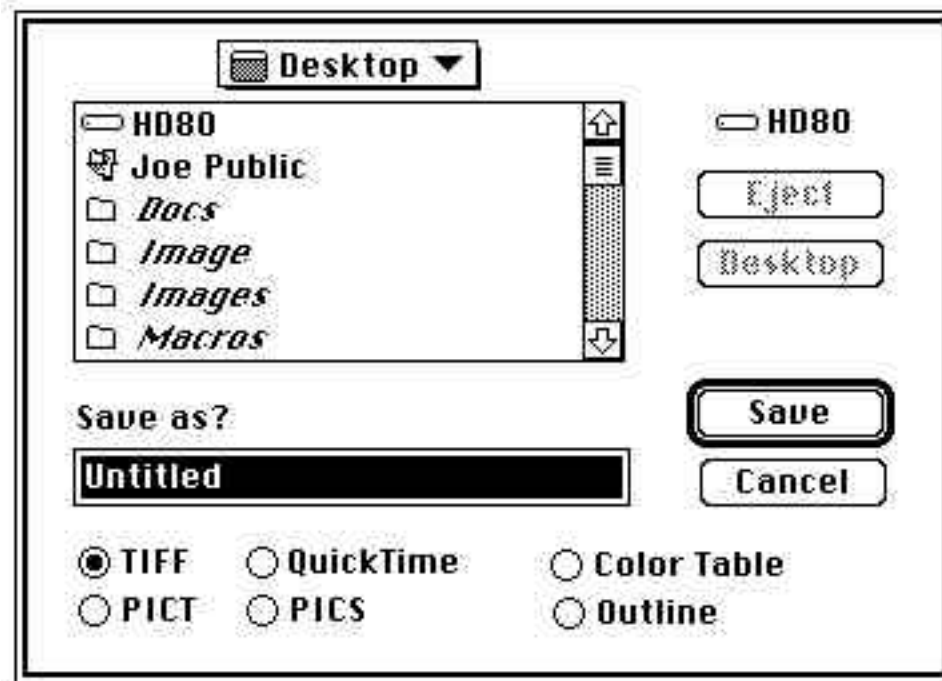

TIFF

Saves the currently active image or stack to a file in uncompressed 8-bit TIFF format. You will be asked to enter a name for the new file. The menu command changes to Save Selection As if a rectangular selection is active, allowing you to save a subsection of the image. Note that the ability to save selections does not work for stacks, but there are macros available to get around this limitation. TIFF is the default file format in *Image*, and is usually the best format for saving digitized or scanned images.

PICT

Saves the currently active image to a PICT file. PICT files can be exported to many other Mac programs, including Canvas, Photoshop, SuperPaint and MacDraw. Because they are compressed, PICT files also have the advantage of being more compact if the image contains large homogeneous regions, which is typical of computer generated images. Unfortunately, the run length compression scheme used with PICT files is ineffective with most scanned images.

You should avoid PICT files if you are doing quantitative image analysis. The Mac imaging model is most concerned with the color of each pixel, and does not care so much about the actual pixel value. Thus PICT files cannot guarantee that the pixel values remain fixed. TIFF is a machine and system independent image standard that avoids this problem.

QuickTime

Saves the currently active stack to disk as a QuickTime movie. A dialog

box allows you to select the compression scheme and image quality level.

PICS

Saves the currently active stack to disk in PICS format, a file format supported by many Mac animation programs. PICS files are compressed using the same run length encoding scheme used for PICT files. Stacks containing areas of uniform color or gray value saved in PICS format will be smaller than stacks saved in TIFF format. Use the “Movie Player” utility that comes with QuickTime to convert PICS files into QuickTime movies.

Note that the stack's spatial and density calibration data are not saved as part of the PICS file.

Color Table


Saves the current look-up table (LUT) as a separate file.

Outline

Saves the X-Y coordinates of the current selection outline. X-Y coordinates of curved line selections, and selections that have been edited, cannot be saved.

Export...

Exports images, look-up tables, measurement results, density profile plot values, or histogram values to disk for use with programs other than *Image*.

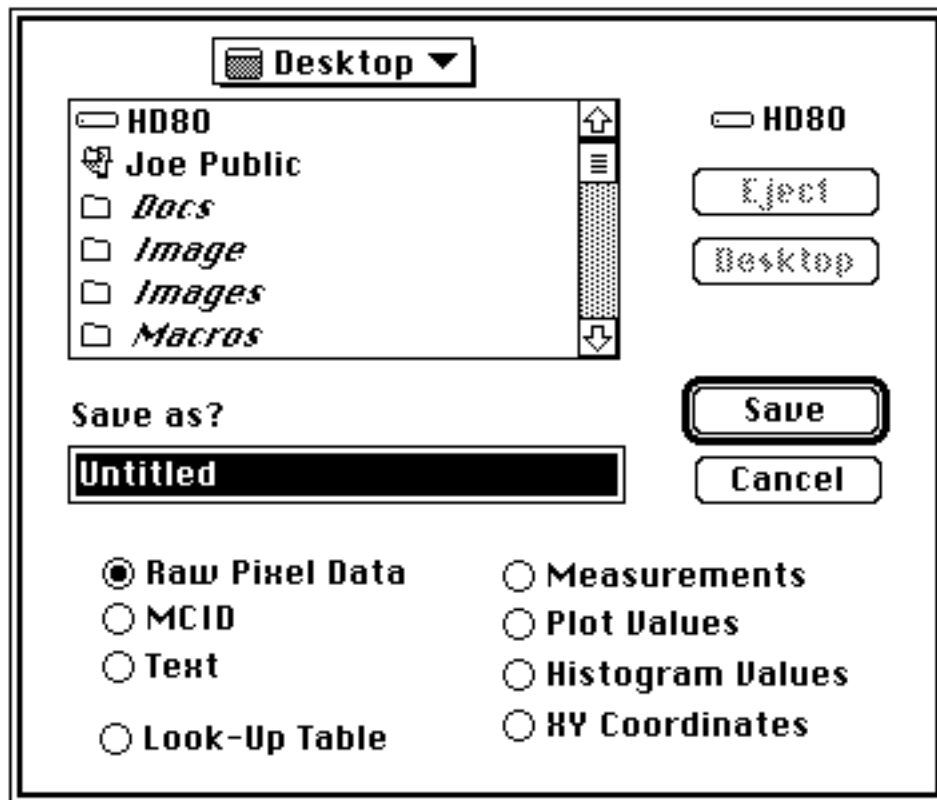

Raw Pixel Data

Exports the current image (or selection) as binary pixel data, in row order, one byte per pixel, without a header.

MCID

Exports the current image (or selection) as an MCID file. MCID files have the same format as raw pixel data files, but are preceded by a four byte header which contains the width (minus one) and height (minus one), stored as two 16-bit numbers in Intel byte order.

Text

Exports the current image (or rectangular selection) as a tab-delimited, spreadsheet compatible text file consisting of uncalibrated pixel values.

Look-Up Table

Saves the current video Look-Up Table (LUT) as a 768 byte binary file consisting of 256 red values, 256 green values, and 256 blue values.

Measurements

Exports the current measurements to a tab-delimited text file compatible with spreadsheet and statistical analysis programs. Use the Analyze/Options dialog box to specify which measurements are recorded and/or exported. This option is also used to export angle measurements made with the angle tool, and X-Y coordinate measurements made with the cross hair tool. Measurements can also be exported by copying them to the Clipboard.

Plot Values

Exports the data values representing the most recent density profile to a text file. If you have just used the Calibrate command to do density calibration, and are viewing the density calibration plot, then this option exports the 256 Y-values of the current calibration plot.

Histogram Values

Exports the 256 gray level counts from the most recent histogram to a text file.

X-Y Coordinates

Exports the X-Y coordinates of the current selection outline as a two column, tab-delimited text file. X-Y coordinates of rectangular and oval selections, and selections that have been edited, can not be exported.

Record Preferences

Saves the current state of the following *Image* program parameters.

- Foreground color
- Background color
- Brush size
- Airbrush diameter
- Color Look-Up Table mode
- Color palette position and width
- Text attributes, including font, size, style and justification
- Extra colors
- Invert Video switch
- Measurement Options
- Profile Plot Options
- Frames averaged by Average Frames command
- Size of image created by New command
- Undo (and Clipboard) buffer size
- Frame grabber input channel

- Import command options
- Most options in the Preferences dialog box

Settings are saved in a file named 'Image Prefs' in the Preferences folder inside the System folder. You can revert to the default settings by deleting copies of this file in either the System or Preferences folders and restarting *Image*.

You can startup *Image* with customized settings by double-clicking on a copy of 'Image Prefs'. In this case, *Image* will use the settings in the copy. Note, however, that Record Preferences always saves the settings in the Preferences folder.

Revert to Saved

Reverts to the most recently saved version of the current image, effectively undoing all changes made since the last Save command. Reverting does not currently work with stacks or imported text files. For imported 16-bit images, this command changes to Rescale, described below.

Rescale

Replaces Revert to Saved whenever an imported 16-bit image or imported 16-bit TIFF file is active. This command linearly scales the 16-bit data (on disk) from the range *Min-Max* to 1-254, where *Min* and *Max* are determined by using the controls in the Map window or by using the LUT tool. 16-bit pixels with values less than *Min* are set to 1 and 16-bit pixels with values greater than *Max* are set to 254. The image's absolute minimum and maximum pixel values are used if the LUT has not been altered.


The *Highlight Saturated Pixels* option in the Preferences dialog box can be used to determine locations within the image where density measurements may be invalid due to clipping at *Min* or *Max*. It causes pixels that were less than or equal to *Min* to be displayed in yellow and pixels that were greater than or equal to *Max* to be displayed in red.

Duplicate

Creates a new window displaying a copy of the current image, or of the current selection if only part of the image is selected. The newly created image inherits the look-up table, plus any spatial or density calibration, of the image being duplicated.

Get Info

Displays an image window, such as the one below, giving information about the currently active image and about the status of the system.

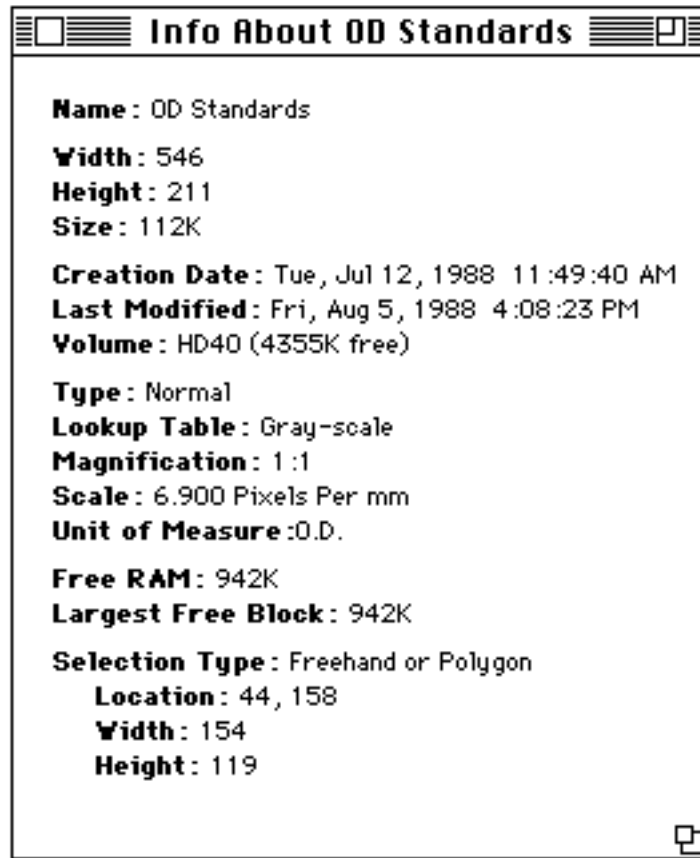

Acquire

Use this sub-menu to access Photoshop compatible acquisition plug-ins. The plug-ins must be stored in a folder named "Plug-ins" located either in the same folder as *Image* or in the System Folder. Using plug-ins, *Image* can acquire 8-bit grayscale, 8-bit indexed color, and 24-bit color images. 24-bit color images are stored in three slice stacks and displayed using 8-bit indexed color, similar to the way the Capture Color command works. Several of the plug-in listed below, including "Plug-in Digitizer" for use with the AV Macs, are available from the Download section of the NIH Image Web site (<http://rsb.info.nih.gov/nih-image/>).

The following plug-ins have been reported to work with *Image*:

- Agfa Arcus plus color scanner
- Agfa PhotoScan
- Apple Color OneScanner 600/27
- Canon CLC 500 Color Laser Copier with Electronics for Imaging interface
- Computer Eyes /RT Pro
- ComputerEyes SCSI frame grabber
- Connectix QuickCam using "Plug-in Digitizer"
- Datacopy 730GS scanner
- Ektron 1400 series camera (Eikonix 4096x4096 CCD)
- Epson GT-6000 scanner
- Graphics Unlimited Kingfisher frame grabber (grayscale only)

Howtek II slide scanner
La Cie SilverScanner (8-bit grayscale, 8-bit color, 24-bit color)
Kodak DCS-100 and DCS-200 digital cameras (grayscale and 24-bit color)
Kodak Photo CD Image Browser
Kodak RFS2035 scanner
MacVision video capture
MIC systems DVA 4000 frame grabber
Microtek Scanmaker II flatbed scanner
Microtek Scanmaker 35t slide scanner
MirrorScan 600 Plus
Neotech Image Grabber
Perceptics PixelBuffer, MegaGrabber and PixelHR-24 frame grabbers
Plug-in Digitizer (supports AV Macs and other QuickTime digitizers)
Polaroid SprintScan 35mm slide scanner
Precision Digital Images (PDI) frame grabber cards
QuickImage 24 plug-in
Radius VideoVision video grabber
RasterOps Video Capture V1.51 with 24STV and 24XLTV cards
RealTech Scan 800 (Tamarack) flatbed scanner
Scantastic plug-in with Apple Color One scanner
Scion LG-3 frame grabber
Sharp JX-325 scanner
Truvel scanner
Umax UC630 scanner
VideoSpigot card with “Plug-in Digitizer” and SpigotVDIG 1.0β3
Voyager decompression plug-in

Export

Use this sub-menu to access Photoshop compatible export plug-ins. Export plug-ins must be stored in a folder named “Plug-ins” located either in the same folder as *Image* or in the System Folder. Two export plug-ins have been successfully tested with *Image*: a plug-in that supports the Scion TV-3 video output card (used to drive a video printer) and the PhaserPrint plug-in for the Tektronix Phaser IIsd dye sublimation printer.

Page Setup...

Lets you specify printing orientation (portrait or landscape) and scale (25% to 400%). The quality of density profile and calibration plots will be better if you leave the scale set at 100% and enlarge the plot window before printing the plot. Hold down the option key while selecting Page Setup to display a dialog box offering several custom grayscale halftoning options.

Print...

Print images, text, plots, histograms, and measurement results. What gets printed is determined by which window is currently active. The print command changes (e.g., *Print Image*, *Print Plot*, etc.) depending on what kind of window is currently active.

Print Image - Prints the currently active image. Images larger than the printer page (normally 552 x 730 pixels) are automatically scaled to fit the page.

Print Plot - Prints the current density profile or calibration plot. The size of the printed plot is proportional to the size of the plot window, which can be made larger using the “grow box” in the lower right corner.

Print Histogram - Prints the contents of the histogram window.

Print Measurements - Prints the results of measurements made with the Measure command, or with the angle or the cross hair tools. This option is enabled whenever you have recorded one or more measurements and either the Info or Results window is active.

Print Text - Prints the contents of the current text window. Text is always printed using 9-point Monaco.

Quit

Closes all image windows after asking, in each case, whether changes made during the session should be saved, then quits to the Finder. If measurements have been made, but not saved, a dialog box will be displayed notifying you of that fact.

Edit Menu

Undo

Reverses the effect of the last editing or filtering operation. When using the Measure command, it deletes the most recent measurements.

Cut

Copies the contents of the current image selection to the Clipboard and fills it with the current background color. For text windows, the currently selected text is copied to the Clipboard and the selection is deleted.

Copy

Places a copy of the contents of the current image selection on the Clipboard.

Copy will also copy the entire contents of the LUT, Plot or Histogram window to the Clipboard if one of these is the active window. If the Plot or Histogram window is active then both the data values and graphics will be copied to the Clipboard, allowing you to transfer plot and histogram data to other programs for plotting or statistical analysis. For text windows, the currently selected text is copied to the Clipboard.

Use the eyedropper tool to select a color to be copied from the LUT window to the Clipboard. This color can then be pasted back into another location in the LUT window. Copy and paste of LUT colors works best with look-up tables that have 32 or fewer colors.

After using the Measure command, Copy changes to Copy Measurement, allowing you to use the command-c keyboard shortcut to copy measurements to the clipboard.

Paste

Displays the contents of the Clipboard in the currently active image window. The pasted object is automatically selected, allowing you to move it by clicking and dragging. With rectangular objects, you can click and drag on the resize handle in the lower left corner to expand or contract the selection.

You can also use the paste command to paste colors copied with the eyedropper tool back into the LUT window or to paste text into a text window.

If you make a rectangular selection in the Camera window, copy it to the Clipboard, paste into another window (without deleting the Camera window), and select *Live Paste* in the Paste Control window, then pasting will be “live”. This feature, along with the ability to select different transfer modes, allows the image currently being digitized to be aligned with a previously digitized image.

Text as well as images can be pasted into Image windows. For example, you can copy measurement results to the Clipboard, then paste them into an image window. The text will be displayed inside the current rectangular selection, or, if there is no selection, into a default selection. Use sub-menus in the Options menu to select font, size, style, etc. If the text doesn't fit within the selection, Undo, switch to a different font or size (or make a different selection), and try pasting again. Text background is always erased to white, the “No Background” option in the Style menu is ignored. This is not a problem, however, since you can select the Or transfer mode in the Paste Control window to paste text transparently. When pasting text in the Or mode, you can click in the LUT window to change color or gray level.

Clear

Erases the current image selection to the current background color. The Delete key is a handy shortcut for this command. The background color is set by clicking with the eraser tool in the LUT window. The color of the eraser indicates the current background color. Deletes the current selection if the current window is a text window.

Fill (or Find)

Fills the current region or line selection with the current foreground color. You can change the color after the selection has been filled by clicking in the LUT window. The entire image window is filled if no selection is active. The foreground color is set by clicking with the eyedropper tool in the LUT window or in the active image window. The color of the brush in the tool palette indicates the current foreground color.

The Fill command changes to “Find” whenever a text window is active. Type option-command-f to repeatedly search for the same string. You can move the cursor to a specified line by entering a search string in the form ‘#n’, where n is a line number. As an example, to go to line 100, enter “#100”.

Invert

Inverts the contents of the current selection, or the entire image if no selection is active.

Draw Boundary

Outlines the current selection (including line selections) using the current foreground color and line width. Both the color and line width can be dynamically changed as long as the selection is still active.

Draw Scale

Draws a grayscale or color ramp within the current rectangular selection. Use this command to create density calibration scales. Use Flip Vertical or Flip Horizontal to invert a newly created scale. The “Draw Calibration Bar” macro in “Plotting Macros” will draw labeled calibration scales.

Select All

This command is equivalent to using the rectangular selection tool to select the entire image, including portions that may be offscreen. Once the selection has been made,

Select All changes to Deselect All, allowing you to deactivate the selection. You can also deactivate the selection by clicking on any tool other than one of the selection tools, the hand tool, or the magnifying glass. For text windows, selects all the text.

Deselect

Deletes the current selection.

Rotate Left

Rotates the contents of the current rectangular selection counter-clockwise 90°. Holding the option key down causes the original object to be erased before being replaced by the rotated version. The entire window is rotated if there is no selection.

Rotate Right

Rotates the contents of the current rectangular selection clockwise 90°. Hold the option key down to erase before rotating. The entire window is rotated if there is no selection.

Flip Horizontal

Flips the current rectangular selection horizontally around a vertical line through its center. The entire image is flipped horizontally if no selection is in effect.

Flip Vertical

Flips the current rectangular selection upside down. Flips entire image if there is no selection.

Scale and Rotate...

Reduces or enlarges the contents of the current rectangular selection. If *Nearest Neighbor* is checked, scaling is done quickly using pixel replication, but the resulting image may not be smooth. Check *Bilinear* for smoother, but slower, interpolated magnification. Note that bilinear interpolation will probably not work correctly with true color images because of discontinuities in the LUT. If *Angle* is non-zero, the contents of the selection are also rotated the specified number of degrees. Rotation will be clockwise for positive angles and counter-clockwise for negative.

Horizontal Scale (0.05-25): 1.00

Vertical Scale (0.05-25): 1.00

Angle (-180° to 180°): 0.00

Interpolation Method:

Nearest Neighbor

Bilinear

Create New Window

OK Cancel

Show Clipboard

Opens a new window and displays the image or text currently on the Clipboard. This window, which has the title "Clipboard", will not be updated if the Clipboard later changes.

Options Menu

Grayscale


Loads the default grayscale look-up table. The contrast and brightness of grayscale images can be adjusted by direct manipulation of the transformation function displayed in the Map window. This function can be applied to the pixel data in memory, thereby making contrast and brightness changes permanent, using the Apply LUT command. The Grayscale command will not convert 8-bit true color (as opposed to pseudocolor) images to grayscale. Instead, use the Convert to Grayscale variation of the Apply LUT command.

Color Tables

Image currently supports nine built-in color look-up tables. In addition, the Open command can be used to load color tables stored in the Look-up Tables folder distributed with *Image*. You can use the LUT tool (the double headed arrow) to both stretch (changing contrast) and shift the colors within the color table. The colors in a color table can be edited by double clicking on them in the LUT window using the eyedropper tool, although this works best with tables containing only a few colors, around 20 or less.

LUT Options...

Allows you to specify the number of distinct colors or shades of gray in the current look-up table, to reserve up to six entries for annotation and graphics, or to invert the look-up table.

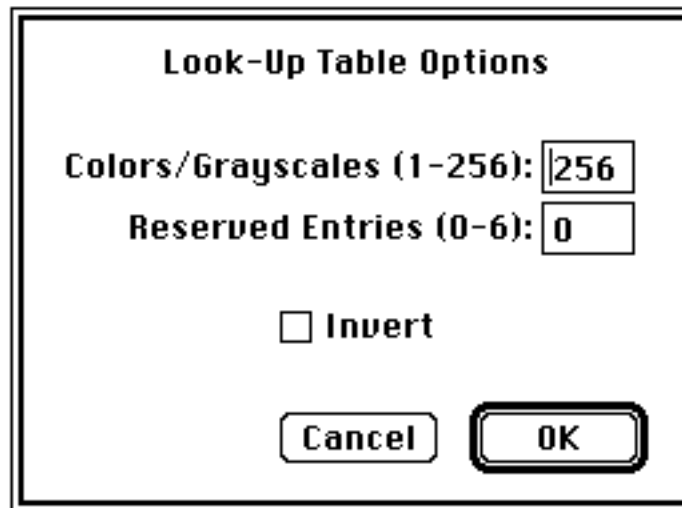

Colors/Grayscales is the number of colors or shades of gray used in the current look-up table. When increasing the number of colors, the required new colors are created by interpolating between existing colors. For example, if the current color table consists of the two colors, white and black, setting the number of colors to 64 creates a grayscale palette with 64 shades of gray.

Reserved Entries allows you to allocate up to six entries in the look-up table for colors that are never altered. For example, you could reserve one entry to add color annotation to a grayscale picture. Any extra colors are displayed at the bottom of the LUT window, allowing you to edit them by double-clicking with the eyedropper tool.


Check *Invert* and the current look-table will be inverted when you click on *OK*. Unlike the *Invert* command in the File Menu, pixels values are not altered, only the way the image is displayed on the screen. The first (0) and last (255) entries in the LUT, which are always white and black respectively, are never inverted since these entries are used for drawing the menu bar, title bars, dialog boxes, etc.

Font, Size, Style

Text handling in *Image* is similar to Macintosh painting programs such as MacPaint, SuperPaint, and PixelPaint, with the exception that you can only change the characteristics, such as size and style, of the last line entered. You can change the color (by clicking with the text tool in the LUT window), size, typeface, style and justification of the current line of text after the text has been entered. The background color can be changed by option-clicking in the LUT window.

Preferences...

Displays the dialog box shown below, allowing you to change various parameters used by *Image*.

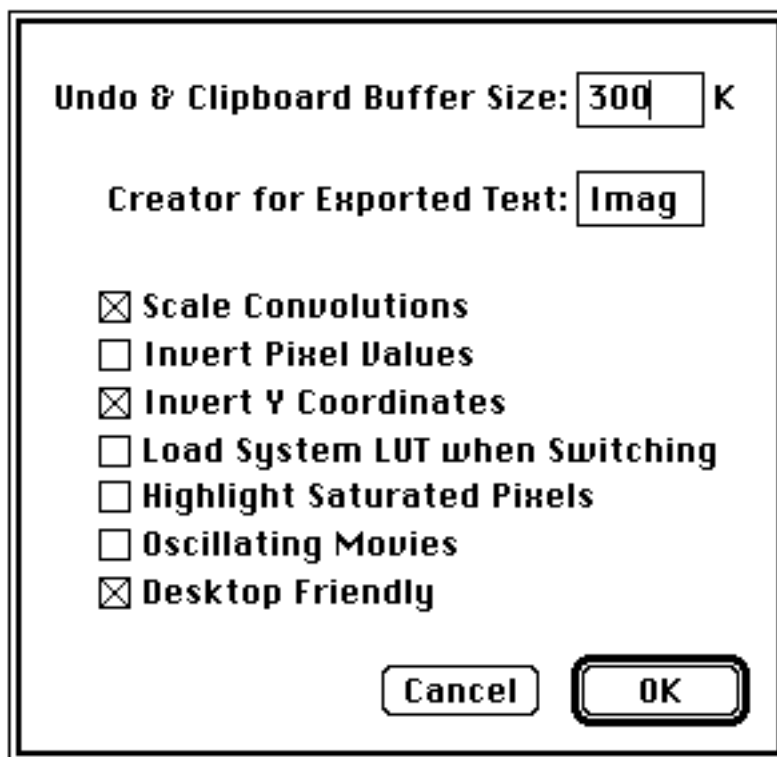

Undo & Clipboard Buffer Size allows you to change the size of the two internal image buffers used by *Image*. You must quit, and restart *Image* before buffer size changes take effect. Note that increasing the size of these buffers decreases the amount of RAM available for opened images. For example, increasing the size from 300K to 1000K decreases the RAM available for images by 1400K. You can get around this problem, assuming your computer has enough RAM, by increasing *Image*'s memory allocation using the Finder's Get Info command.

Creator for Exported Text specifies the four character creator code *Image* uses for exported text files. This code determines which application is launched when you double-

click on an exported text file (e.g., measurements, profile plot data, XY coordinates). Use 'Imag' for Image, 'XCEL' for Excel and 'QKPT' for KaleidaGraph.

Pixel values resulting from filtering operations done using the Convolve command will be scaled to 8-bits if *Scale Convolutions* is checked, otherwise, they are clipped at 0 and 255.

Checking *Invert Pixel Values* sets up an inverting linear density calibration function for all non-calibrated open images. This causes gray values displayed in the Info and Results windows, in density profile plots, and in histograms, to be inverted. Subsequent image windows created using New, Start Capturing, and the Import of 8-bit images, will inherit this inverting calibration function.

Check *Invert Y Coordinates* if you want the X-Y origin to be the lower left corner of the image window, otherwise it will be in the upper left corner.

Checking *Load System LUT When Switching* causes *Image* to load the Apple default color palette before switching to other application. This may correct color display problems experienced with other applications, such as Microsoft Excel.

Checking *Highlight Saturated Pixels* causes pixels that are less than or equal to 1 to be displayed as yellow and pixels that are greater than or equal to 254 to be displayed in red.

Check *Oscillating Movies* if you want the Animate command in the Stacks menu to run movies in auto-reversing mode (1234321234), as opposed to the default wrap-around mode (123412341234).

Checking *Desktop Friendly* eliminates the annoying desktop color changes that occur when the monitor is set to 256 colors but it also reduces the number of colors available for displaying images.

The status of these settings can be made permanent using the Record Preferences command in the File menu.

Profile Plot Options...

Displays a dialog box that allows you to set various options relating to the density profile plots generated by the profile plot tool and the Plot Profile command. If *Fixed Y-Axis Scale* is checked, the y-axis range is fixed and the specified minimum and maximum are used, otherwise, plots are scaled based on the minimum and maximum gray values. *Fixed Plot Size* allows you to specify the size of the plot window. This is useful when pasting a series of plots that you want to all be the same size into an image window. *Profile Plot Line Width* specifies the line selection width. This controls the amount of pixel averaging done when using the profile plotting tool or the Plot Profile command when used with a line selection. All of these settings can be saved using the Record Preferences command.

The dialog box contains the following controls:

- Fixed Y-Axis Scale**
 - Min:
 - Max:
- Fixed Plot Size**
 - Width:
 - Height:
- Profile Plot Line Width:
- Line Plot** **Invert**
- Scatter Plot** **Labels**
-

Scale to Fit Window

Switches the currently active image window in and out of *Scale to Fit* mode. If checked, the window is in the *Scale To Fit* mode, and you can use the “grow box”, in the lower right corner, to rescale the image. Clicking in the “zoom box” at the right end of the title bar will switch that window to *Scale to Fit* mode and scale the window (and image) to fit the screen. In *Scale to Fit* mode, you are not allowed to change the aspect ratio of an image and the magnifying glass and grabber tools do not work. When in *Scale to Fit* mode, the current magnification is shown in the title bar.

Threshold

Enables and disables thresholding mode. Thresholding is used to segment an image into objects of interest and background on the bases of gray level. When thresholding is enabled, objects are displayed in black and background is white. The threshold is

automatically set based on an analysis of the histogram of the current selection, or of the entire image if there is no selection. Background pixels will be ignored when making area and gray value measurements using the Measure and Analyze Particles commands. To vary the threshold, use the LUT tool and click and drag near the black/white boundary in the LUT window. As you vary the threshold, its value is continuously displayed in the Info window.

Use the Make Binary command to set all thresholded pixels to black and all background pixels to white. Use the wand tool to outline thresholded objects, and Analyze Particles to automatically measure objects segmented by thresholding. As a shortcut, you can enable thresholding by clicking on the stair step icon in the Map window. This shortcut, however, always sets the threshold to 128.

Density Slice

Enables and disables density slicing. Like thresholding, density slicing allows objects to be segmented on the basis of gray level. When density slicing is enabled, objects are highlighted in red and background pixels are left unchanged. As in thresholding, background pixels are ignored when making area and density measurements. Click and drag in the LUT window using the LUT tool to vary the size and location of the density slice. As you manipulate the density slice, its upper and lower limits are continuously displayed in the Info window.

In the LUT window, you can double click within the density slice using the eyedropper tool to change the highlighting color to something other than the default red. As a shortcut, you can enable density slicing by double clicking on either the wand or LUT tools.

To prevent desktop items, such as the menu bar, from changing color, white (0) and black (255) entries in the LUT are never included within the density slice. Therefore, thresholding usually works better for discriminating objects containing black pixels.

Use the Apply LUT command to set all pixels which are within the density slice to the foreground color (or leave them unchanged) and all other pixels to the background color (or leave them unchanged). The Make Binary command will set pixels within the density slice to black, and all other pixels to white.

Propagate

The commands in this sub-menu allow you to copy various attributes of one image to all other currently open images.

Look-Up Table - Copies the current video look-up table to all open image windows. This provides a way to transfer contrast, brightness or pseudocolor changes made to one image in a set (e.g., a series of MRI scans), to all other images in the set.

Spatial Calibration - The spatial calibration (e.g., pixels/centimeter) and unit of measurement associated with the currently active image are transferred to all other open images. Note that spatially calibrated images have a black diamond in the title bar following the name.

Density Calibration - The density calibration associated with the currently active image is transferred to all other open images. Note that density calibrated images have a white diamond in the title bar following the name.

Process Menu

Filtering Functions (Smooth, Sharpen, etc.)

These filters, with the exception of Reduce Noise and Dither, are implemented using 3 x 3 spatial convolutions, where the value of each pixel in the selection is replaced with the weighted average of its 3 x 3 neighborhood. They are not limited to rectangular selections. The entire image is filtered if no selection is active. They do not work correctly with 8-bit true color images. They can be aborted by typing command-period.

The 3 x 3 tables shown below are the coefficients (weighting factors) for the filters. The popularity of plus and minus one in these tables is due to the fact that multiplication by one is very efficient, i.e., it is unnecessary.

Smooth - Blurs (softens) the selected area. It can be used to reduce noise in an image. Hold the option key down for increased blurring.

1 1 1	1 1 1 (If option key down)
1 4 1	1 1 1
1 1 1	1 1 1

Sharpen - Increases contrast and accentuates detail in the selection, but may also accentuate noise. To minimize this problem, you can Smooth and/or *Reduce Noise* before using Sharpen. Hold the option key down for increased sharpening.

-1 -1 -1	-1 -1 -1 (If option key down)
-1 12 -1	-1 9 -1
-1 -1 -1	-1 -1 -1

Shadow - Produces a shadow effect, with the light appearing to come from a direction specified in a dialog box. Three of the kernels used are shown below.


West	North West	North
1 0 -1	2 1 0	1 2 1
2 1 -2	1 1 -1	0 1 0
1 0 -1	0 -1 -2	-1 -2 -1

Find Edges - Performs a Sobel edge detection operation. Two convolutions are done using the kernels shown below, generating vertical and horizontal derivatives. The results are then combined by using the square root of the sum of the squares of the two derivatives.

1 2 1	1 0 -1
0 0 0	2 0 -2
-1 -2 -1	0 0 0

Rank Filters

These filters rank (sort) the nine pixels in each 3 x 3 neighborhood and replace the center pixel with the median, minimum (lightest), or maximum (darkest) value. Use the Median filter to reduce noise. The Minimum filter erodes (shrinks) objects in grayscale images similar to the way binary erosion shrinks objects in binary images. The Maximum filter dilates (expands) objects in grayscale images similar to the way binary dilation expands objects in binary images.

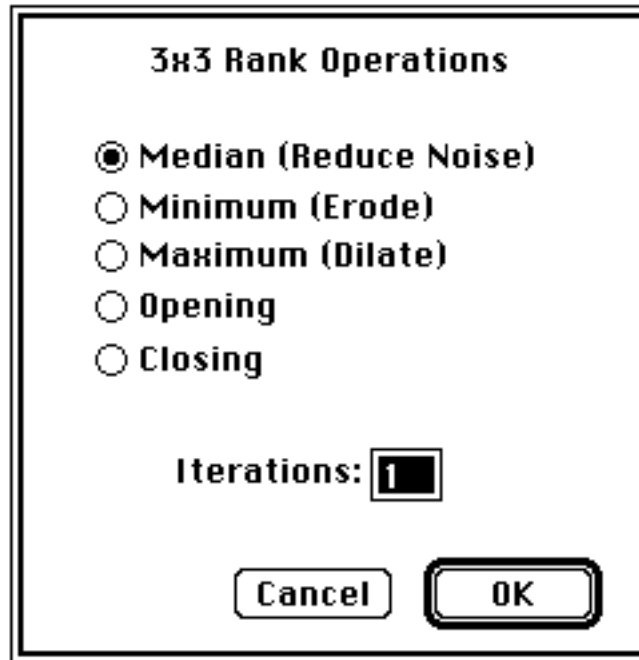

Select *Median* and each pixel will be replaced with the median value in its 3 x 3 neighborhood. This is a time consuming operation because, for each pixel in the selection, the nine pixels in the 3x3 neighborhood must be sorted and the center pixel replaced with the median value (the fifth). To demonstrate the effectiveness of median filtering, try removing random spot noise generated using the spray can tool with the diameter set to 50 or greater.

Select *Minimum* and each pixel is replaced with the minimum value in the 3 x 3 neighborhood. With binary images, this produces the same result as the Binary/Erode filter with count set to one.

Select *Maximum* and each pixel is replaced with the maximum value in the 3 x 3 neighborhood. With binary images, this produces the same result as the Binary/Dilate filter with count set to one.

Select *Opening* and *Iterations* erosion operations are performed, followed by *Iterations* dilations. Select *Closing* and *Iterations* dilation operations are performed, followed by *Iterations* erosions.

Dither

Uses the Floyd-Steinberg error diffusion algorithm to convert the current selection to a binary (black and white only) image. Dithering can be useful for exporting pictures to applications such as MacPaint or MacDraw that can only accept binary images. Dithering can also be used for printing on the ImageWriter, or other non-PostScript printers. The quality of dithered images can frequently be improved by increasing contrast using the controls in the Map window before doing the dithering. True color images should be converted to grayscale by using the Convert to Grayscale variation of the Apply LUT command before being dithered.

Convolve

Does spatial convolutions using kernels read from a text file or text window. Kernels can be up to 63 x 63 in size. Output pixel values are clipped to 8-bits unless *Scale Convolutions* is checked in the Preferences dialog box. Use *Image's* built-in text editor to create or examine these kernels.

As an example, use the New command to open a blank text window, enter (or paste) the following kernel, then use the Convolve command to try it out.

```
0 0 0 -1 -1 -1 0 0 0
0 -1 -1 -3 -3 -3 -1 -1 0
0 -1 -3 -3 -1 -3 -3 -1 0
-1 -3 -3 6 13 6 -3 -3 -1
-1 -3 -1 13 24 13 -1 -3 -1
-1 -3 -3 6 13 6 -3 -3 -1
0 -1 -3 -3 -1 -3 -3 -1 0
0 -1 -1 -3 -3 -3 -1 -1 0
0 0 0 -1 -1 -1 0 0 0
```

This is a 9 x 9 “Mexican hat” filter which will do both smoothing and edge detection in one operation. Each line should be terminated with a carriage return, and the coefficients should be separated by one or more spaces, or a tab. Note that kernels, such as this one, can be opened and displayed as an image using the Import (Text) command, scaled to a reasonable size using Scale and Rotate, and plotted using the Surface Plot command.

Plug-in Filters

Use this sub-menu to run Photoshop compatible filter plug-ins. The plug-ins must be stored in a folder named “Plug-ins” located either in the same folder as *Image* or in the System Folder.

Binary

The commands in this sub-menu are used to convert grayscale images to binary (i.e. black and white only), and to process these binary images. Note that Erode and Dilate do not perform erosion and dilation with structuring elements as described in the literature of classical mathematical morphological. However, several of the Mac image processing programs listed in Appendix D, such as “Alice”, do support mathematical morphology.

Make Binary - Converts the current grayscale image to binary by setting pixels that have been highlighted by either density slicing or by thresholding to black (255), and all other pixels to white (0).

Erode - Removes pixels from the edges of objects in a binary images, where contiguous black areas in the image are considered objects, and background is

assumed to be white. A pixel is removed (set to white) if four or more of its eight neighbors are white. Erosion separates objects that are touching and removes isolated pixels.

Dilate - Adds pixels to the edges of objects in a binary images. A pixel is added (set to black) if four or more of its eight neighbors are black. Dilation connects discontinuous objects and fills in holes.

Open - Performs an erosion operation, followed by dilation, which smooths objects and remove isolated pixels.

Close - Performs a dilation operation, followed by erosion, which smooths objects and fill in small holes.

Set Count... - Allows you to specify the number of adjacent background or foreground pixels necessary before a pixel is removed from or added to the edge of objects during erosion or dilation operations. The default is four.

Set Iterations... - Allows you to specify the number of times erosion, dilation, opening, and closing are performed. The default is one.

Outline - Generates a one pixel wide outline of objects in a binary image.

Skeletonize - Repeatable removes pixels from the edges of objects in a binary image until they are reduced to single pixel wide skeletons. Type command-period to abort.

Distance Map - Generates a Euclidian distance map (EDM). Each foreground (black) pixel in the binary image is replaced with a gray value equal to that pixel's distance from the nearest background (white) pixel. To reduce rounding errors, intermediate EDM values are stored as 16-bit values.

Ultimate Points - Generates the ultimate eroded points (UEPs) of the EDM. Requires a binary image as input. The UEPs represent the centers of particles that would be separated by segmentation. The UEP's gray value is equal to the radius of the inscribed circle of the corresponding particle. Note that the EDM is automatically smoothed when doing watershed segmentation but not when generating UEPs. You can force EDM smoothing, however, by holding down the option key while selecting the "Ultimate Points" command. Smoothing the EDM results in fewer noise induced errors but causes the gray values of the UEPs to be slightly lower, i.e. it slightly reduces the estimated particle sizes. Requires free ram equal to 2-5 times the image size.

Watershed - Separates touching convex particles. Requires free ram equal to 2-5 times the image size. Hold down the option key to disable EDM smoothing.

Arithmetic

The commands in this sub-menu add (subtract, multiply, etc.) a constant to each pixel in the current rectangular selection, or if there is no selection, the entire image.

If *Real Result* is checked, calibrated pixel values are used and the result is stored, in a new window, as both 32-bit real and scaled 8-bit images. The 8-bit image is calibrated using a linear calibration function so that commands in *Image* that only "see" the 8-bit image (currently everything except Arithmetic, Image Math and FFT) will use approximations of the real pixel values.

Add - Adds a constant to each pixel in the selection. Results greater than 255 are set to 255.

Subtract - Subtracts a constant from each pixel in the selection. Results less than 0 are set to 0.

Multiply - Multiplies each pixel in the selection by a constant. Results greater than 255 are set to 255.


Divide - Divides each pixel in the selection by a constant.

Log - Replaces each pixel (V) in the selection with $\ln(V) * 255.0 / \ln(255.0)$, where $\ln(V)$ is the natural logarithm(\log_e) of V . The result is set to 0 if V is equal to 0.

AND, OR, XOR - Performs the selected Boolean operation on each pixel in the selection.

Image Math

Performs arithmetic and logical operations between two images selected from pop-up menus. The operation to be performed is also selected from a pop-up menu.

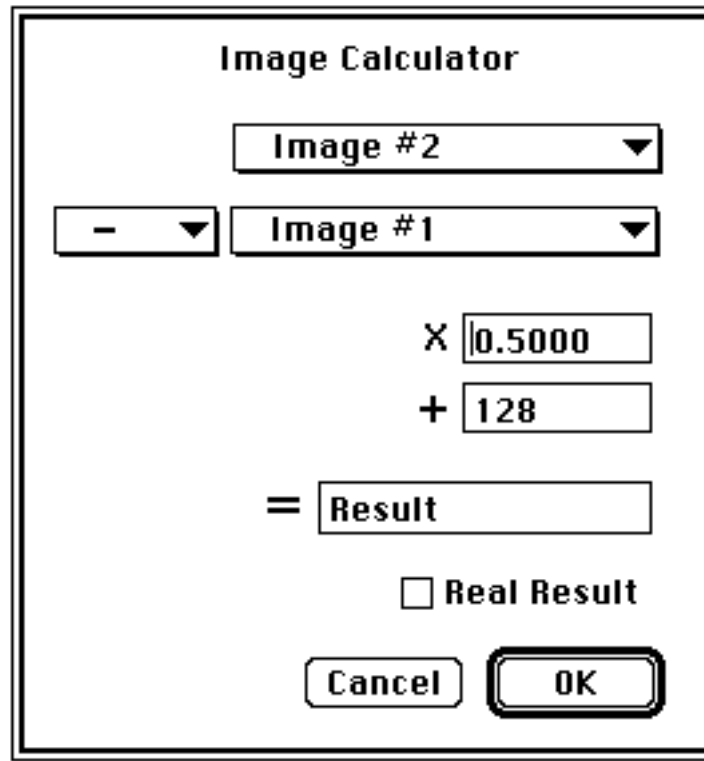

For each pixel, the arithmetic operation is performed, the result is multiplied by the scale factor, the offset value is added, and the final result is clipped to 8-bits (0-255). The operations are carried out in the upper left corner of each image using the largest common rectangle.

If *Real Result* is checked, the calibrated pixel values for the two input images are used and the result is stored, in the same window, as both 32-bit real and scaled 8-bit images. The 8-bit image is calibrated using a linear calibration function so that commands in *Image* that only “see” the 8-bit image (currently everything except Arithmetic, Image Math and FFT) will use approximations of the real pixel values. Notice that the name in the result window's title bar is enclosed in angle brackets to indicate that it contains a real image. Also note the white diamond, indicating that the scaled 8-bit result is density calibrated.

FFT

The commands in this submenu support frequency domain display, editing and processing. They use a real, 2D Fast Hartley Transform (FHT) routine contributed by Arlo Reeves, the author of ImageFFT. For more information about the FHT and ImageFFT, see the ImageFFT documentation, example images, and Arlo's thesis, available on the Web at:

ftp://zippy.nimh.nih.gov/pub/nih-image/nih-image_spinoffs/imageFFT

Note that FFTs and inverse FFTs require extensive floating-point calculations and are therefore very slow on 68000 Macs.

FFT - Computes the Fourier transform and displays the power spectrum. Requires a square, power of two size image or selection. The transformed frequency domain image is stored in a 32-bit real buffer attached to the window displaying the power spectrum. The only commands in *Image* that currently recognize this real image are “Inverse FFT”, “Redisplay Power Spectrum” and “Image Math”. All other commands “see” only the 8-bit power spectrum.

A helpful trick to remember when attempting to make power of two sized selections is to hold down the shift key, which forces the selection to be square. Or, even easier, use the macros for creating power of two sized selections in the “FFT Macros” file distributed with *Image*. The “FFT Macros” file also contains macros for high and low pass filtering.

Inverse FFT - Computes the inverse Fourier transform. You can filter or mask spots on the transformed (frequency domain) image and do an inverse transform to produce an image which only contains the frequencies selected or which suppresses the frequencies selected. Use *Image's* editing and selections tools to draw black or white areas that mask portions of the transformed image. Black areas (pixel value=255) will pass the corresponding frequencies and white areas (pixel value=0) will filter out the corresponding frequencies. It is not, however, possible to both pass and filter during the same inverse transform. The “fft_example.bin” test image in the images directory on zippy.nimh.nih.gov provides an example of FFT editing and filtering.

Redisplay Power Spectrum - Recomputes the power spectrum from the real frequency domain image. This command allows you to start over if you mess up while editing the power spectrum display.

Swap Quadrants - Swaps quadrants 1 and 3 and quadrants 2 and 4 of the active image. Requires an 8-bit image whose height and width are equal and a power of two. Quadrant swapping is performed automatically every time a power spectrum is computed. In the normal, un-swapped, state, the power spectrum's central peak is distributed among the four corners of the image. While this is the format used in all computations, it doesn't correspond to nature's FFT analog, the diffraction pattern. This command is useful because cross and auto-correlation operations (the “cMul” operator in Image Math) result in inherently un-swapped space domain images, yet like power spectra, correlation functions are often displayed in quadrant swapped format. The Swap Quadrants command lets you choose the format you desire.

The transformed frequency domain images created by the FFT command are stored as 32-bit real images. The name in the window's title bar is enclosed in angle brackets (e.g., “<<FFT 2>>”) to indicate that the window includes a real image. Note that frequency domain images require 5 times as much memory as normal 8-bit images - 4 bytes/pixel for the real image and 1 byte/pixel for the power spectrum image. The only commands in *Image* that currently recognize real images are “FFT”, “Inverse FFT”, “Redisplay Power Spectrum” and “Image Math”. All other commands “see” only the 8-bit power spectrum.

The Image Math command supports arithmetic operations on the real images created by the FFT command. You can use it for multiplication (convolution), division (deconvolution) and conjugate multiplication (crosscorrelation and autocorrelation) of frequency domain images. There are macros in the “FFT Macros” file for doing autocorrelation. See the ImageFFT documentation and “The Image Processing Handbook” by John Russ for examples of how these operations can be used to analyze images.

Subtract Background

The commands in this sub-menu remove smooth continuous backgrounds from gels and other images. The rolling ball and rolling disk algorithms used by these routines were inspired by Stanley Sternberg's article, "Biomedical Image Processing", IEEE Computer, January 1983. The routines were written by Michael Castle and Janice Keller of the University of Michigan Mental Health Research Institute.

1D Horizontal - Rolls an arc (rolling arc) horizontally under each row (shrunk 2 or 4 times) of the image in order to remove the background.

1D Vertical - Rolls an arc (rolling arc) vertically under each column (shrunk 2 or 4 times) of the image in order to remove the background.

2D Rolling Ball - Rolls a patch from the top of a sphere (rolling ball) under every point in the image (shrunk 4 or 8 times) in order to find the background.


2D Remove Streaks - Gets rid of horizontal and vertical streaks as it removes background by calling 1D Horizontal and 1D Vertical consecutively.

Faster - When checked, the image is shrunk 8 times (instead of 4) for 2D rolling ball subtraction. When the ball radius is less than 15 the image is shrunk 4 times (instead of 2).

Set Radius - Allows you to set the rolling ball or disk radius. Generally, the disk/ball radius should be at least as large as the diameter of the largest object in the image that is not part of the background.

Apply LUT

Applies the current look-up table function to each pixel in the current selection (or the entire image if there is no current selection) and restores the default look-up table (the identity function). This modifies the gray values so that when the image is viewed using the default grayscale look-up table it will look the same as it did before. It also makes any brightness and contrast changes permanent. It can be used to posterize (reduce the number of gray values) an image by loading and applying, for example, a LUT consisting of four shades of gray. It can also be used to convert color images to grayscale, and to convert a thresholded image to binary.

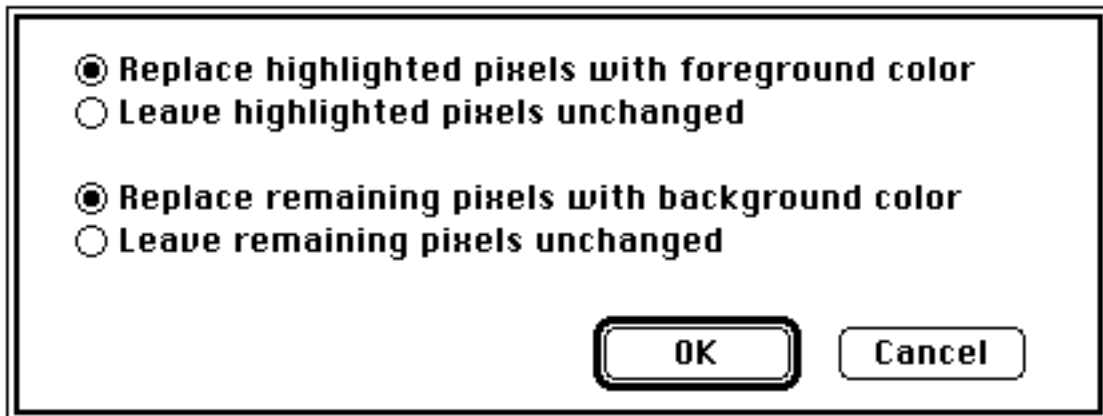

Replace highlighted pixels with foreground color
 Leave highlighted pixels unchanged

Replace remaining pixels with background color
 Leave remaining pixels unchanged

If density slicing is in effect, the above dialog box is displayed, allowing you to process highlighted pixels in one way, and all other pixels another way.

Enhance Contrast

Enhances the contrast of the currently active image. A new look-up table function is generated by doing a linear histogram stretch of the current selection. Use the Apply LUT command to make the contrast change permanent. Enhance Contrast does not work with true color images.

Equalize

Performs histogram equalization based on the density histogram of the current selection. A new look-up table function is generated that more evenly distributes the gray values of the image. The newly created function is displayed in the Map window. Use Apply LUT to make the contrast change permanent. Equalization does not work with true color images.

Fix Colors

Attempts to correct color anomalies by mapping pixels with values of either 0 or 255 to the nearest matching color in the other 254 LUT entries. This usually corrects pseudo-color problems due to the way *Image* “hard wires” entries 0 and 255 to white and black respectively.

Analyze Menu

Measure

Computes the area and mean gray value of the current selection (or length if it's a line selection) and displays the results in the Info and Results windows. Use the Options dialog box to enable other measurements, such as perimeter. Use Undo to delete the last measurement or Delete Measurement to delete an arbitrary measurement. Only highlighted pixels are included in the computation if either density slicing or thresholding are enabled. The measurement counter is incremented by one each time you use Measure. Use Reset to reset it to zero. The default maximum number of measurements is 200, but this can be increased in the Options dialog box.


Use Show Results to display the list of measurement results, Print (with either the Info or Results window active) to print the results, Copy to copy results to the Clipboard, and Export to export results to a tab-delimited (spreadsheet compatible) text file. There is a 32K byte limit when displaying, printing, or copying results, but no limit to the number of measurements that can be exported to a text file.

Calculated areas are displayed in calibrated units, such as square millimeters, if the Set Scale command has been used to establish the spatial scale. Density readings are displayed in calibrated units, such as optical density or isotope concentration, if the Calibrate command has been used to perform density calibration.

The most efficient way to organize measurement results is to have a spreadsheet loaded at the same time you are using *Image*. Make a series of measurements (command-1), Copy them to the Clipboard (command-C), click on the spreadsheet to activate it, select the cell where you want the measurements stored, Paste the results (command-V), click on the image window to reactivate *Image*, and finally, Reset the measurement counter (command-3).

Analyze Particles

Analyze Particles automatically counts and measures objects in binary or thresholded images. It does this by scanning across the image until it finds the boundary of an object, outlines the object using the same outlining routine used by the wand tool, measures the object using the equivalent of the Measure command, and then redraws the object in a different gray level so that it becomes invisible to the scanning process. Use Show Results to display the recorded measurements. Up to 32767 particles can be counted, but measurement recording is limited to the first *Max Measurements* (set in the Options dialog box) particles. Hold down the option key to bypass the dialog box. Use command-period to abort particle analysis.

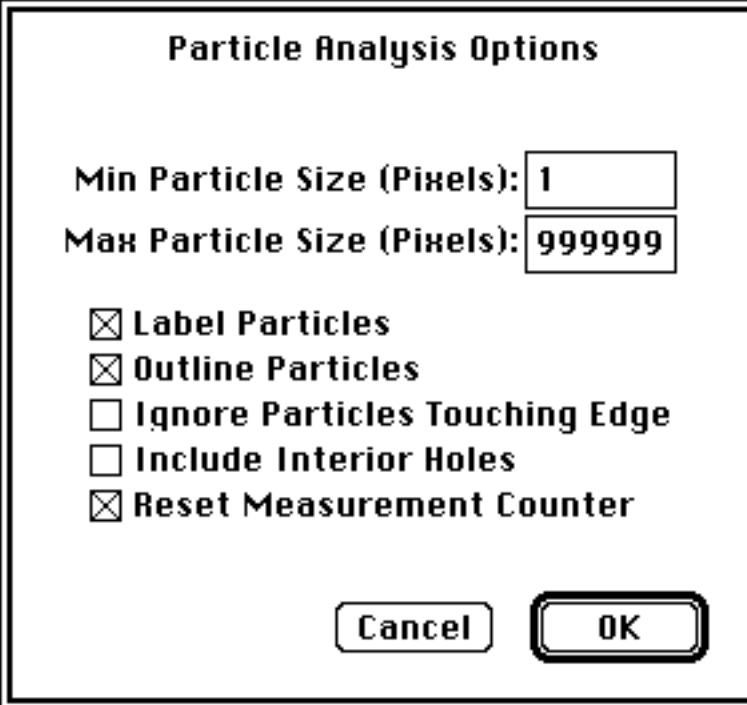


The image shows a dialog box titled "Particle Analysis Options". It contains two input fields for "Min Particle Size (Pixels)" and "Max Particle Size (Pixels)", with values "1" and "999999" respectively. Below these are five checkboxes: "Label Particles", "Outline Particles", "Ignore Particles Touching Edge", "Include Interior Holes", and "Reset Measurement Counter". At the bottom are "Cancel" and "OK" buttons.

Option	Checked
Min Particle Size (Pixels)	1
Max Particle Size (Pixels)	999999
Label Particles	<input checked="" type="checkbox"/>
Outline Particles	<input checked="" type="checkbox"/>
Ignore Particles Touching Edge	<input type="checkbox"/>
Include Interior Holes	<input type="checkbox"/>
Reset Measurement Counter	<input checked="" type="checkbox"/>

Particles smaller than *Min Particles Size* or larger than *Max Particle Size* will be ignored. Note that the sizes must be specified in pixels. Checking *Label Particles* causes Analyze Particles to draw a number, corresponding to the measurement number, on each particle found. Check *Outline Particles* if you want particles to be outlined (this currently only works for density sliced images). Checking *Ignore Particles Touching Edge* causes Analyze Particles to ignore particles touching the edge of the image. Interior holes in area and mean density computations are included if *Include Interior Holes* is checked.

Show Results

Opens a window and displays the current results table in it. If the Results window is already open, then it is activated. No more than 32K characters can be displayed in the Results window, but there is no limit to the number of measurements that can be exported to a text file.

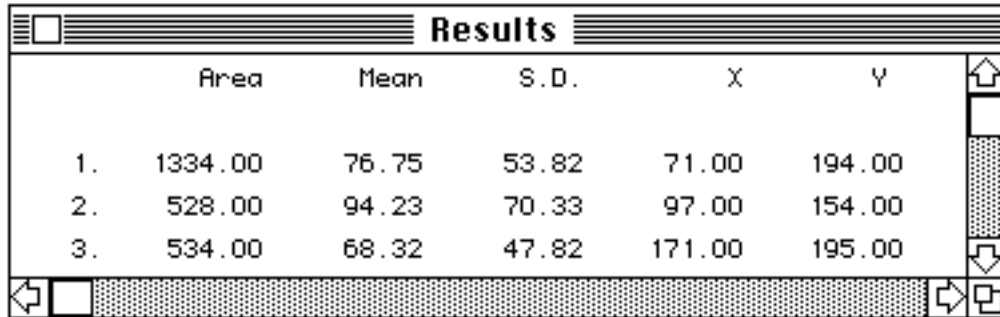

	Area	Mean	S.D.	X	Y
1.	1334.00	76.75	53.82	71.00	194.00
2.	528.00	94.23	70.33	97.00	154.00
3.	534.00	68.32	47.82	171.00	195.00

Use the Export command to save the measurements as a tab delimited text file that can be opened by many Mac programs, including Excel, StatView and KaleidaGraph. Or, as a shortcut, type command-S when the Results window is the active. For correct display, it may be necessary to adjust tab settings when opening an exported file with a word processing program such as Microsoft Word. Hold down the option key (or check *Headings* in Options) when Exporting (or Copying) results to include column and row headers. Use Print (command-P) to print the measurements, and Copy (command-C) to copy them to the Clipboard.

Show Histogram

Displays a plot showing the distribution of gray values within the selection. The plot shows, for each of the possible 256 gray values, the number of pixels in the selection that have that gray value. When the cursor is over the Histogram window, X (the gray value) and Y (the number of pixel with that gray value) are displayed dynamically in the Info window. Note that the Histogram command works with non-rectangular selections.

The Copy command, when the histogram window is the active window, copies both the histogram plot (as a PICT) and the histogram data values (as a single column of text) to the clipboard. Histogram data values can also be saved to a text file using the Export command.

Plot Profile

Generates a density profile plot based on the current rectangular or line selection. For rectangular selections wider than they are tall (or if the option key is down), it produces a “column average plot”, where the width of the plot is equal to the width of the selection and each point in the plot represents the average gray value of the pixels in the corresponding column in the selection. For rectangular selections higher than they are wide, it does a top to bottom “row average plot”, where the width of the plot is equal to the height of the selection and each point in the plot is the average of the corresponding row.

For line selections, it displays a plot of the gray values along the selected line. Pixel averaging is performed when using straight line selections and the line width is greater than one. For example, assuming the maximum line width is selected by clicking on the thickest line at the bottom of the tool palette, each data point plotted is the average of eight pixels.

The Profile Plot Options command can be used to vary the way profile plots are displayed. Use the Copy command to copy both the profile plot (as a PICT) and the data values (as a single column of text) to the clipboard. Plot values can also be saved to a text file using the Export command.

Surface Plot...

Generates a surface plot of the current selection. The entire image is plotted if there is no selection. Type command-period to abort plotting. You can exaggerate the vertical scale in the plot by increasing the contrast of the image before plotting using the controls in the Map window. To improve the quality of plots of small selections, use the Scale and Rotate command to enlarge the selection before plotting.

Options...

The Options dialog box allows you to specify which measurements are recorded by the Measure and Analyze Particles commands and displayed by Show Results. Double-clicking on the polygon tool also brings up this dialog box.

Measurement Options

<input checked="" type="checkbox"/> Area	<input type="checkbox"/> Redirect Sampling
<input checked="" type="checkbox"/> Mean Density	<input type="checkbox"/> Include Interior Holes
<input type="checkbox"/> Standard Deviation	<input type="checkbox"/> Wand Auto-Measure
<input type="checkbox"/> H-Y Center	<input type="checkbox"/> Adjust Areas
<input type="checkbox"/> Modal Density	<input type="checkbox"/> Headings
<input type="checkbox"/> Perimeter/Length	
<input type="checkbox"/> Ellipse Major Axis	
<input type="checkbox"/> Ellipse Minor Axis	
<input type="checkbox"/> Angle	
<input type="checkbox"/> Integrated Density	Max Measurements(1-8000): <input style="width: 50px;" type="text" value="250"/>
<input type="checkbox"/> Min/Max	Field Width(1-18): <input style="width: 50px;" type="text" value="9"/>
<input type="checkbox"/> User 1	Digits Right of Decimal Point(0-8): <input style="width: 50px;" type="text" value="2"/>
<input type="checkbox"/> User 2	

Area - Area of selection in pixels. Area is in calibrated units, such as square millimeters, if Set Scale has been used to spatially calibrate the image.

Mean - Average gray value within the selection. This is the sum of the gray values of all the pixels in the selection divided by the number of pixels. Reported in calibrated units (e.g., optical density) if the Calibrate command has been used to calibrate the image.

Standard Deviation - Standard deviation of the gray values used to generate the mean gray value.

X-Y Center - Center of the best fitting ellipse, measured from either the upper left or lower right corner of the image, depending on the status of the *Invert Y Coordinates* check box in the Preferences dialog box. This is the geometric center of the selection, not the density weighted center. This option is automatically enabled when the cross hair tool is used.

Modal Value - Most frequently occurring gray value within the selection. Corresponds to the highest peak in the histogram.

Perimeter/Length - Length around the outside of the selection, or line length for line selections. The perimeter is not computed for composite selections created using the control and option keys. This option is automatically enabled when Measuring a line selection.

Major/Minor Axis - Lengths of the major and minor axes of the best fitting ellipse.

Angle - Angle between the major axis and a line parallel to the x-axis of the image, or an angle measured using the angle tool. This option is automatically enabled when the angle tool is used.

Integrated Density - Sum of the gray values in the selection, with background subtracted. Use to measure the size (volume) of spots or bands in electrophoresis gels. It is computed using the following formula:

$$\text{IntegratedDensity} = N * (\text{Mean} - \text{Background})$$

where N is number of pixels in the selection, and Background is the modal gray value (most common pixel value) after smoothing the histogram. Note that this formula assumes that the background is lighter (has lower pixel values) than the object being measured. The background level may be computed incorrectly if there isn't a well defined peak in the histogram. This can happen if not enough background is included within the selection or the background is not very uniform.

Min/Max - Minimum and maximum gray values within the current selection.

User 1, User 2 - Add new columns to the results table that can be used by user written macros to record and display derived results. Several example macros in the file "Measurement Macros" display results using *User 1* and *User 2*.

When *Redirect Sampling* is checked, pixel data for calculating the mean gray value is taken from the corresponding area of a second image. Requires that exactly two image be open, and that they be the same size. Note that density slicing and thresholding are ignored when redirected sampling is enabled.

The wand tool includes interior holes in area and mean density computations if *Include Interior Holes* is checked. If *Wand Auto-measure* is checked, the Measure command is automatically invoked whenever an object is outlined using the wand tool. *Adjust Areas* is used by the Gel Plotting Macros to attempt to correct for the tendency of the wand tool to underestimate the size of small peaks by not counting pixels under the peak boundary. When this option is selected, the area is increased by $0.5 * \text{Perimeter} + 1.5 * \text{AspectRatio}$, where AspectRatio is the width to height ratio of the selection's bounding rectangle.


If *Headings* is checked, column and row headings will be added to results Copied to the Clipboard or Exported to a text file.

Max Measurements specifies the size of the arrays used to hold results produced by the Measurement command, by Analyze Particles, and by the angle and cross hair tools. You must Quit, and restart *Image* before the change will take effect.

Field Width specifies the column width, in characters, for results displayed in the Results window, Printed, Copied to the Clipboard, or Exported. *Digits to the Right of Decimal Point* specifies the number of digits that follow the decimal point.

Set Scale...

Performs spatial calibration so that results from length and area measurements are presented in calibrated units, such as millimeters. Before setting the scale, use the line selection tool to make a straight line selection that corresponds to known distance. Then, bring up the Set Scale dialog box, select a unit of measurement from the *Units* pop-up menu, and enter the known distance in *Known Distance*.

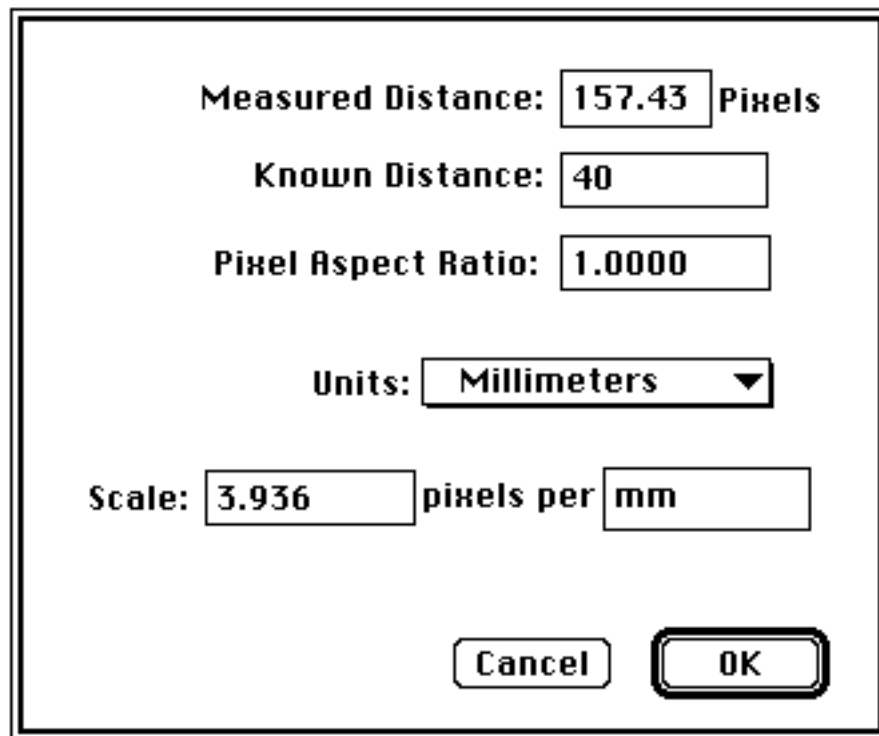

Measured Distance: 157.43 Pixels

Known Distance: 40

Pixel Aspect Ratio: 1.0000

Units: Millimeters ▼

Scale: 3.936 pixels per mm

Cancel OK

Setting *Pixel Aspect Ratio* to a value other than 1.0 enables support for different horizontal and vertical spatial scales, for example 100 pixels/cm horizontally and 95 pixels/cm vertically. Before setting the aspect ratio, calibrate to a known horizontal distance. Then enter the pixel aspect ratio into *Pixel Aspect Ratio*. To find the pixel aspect ratio, measure the width and height (in pixels) of a digitized object with a known 1:1 aspect ratio. The pixel aspect ratio is computed by dividing the width by the height. Note that only the horizontal scale is shown. Divide the horizontal scale by the aspect ratio to compute the vertical scale. Note that the Measure command sets the ellipse major and minor axis lengths to zero when the pixel aspect ratio is not one.

Once the scale is set, you can switch to other units of measurements, for example from inches to centimeters. If you know what the scale for an image is (e.g., 300 dpi), then that value can be directly entered into *Scale*. Select *Pixels* from the pop-up menu to disable spatial calibration. To use a unit of measurement that is not predefined, select

Arbitrary Units and manually type in the unit. As a shortcut, double-click on the line selection tool to bring up the Set Scale dialog box. Note that *Image* displays a black diamond in the title bar of spatially calibrated images.

Calibrate...

Use this dialog box to calibrates to a set of density standards, such radioactive isotope standards or a calibrated optical density step tablet (available from Kodak). Before calibrating, you must record the mean gray value of each of the digitized standards. First, use the Reset command to set the measurement counter to zero. Then use one of the selection tools and the Measure command to record the mean gray value of each of the standards. Note that the standards must be measured in order, starting with the lowest gray value (lightest) standard.

Measured		Known
1	30.30	0.060
2	38.78	0.200
3	64.65	0.340
4	93.29	0.490
5	143.57	0.640
6	202.28	0.790
7	242.92	0.940
8	255.00	1.100
9		
10		
11		
12		
13		
14		

- Straight Line
- 2nd Degree Polynomial
- 3rd Degree Polynomial
- 4th Degree Polynomial
- Exponential
- Power
- Log
- Rodbard
- Uncalibrated OD
- Uncalibrated

Unit of Measure:

When you have finished making the measurements, select Calibrate to display the calibration dialog box. To calibrate the image, enter the actual values in the *Known* column, select a curve fitting method, enter the unit of measurement, and click OK. If the calibration curve is not satisfactory, bring up the Calibrate dialog box again and select a different curve fitting method.

Rodbard is a four parameter general curve fit function proposed by David Rodbard at NIH. The form of the equation is: $y = (D) + (A - D) / (1 + (x/C)^B)$.

Selecting *Uncalibrated OD* causes *Image* to convert gray values to uncalibrated optical density values using the following function:

$$\text{Uncalibrated OD} = \log_{10}(255 / (255 - \text{Gray Value}))$$

You do not need to measure OD standards or enter known OD values to enable this feature.

Pressing *Invert OD* performs the following function on the entered (known) standards:

$$\text{Inverted OD} = -\log_{10}(1.000 - 10^{(-\text{Entered OD})})$$

Optical densities are converted to transmission, subtracted from perfect transmission and converted back to OD yielding the reciprocal density. This function is of use to those who have a positive set of optical density standards but a photographic or other negative image. It is also of use to those who quantitate reflected light images but wish to specify results in terms of transmitted light. This is often the case in anatomical imaging. Entered optical densities must range from 0.00001 to 4.62.

The *Save* button allows you to save both measured and known values to a text file so they can be restored later using the *Open* button. If there are no measured values (count=0), *Open* restores both the measured and known values, otherwise, only the known values are restored.

If you hold down the option key when invoking *Calibrate* you will be allowed to change the measured values. This feature allows you to enter measurements acquired previously or acquired from another system.

Note that *Image* displays a white diamond in the title bar of density calibrated images.

Redo Measurement

Allows you to repeat a previous measurement. Simply enter the number for the measurement you want to repeat and it will be replaced the next time you use the *Measure* command. Redo only works for measurements made using the *Measure* command, not for measurements made with the angle or cross hair tools.

Delete Measurement

Deletes the specified measurement and renumbers any subsequent measurements.

Reset

Resets the measurement counter to zero.

Restore Selection

Returns the previous region or line selection to its original position. If a selection is currently active, this command restores the previous one. Can also be used to transfer a selection from one window to another.

Label Selection

Outlines (in white) the current selection and labels it with the measurement count. Can be used to keep track of which objects have been measured. Hold the option key down to draw (also in white) the best-fit ellipse. To draw the ellipse, you must have previously used the *Measure* command and have selected X-Y Center, Ellipse Major Axis or Ellipse Minor Axis in Options.

Special Menu

Start Capturing

Continuously captures and displays video using one of the frame grabber cards directly supported by Image (see list in Appendix B) or a QuickTime compatible video digitizer, such as the ones built into “AV” Macs and the Power Mac 7500/8500. The capture rate varies from 4 to 30 frames per second, with Power Macs using the PCI version of the Scion LG-3 being the fastest.

Notice how, during continuous capture, the name of this command changes to “Stop Capturing” and “(Live)” appears in the title bar. To “freeze” the image, select “Stop Capturing”, type command-g, or click in the Camera window with any tool except the magnifying glass or the grabber. While capturing, you are allowed to change brightness and contrast (directly supported cards only), alter color schemes, and zoom or pan the image. Histograms are continuously calculated and displayed if you select Show Histogram while the Camera window is in “Live” mode.

Newly created Camera windows inherit the look-up table, as well as any spatial or density calibration, of the currently active window. The size of the Camera window is fixed at 640 x 480 for NTSC video and 768 x 512 for PAL. Smaller selections can be saved by creating a rectangular selection and using the Duplicate or Save As commands.

Average Frames

Averages or integrates two or more video frames to reduce time-varying random noise. Averaging will be done only for the current rectangular selection, or for the entire image if there is no selection.

Number of Frames: 16

Integrate

Integrate On-chip

Video Rate

Calibrate

Fix Scale

Min: 0

Max: 4096

Cancel OK

Number of Frames is the number of frames to be averaged or integrated. Note that there is a possibility of overflow if this value is set to more than 128 since frames are summed in a signed integer buffer with a maximum pixel value of 32,767.

Check *Integrate* to sum the frames, rather than averaging them. Integration increases image quality and contrast in low light situations. Frames are summed using a 16-bit buffer and the resulting 16-bit pixel values are linearly scaled to a range of 0 to 255. Check *Calibrate* to set up a calibration function so that approximations of the 16-bit values are displayed in the Info and Results windows.

Check *Integrate On-chip* to do on-chip integration using the Scion LG-3 and Cohu 4910 series cameras or modified versions of the Dage-MTI CCD72. The camera will integrate on-chip for the specified number of frames and then the LG-3 will capture the integrated frame. On-chip integration requires a special cable, available from Scion, for connecting the integration input of the camera to the LG-3.

Check *Video Rate* to average or integrate at video rates using the Scion AG-5. With the Scion LG-3, *Image* will use the LG-3's on-board memory to capture frames to be averaged or integrated at video rates (25 or 30 frames per second). For example, when averaging 32 frames, the frames are captured in about one second instead of 15-25 seconds. It requires 15-25 seconds, however, to compute the average because the LG-3 does not have the AG-5's ability to do video rate arithmetic. The number of frames that can be captured depends on how much memory is installed. A 4MB LG-3 can capture 8 frames at video rates and one with 16MB can capture 32.

Macros are available in the "Video" macro file to continuously integrate and display frames either off-chip, using the Scion AG-5, or on-clip, using the Scion LG-3 and a Cohu or Dage camera. Instructions for using these macros are in the macro file.

If *Fix Scale* is checked, the values in *Min* and *Max* control how integrated images are linearly scaled from 16-bits to 8-bits. If it is not checked, the computed minimum and maximum values are used. The actual minimum and maximum values are always displayed in the Info window.

You can bypass the Average Frames dialog box by holding down the option key. The Average Frames macro (in the "Video" macro file) also bypasses the dialog box, and, in addition, allows you to do averaging or integration by simply pressing the "A" key.

Save Blank Field

Saves (in a window named "Blank Field") a background image that will be used to correct for uneven illumination. The Stop Capturing command will use this reference image to correct shading errors in newly acquired images. It does this by dividing each pixel in the newly acquired image by a correction factor computed for each pixel in the blank field. This correction factor is generated by dividing each gray value in the blank field by the mean gray value.

You can capture a single frame without shading correction by holding down the option key while selecting Stop Capturing. Close the "Blank Field" window to stop doing shading correction.

Video Control...

Displays a dialog box that controls how video is captured using the Start Capturing command. One of two dialog boxes is displayed depending on the type of digitizer used.

This modeless dialog box is displayed when using a directly supported frame grabber card such as the Scion LG-3. It allows you to interactively adjust the brightness and contrast during “live” capture.



Images acquired using a frame grabber card are inverted if *Invert Video Input* is checked.

Checking *Highlight Saturated Pixels* enables a feature that, during live capture, causes all pixels that over saturate the camera (are too bright) to be displayed in red and all pixels that under saturate the camera (are too dark) to be displayed in yellow.

Use External Trigger enables support for the external trigger feature of the Data Translation QuickCapture and Scion frame grabber cards when using the Start Capturing, Average Frames or Make Movie commands. External trigger events are signaled by a 5 volt falling TTL edge on input line 7 of the QuickCapture cable.

Check *Separate Sync* when using the Scion frame grabber cards and an RGB color camera with separate composite sync output.


Channel allows you to specify which of four input channels is used by the QuickCapture or Scion frame grabber cards. Note that with the QuickCapture card, the input cable labeled “0” is used for channel 1.

Offset and *Gain* allow you to adjust the A/D offset (brightness) and gain (contrast) of the Scion frame grabber cards. Changes are interactively displayed in live video mode. The objective when using these controls is to optimize the image brightness and contrast. One method for doing this is to enable *Highlight Saturated Pixels* and interactively adjust offset and gain to just eliminate the saturated pixels within the region of interest. Another method is to display the histogram and interactively adjust offset and gain to spread out the histogram as much as possible.

Several command key shortcuts are useful in conjunction with this dialog box. Command-w closes the Video Control dialog box. Command-g enables or disables live

video capture. Command-h displays a histogram, continuously updated during live video. And, if it is active, Command-w closes the histogram window.

This dialog box is displayed when using a QuickTime compatible video digitizer, such as those built into “AV” Macs.

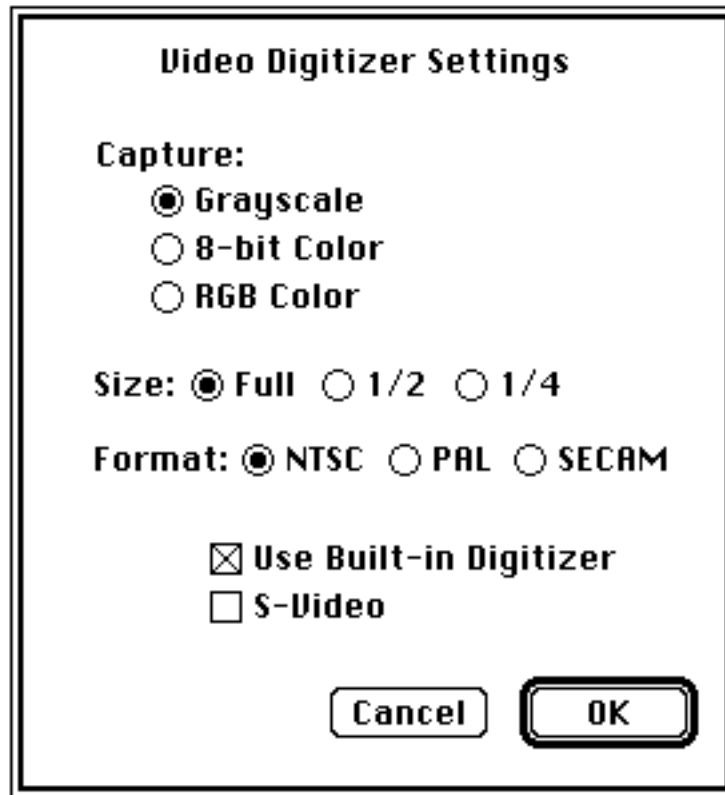

To grab color images using the the Start Capturing command, select either *8-bit Color* or *RGB Color* and switch to the System LUT. The Capture Color command grabs 8-bit indexed color images when *8-bit Color* is selected and 3-slice RGB stacks when *RGB Color* is selected. The RGB stack can be saved as a 24-bit color TIFF file by using the Save As command and selecting “TIFF” in the Save As dialog box. Color capture requires a lot of RAM than grayscale capture, so you may need to increase Image’s memory allocation.

The *Size* radio buttons control the size of the Camera window. Set the *Format* buttons to correspond to the video format being used. Check *Use Built-in Digitizer* if you want to use an internal digitizer instead an add-on third party digitizer. Check *S-Video* when using the S-video port.

Video digitizer settings can be saved using the Record Preferences command in the File menu.

Photo Mode

Erases the entire screen to the current background color and then redraws the current image window without the menu bar, title bar, tool palette, etc. Before selecting Photo Mode, you can change the background color by clicking in the LUT window with the eraser tool. Holding down the option key while selecting Photo Mode causes the image to be drawn starting at the top of the screen using the space formally occupied by the Menu Bar.

Load Macros...

Opens a text file containing one or more macros written in *Image*'s Pascal-like macro programming language. Each macro in the file causes a new command to be inserted at the bottom of the Special Menu. Macros may be assigned to any key, including function keys on the extended keyboard. For example, a macro named "Test Macro [T]" would be assigned to the 'T' key, and one named "Another Macro [F1]" would be assigned to the F1 function key. In both cases, it is not necessary to hold down the command key. Macros can be aborted by typing command-period. When launched, *Image* automatically loads the macros contained in the file "Image Macros", as long as this file is in the same folder as *Image*, or in the System Folder.

Load Macros may display an error message referring to a line number in the macro file. If this happens, you can find the offending line by opening the macro file using the Open command and using the Find command's ability to move the cursor to a specified line number.

Example macros for performing the following functions, and many others, are distributed with *Image*: plotting gel lanes; drawing arrows; generating a sine wave; creating a grayscale step function; printing all currently open images; generating bas-reliefs; clearing outside of the current selection; plotting XYZ coordinate data; importing FITS files; recovering X-Y coordinate data from line plots; and generating an ASCII dump.

The macro programming language is documented in Appendix A.

Stacks Menu

Use the commands in this menu to create or process stacks. Stacks are three dimensional images consisting of two or more “slices”. The slices can be consecutive serial sections in a 3D data set, frames in a movie loop, RGB (red, green and blue) channels in a 24-bit color image, or any related set of images. Use the ‘<’ and ‘>’ keys to move through the slices in a stack. The current slice and total number of slices are displayed in parentheses in the title bar. Stacks are displayed in a single window and can be saved to a single disk file using the Save, Save As or Export commands. Most commands in *Image*, with the exception of Save, Save As, Export and Open, operate only on the current slice. There are, however, macros are available (in the file “Stacks”) that operate on all the slices in a stack

Windows to Stack

Converts the set of images currently being displayed in separate windows to a stack. The images must all be the same size. A macro, also called “Window to Stack”, is available that works with windows that are not the same size.

Stack to Windows

Converts the currently active stack to windows. A stack with 20 slices would be converted to 20 normal image windows.

Add Slice

Adds a new blank slice to the stack following the currently displayed slice. The maximum number of slices in a stack is 1000.

Delete Slice

Deletes the currently displayed slice. You can use Undo to restore it.

Next Slice


Displays the slice following the currently displayed slice. Note that is not necessary to hold down the command key to use the keyboard shortcut, i.e., you only need to press the ‘>’ key. You can also use the Page Down key on extended keyboards.

Last Slice

Displays the slice before the currently displayed slice. As a shortcut, use the ‘<’ or Page Up keys.

Make Movie...

Captures a series of video frames into a stack. Before using this command, you must first create a rectangular selection in the Camera window. The size of this selection determines the width and height of the stack that will be created. A dialog box allows you to specify the number of frames and the capture rate. The capture rate is specified by entering either the inter-frame interval (*Seconds/frame*) or the frame rate (*Frames/second*). Set the inter-frame interval to zero for the fastest capture rate. After *Image* has completed recording the movie it will compute the actual frame rate and display it in the Info window. If the computed and desired rates are not the same then the frames were probably captured at uneven intervals. In the case, specify a slower rate, use a smaller selection, or try enabling "Blind" Capture. Type command-period to abort the movie making process.

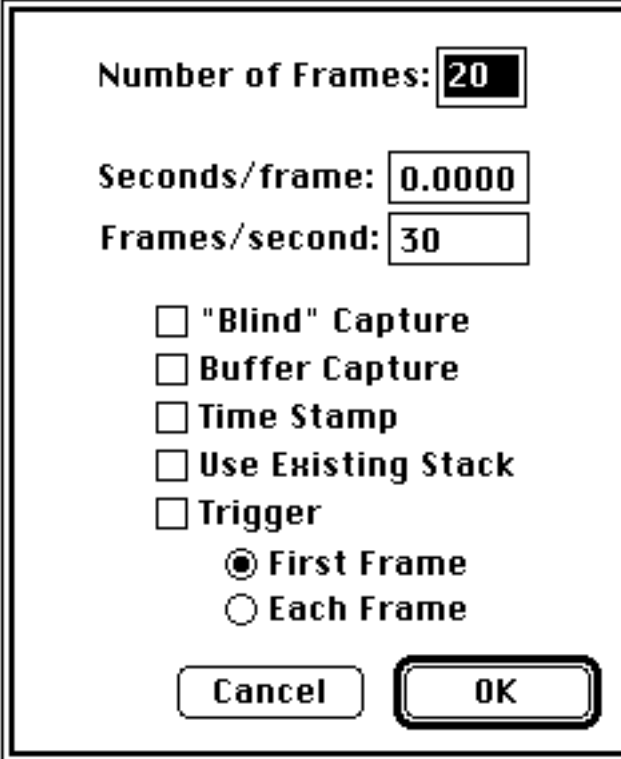

Number of Frames: 20

Seconds/frame: 0.0000

Frames/second: 30

"Blind" Capture

Buffer Capture

Time Stamp

Use Existing Stack

Trigger

First Frame

Each Frame

Cancel OK

Check "Blind" Capture to disable screen updates, allowing faster frame capture rates.

Check *Buffer Capture* to use the LG-3's expandable buffer memory to store the frames. When combined with blind movie capturing, this enables capturing at video rates. The software limits the number of frames in a movie to the number which will fit in the LG-3's memory buffer (this is the number of Mb on the LG-3 times two). Note that if there is a lot of memory installed on the LG-3, there must also be a lot of system memory in the Macintosh in order to work with the frames once they are captured.

Select *Time Stamp* to have the elapsed time of each frame written in the upper left corner of each frame. The elapsed times are also stored in the PlotData macro array. See the "Make Movie and Plot Intervals" macro in "Movie Making Macros" for an example of how to record and process the elapsed times.

Check *Use Existing Stack* to store the frames in the stack last used by Make Movie instead of in a newly created one.

Triggering can be enabled for only the first frame or for every frame. Check *Trigger* and *First Frame* and *Image* will wait for a mouse press before starting to capture the frames.

The table below shows the maximum frame size for various capture rates when using a Quadra 700, a Scion LG-3, and “Blind” capture mode. Faster Macs should be able to capture larger frames at a given rate. The “Frame Rate vs. Frame Size” macro in “Movie Making Macros” was used to generate the table. The table assumes a 60Hz frame grabber card that captures at a maximum rate of 30 fps, or .033 seconds per frame. A 50Hz (PAL) card captures at a maximum rate of 25 fps, or 0.04 seconds per frame.

Seconds/frame	Frames/second	Maximum Size
.067	15	320 X 240
.1	0	480 X 360
.133	7.5	600 X 460
.2	5	640 X 480
.333	3	640 X 480
.5	2	640 X 480

Capture Frames

Captures a frame and adds it to a stack each time the mouse button is pressed. Press any key to stop capturing.

Animate


Animates the current stack by repeatedly displaying its slices (frames) in sequence. Holding the option key down causes the screen to be erased to the current background color before the animation starts (or type command-option-‘=’ as a shortcut). The animation speed is controlled by pressing keys ‘1’ through ‘9’. 68040 and Power PC based Macintoshes using built-in video provide the fastest and smoothest animation. The right and left arrow keys can be used to single step through the slices. Press the mouse button to stop. Check *Oscillating Movies* in the Preferences dialog box to get *Image* to automatically reverse direction at the beginning end of the frame sequence.

Average

Creates a new image that is the arithmetic average of all the slices in the current stack.

Make Montage...

Creates a new composite image from the slices in the current stack.

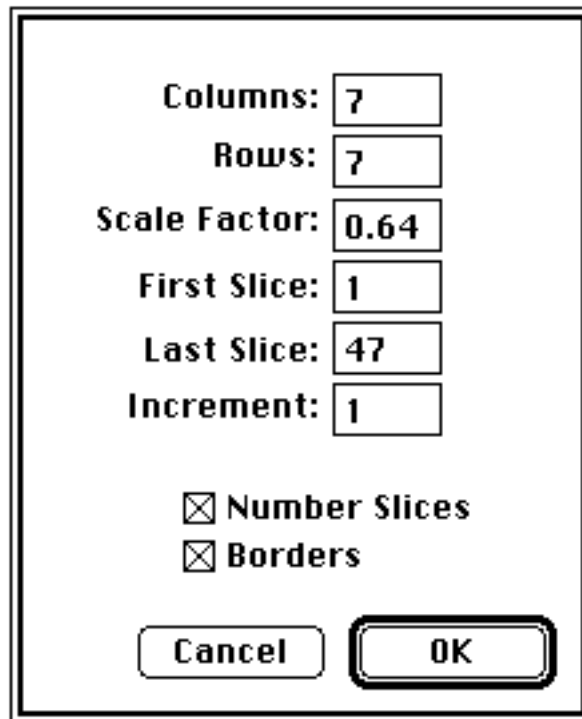

Columns: 7
Rows: 7
Scale Factor: 0.64
First Slice: 1
Last Slice: 47
Increment: 1

Number Slices
 Borders

Cancel OK


Columns and *Rows* control the number of columns and rows used in the composite image. *Scale Factor* determines how the slices in the stack are scaled when they are copied to the composite image. Decreasing the scale factor makes the composite image smaller and reduces the amount of memory required. *First Slice* and *Last Slice* specify which slices in the stack get copied to the composite image. Every slice (starting at *First Slice*) is copied if *Increment* is set to one, every other slice if it is set to two, every third slice if it is set to three, etc. Check *Number Slices* to have the slices in the composite image labeled with the slice number. Use the Font, Size and Style commands in the Options menu (before using Make Montage) to vary the format of the labels. Check *Borders* to draw borders around the slices. The width of the borders can be varied by clicking on the lines at the bottom of the Tools window. Make Montage normally draws labels and borders in white. You can force it to use black by setting the pixel in the upper left hand corner of the first slice to white (value = 0).

Capture Color

Captures and displays a 24-bit RGB color image. Requires a Scion or Data Translation frame grabber card and an RGB color camera with separate composite sync output. With the Scion frame grabber cards, an optional four channel cable is required and *Separate Sync* must be checked in the Video Control dialog box. With the Data Translation QuickCapture, the W5 jumper must be installed and the red, green, blue and sync camera outputs connected to cables 1, 0, 2 and 4 respectively. Color capture is very memory intensive.

RGB to 8-bit Color...

Converts an RGB color image (in the form of a three slice stack) to 8-bit indexed color. You have a choice of three 256 color look-up tables to use with the indexed color image. Select *Existing* to use the current look-up table. Select *System* to use the Apple default 8-bit color table. Select *Custom* to create a custom 256 color table based on the colors in the RGB image.

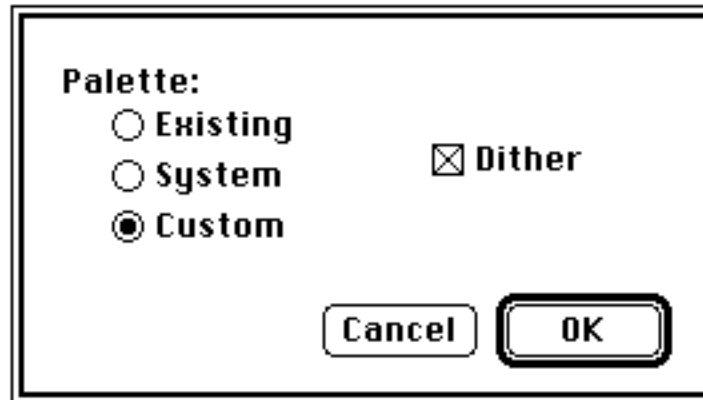

Checking *Dither* causes the 8-bit color image to be drawn using error diffusion dithering, a technique that mixes existing colors to create the illusion of additional colors. Dithering will usually eliminate color banding in the 8-bit image.

8-bit Color to RGB

Converts an 8-bit indexed color image into a three slice (red, green and blue) stack, a format that allows filter operations such as smoothing and sharpening to be performed. Macros are available in the file "Stacks" for automating filtering operations on RGB stacks.

RGB to HSV

Converts an RGB color image (in the form of a three slice stack) to HSV (Hue, Saturation and Value).

Register...

Translates and rotates the slices in the current stack into alignment based on fiducial points.

There are two interfaces. The more intuitive of the two requires the user to click on visible landmarks in a reference slice, then click on corresponding fiducial points in the other slices in the stack. The code then lines up the slices based on these points. The user may easily throw out unreliable points in non-reference slices and correct input errors. This registration interface may only be used in cases where all fiducial points are visible on screen in the captured slices.

The second interface is more difficult to use, but it works regardless of whether or not fiducial marks are included within the borders of the captured slices. Here, the user provides fiducial data in a text file. These data consists of relative coordinates of fiducials from each slice as read from a microscope digitizer (or similar device) as well as the necessary information to map the coordinate system of the microscope digitizer to the coordinate system of windows in NIH Image.

The text file method uses relative coordinates of fiducial marks as recorded with some device such as a microscope digitizer. Let us call these coordinates "stage" coordinates. It also uses screen coordinates of fiducials in Image. Before registration may take place, stage coordinates must be mapped to the NIH Image screen coordinate system. To do this, NIH Image reads the following, tab-delimited information from a text file. In every case, x-coordinates are followed by y-coordinates.

line 1: the screen coordinates of a point which is fixed for every image captured. In the sample fiducial file, this is the point which corresponds to the cross hairs on the microscope at capture time. This is the "image center" point.

line 2: the location, in screen coordinates, of two fixed points in an image.

line 3: the location, in stage coordinates, of these same two fixed points.

line 4: (and each subsequent line) the locations, in stage coordinates, of the "image center" and at least two, but not more than 12, fiducial points for an image to be registered.

Obviously, the stage coordinate system may not change in rotation, translation, or scale in the middle of a set of images being captured, so it is advisable to record stage coordinates at the time of image capture (without changing camera settings or the position of the object whose image is being captured).

Lines 4-n must be entered in the same order as the slices in the stack. It doesn't matter which one is the reference image. Where fiducial coordinates are unavailable or unreliable, use the number 10000 for both the x and y stage coordinate in the file. Each slice must be represented by the same number of fiducial coordinates in the data file.

As you can see, using the text file method introduces many possible sources of errors, so results are not usually as good with this method as with the on-screen method.

An example stack with text file fiducial points ('RegistrationExample.bin') is available by FTP from zippy.nimh.nih.gov, in the /pub/nih-image/stacks directory.

This routine was written by Michael Castle (mike.castle@umich.edu) of the University of Michigan Mental Health Research Institute (MHRI).

Project...

Generates an animation sequence by projecting through a rotating 3D data set onto a plane. Each frame in the animation sequence is the result of projecting from a different viewing angle. To visualize this, imagine a field of parallel rays passing through a volume containing one or more solid objects and striking a screen oriented normal to the directions of the rays. Each ray projects a value onto the screen, or projection plane, based on the values of points along its path. Three methods are available for calculating the projections onto this plane: nearest-point, brightest-point, and mean-value. The choice of projection method and the settings of various visualization parameters determine how both surface and interior structures will appear.

This routine was written by Michael Castle (e-mail: mike.castle@umich.edu) and Janice Keller of the University of Michigan Mental Health Research Institute (MHRI).

Distance Between Slices:	<input type="text" value="1.0"/>
Initial Angle(0-359°):	<input type="text" value="0"/>
Total Rotation(0-360°):	<input type="text" value="360"/>
Rotation Angle Increment:	<input type="text" value="10"/>
Lower Transparency Bound:	<input type="text" value="0"/>
Upper Transparency Bound:	<input type="text" value="254"/>
Surface Opacity (0-100):	<input type="text" value="0"/>
Surface Depth-Cueing (0-100):	<input type="text" value="100"/>
Interior Depth-Cueing (0-100):	<input type="text" value="0"/>

Save Projections to Disk
 Minimize Window Size

Axis of rotation: **Projection Method:**

X-Axis Nearest Point
 Y-Axis Brightest Point
 Z-Axis Mean Value

Distance Between Slices is the interval, in pixels, between the slices that make up the volume. *Image* projects the volume onto the viewing plane at each *Rotation Angle Increment*, beginning with the volume rotated by *Initial Angle* and ending once the volume has been rotated by *Total Rotation*.

The *Lower and Upper Transparency Bound* parameters determine the transparency of structures in the volume. Projection calculations disregard points having values less than the lower threshold or greater than the upper threshold. Setting these thresholds permits making background points (those not belonging to any structure) invisible. By setting

appropriate thresholds, you can strip away layers having reasonably uniform and unique intensity values and highlight (or make invisible) inner structures. Note that you can use density slicing to set the transparency bounds.

Sometimes, the location of structures with respect to other structures in a volume is not clear. The *Surface Opacity* parameter permits the display of weighted combinations of nearest-point projection with either of the other two methods, often giving the observer the ability to view inner structures through translucent outer surfaces. To enable this feature, set *Surface Opacity* to a value greater than zero and select either *Mean Value* or *Brightest Point* projection.

Depth cues can contribute to the three-dimensional quality of projection images by giving perspective to projected structures. The depth-cueing parameters determine whether projected points originating near the viewer appear brighter, while points further away are dimmed linearly with distance. The trade-off for this increased realism is that data points shown in a depth-cued image no longer possess accurate densitometric values. Two kinds of depth-cueing are available: *Surface Depth-Cueing* and *Interior Depth-Cueing*. *Surface Depth-Cueing* works only on nearest-point projections and the nearest-point component of other projections with opacity turned on. *Interior Depth-Cueing* works only on brightest-point projections. For both kinds, depth-cueing is turned off when set to zero (i.e. 100% of intensity in back to 100% of intensity in front) and is on when set at $0 < n < 100$ (i.e. $(100-n)\%$ of intensity in back to 100% intensity in front). Having independent depth-cueing for surface (nearest-point) and interior (brightest-point) allows for more visualization possibilities.

The *Minimize Window Size* option allows you to save memory by making projection windows as small as possible given the size of the volume and the axis of rotation. If this box is not checked, projection windows for a given set of slices will be the same size regardless of the axis of rotation (convenient for animation sequences using multiple axes of rotation).

Select *Nearest Point* projection to produce an image of the surfaces visible from the current viewing angle. At each point in the projection plane, a ray passes normal to the plane through the volume. The value of the nearest non transparent point which the ray encounters is stored in the projection image. *Brightest Point* projection examines points along the rays, projecting the brightest point encountered along each ray. This will display the brightest objects, such as bone in a CT (computed tomographic) study. *Mean Value* projection, a modification of brightest-point projection, sums the values of all transparent points along each ray and projects their mean value. It produces images with softer edges and lower contrast, but can be useful when attempting to visualize objects contained within a structure of greater brightness (e.g. a skull).


Several macros (in the file "Stacks") are available for performing various operations on the slices making up a volume prior to using the Project command. Use "Smooth" to reduce noise in a volume. Since the projection routine assumes volumes contain one or more objects within a black background, use "Invert" to invert volumes with a white background. For low contrast volumes, increase the contrast using the controls in the Map window and then apply the look-up table to the volume using the "Apply LUT" macro. The "Remove 0 and 255" macro changes pixel values of 0 and 255 to 1 and 254 respectively. This is sometimes useful when pseudocoloring projections. Use "Replicate Slices" to eliminate the gaps seen in projections of volumes with a slice interval greater than one by increasing the number of slices. The "Make Cone" macro creates a 64^3 volume containing a cone with two rods inside that is very useful for understanding the effect of various projection parameters.

Reslice

Reconstructs a 2D image from the image volume contained in the current stack. Use the straight line selection tool to select where the reconstruction will be done. You will be prompted for the slice spacing (displacement between slices in the stack) in pixels if this information has not been previously entered. For experimenting with the Reslice command, a sample MRI volume consisting of 27 5mm slices is available from the NIH Image Web site (<http://rsb.info.nih.gov/nih-image/>). Macros are available (in the file "Stacks") for repetitive reslicing of image volumes, for example, to generate a set of coronal slices from an MRI volume consisting of sagittal slices.

Stack Info...

Allows you to view and set the type, slice spacing, and frame interval of the current stack.

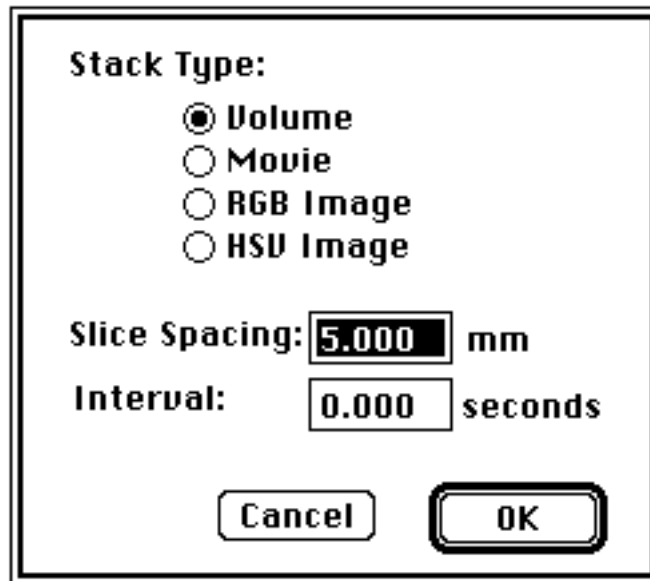

A *Volume* is a stack containing a 3D Image. A *Movie* is a sequence of frames captured using the Make Movie Command. An *RGB Image* is a 3-slice stack containing a 24-bit color image in RGB (Red, Green, Blue) format. An *HSV Image* is a 3 slice stack containing a 24-bit color image in HSV (Hue, Saturation, Value) format. *Slice Spacing* is the distance between the slices in a volume. *Interval* is the inter-frame interval in a movie.

Windows Menu

Next Window

Deactivates the current image window and activates the next image in the image list, as shown at the bottom of the Windows Menu. An

Cascade Windows

Expands all the image windows to their original size and redraws them slightly offset from each other. If you hold down the option key, all windows will be drawn in the same location, at the upper left corner of the screen, next to the tool palette.


Tile Windows

Shrinks all the images windows and repositions them so that they will fit on the screen without overlapping. Hold down the option key to draw the tiled windows in “Scale to Fit” mode. Click on the “Zoom Box” of a tiled window to expand it to fill the screen.

Image supports “synchronized scrolling” of tiled windows. To try this out, open two or more windows (they must be the same size), tile them using Tile Windows, zoom in on one of them, then pan one of the images with the option key down. Notice how all the other images zoom and pan to the same relative location.

TOOLS

The window containing the tool palette, as well as all other windows displayed by *Image* can be freely moved around the screen. All the tools work with images at any of the eight available levels of magnification. One of the tools (the line selection tool) has three variations selected using a pop-up menu.

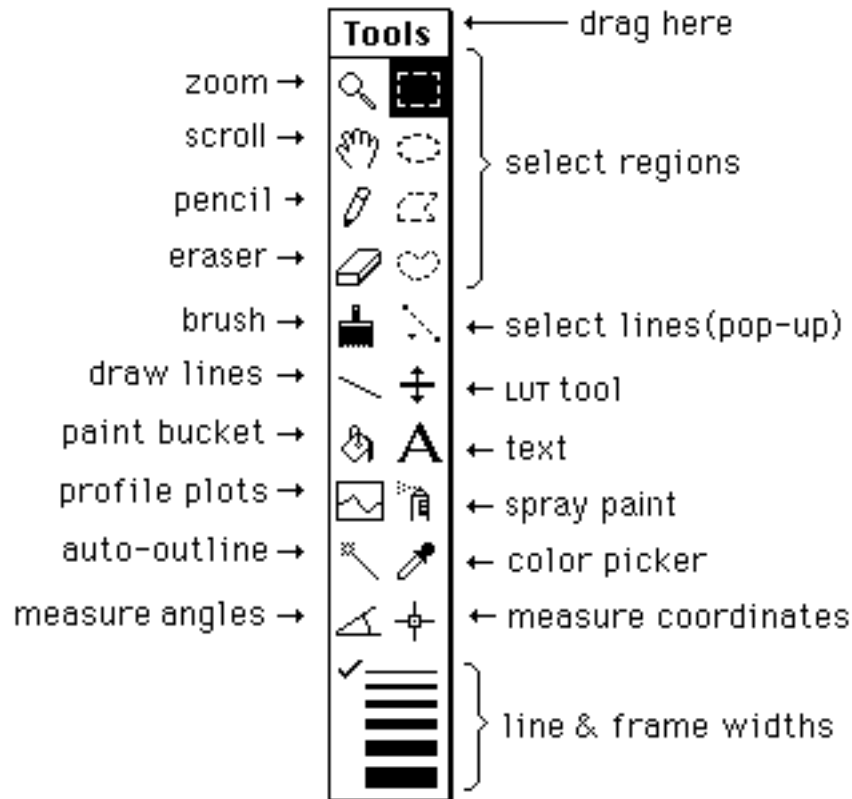

Magnifying Glass - Click within the active image window to zoom. Double-click on the magnifying glass icon to revert to 1:1 magnification. Option-click (or use Undo) within the image to reduce magnification in steps. Notice how the plus sign changes to a minus sign when you hold the option key down. Eight magnification levels are available: 1:1, 2:1, 3:1, 4:1, 8:1, 16:1, 32:1 and 64:1.



Scrolling Tool (Grabber) - Allows you to scroll through an image that is larger than its window. When using other tools (except the text tool), you can temporarily switch to the grabber by holding down the space bar.



Rectangular Selection Tool - Use this tool to specify a rectangular subregion to be used by commands in the Edit, Process and Analysis menus. The contents of a rectangular selection can be Saved, Copied, Cleared, Filled, Duplicated, Scaled, Flipped, Rotated, Inverted, filtered, or Measured. Hold down the shift key to constrain the selection to be square. Double-click on this tool's icon to select the entire image. As the rectangle is being drawn, its width and height are shown in the Info window.



Oval Selection Tool - Creates elliptical subregions for use by various commands in the Edit, Process and Analyze menus. Hold down the shift key to constrain the selection to a perfect circle. As the ellipse is being drawn, its width and height are shown in the Info window.



Polygonal Selection Tool - Creates polygon-shaped subregions for use by various commands in the Edit, Process and Analyze menus. Click in the small box at the starting point to end drawing. (Double-clicking also terminates drawing.) Double-click on this tool's icon to bring up the measurement options dialog box.



Freehand Selection Tool - Creates non-rectangular subregions for use by various commands in the Edit, Process and Analysis menus. Double-click on this tool's icon to bring up the Calibrate dialog box.

Image regions defined by the four outlining tools can be Copied, Filled, Cleared, Inverted, Framed, filtered, or Measured. Immediately after using the Fill command, you can change colors by clicking in the LUT window. Similarly, after using Draw Boundary, you can change line widths by clicking on the lines in the Tools window.

Selections can be edited by holding down the control key to add a new selection to an existing selection or the option key to subtract a new selection from the existing selection. When using the polygon or freehand tools, you can also use the shift key to add to selections. Use the arrow keys to “nudge” selections one pixel at a time.



Line Selection Tools - Use these tools to create straight, freehand or segmented line selections. A pop-up menu (note the little triangle) is used to select one of three line types. The pop-up menu is accessed by clicking on the line selection tool's icon and holding the mouse button down for at least 1/2 second. Once you have created a line selection, you can measure its length using the Measure command, draw it using the Fill command, generate a density profile plot using the Plot Profile command, and outline the line (assuming line width is greater than one) using the Draw Boundary command. With straight lines only, you can dynamically vary the line width by clicking on the lines at the bottom of the tool palette.

Freehand line selections are created in the same way as freehand region selections, except they are not required to be closed. Segmented line selections are created using a technique similar to the way polygon region selections are made, using a double-click to terminate the line.

Line width is specified by clicking on the lines at the bottom of the tool palette. Straight lines can be constrained to be either vertical or horizontal by holding down the shift key. Line lengths recorded using the Measure command are given in pixels unless Set Scale has been used to perform spatial calibration. Type command-f (Fill) and command-l (Measure) to quickly draw and measure the length of a line selection. Use Show Results to display the list of length measurements. Option-click with the text tool to label lines with the measured length. Double-click on the line selection tool to bring up the Set Scale dialog box.

Line selections can be moved in the same way as region of interest selections by clicking inside the “marching ants” and dragging, although this has to be done carefully for one pixel wide lines. Lines selections can also be “nudged” a pixel at a time using the arrow

keys. Straight line selections have three “handles” (small black squares). The handles at either end swing and stretch the line and the one in the center is used to move the selection without changing its orientation.

Line selections can be edited in the same way as region selections by holding down the control key to add a new selection or the option key to subtract a new selection. Line selections, however, cannot be added or subtracted from previous selections. Once they have been edited, line selections revert to ordinary region of interest selections.



Pencil - Draws one pixel wide lines in the current foreground color. Click in the LUT window, or option-click in the image, to change the foreground color. Hold down the shift key to force pencil movements to be either horizontal or vertical.



Eraser - Erases to the current background color. Click in the LUT window, or option-click in the image, to change the background color. The color of the eraser indicates the current background color. The background color is used by the Cut, Clear and Photo Mode commands, and as the background color for text. Hold down the shift key to force eraser movements to be either horizontal or vertical. As a shortcut, you can double-click on the eraser to erase the entire active image.



Paint Brush - Paints in the current foreground color. Hold down the shift key to force brush movements to be either horizontal or vertical. Click in the LUT window, or option-click in the image, to change the foreground color. The color of the brush indicates the current foreground color. Double-click on the brush to change its size.



LUT Tool - Click and drag in the LUT window with this tool to dynamically modify the current color look-up table. Hold the option key down to rotate all 256 entries in the LUT. The LUT tool is also used to manipulate the density slice when density slicing is enabled. As a shortcut, you can double-click on this tool to enable/disable density slicing.



Spray Can Tool - Draws random pixels in the current foreground color. Double-click on the tool to change the brush diameter.



Line Drawing Tool

Draws straight lines using the current foreground color and line width. The line width is specified by clicking on the lines at the bottom of the tool palette. Lines can be constrained to be either vertical or horizontal by holding down the shift key.



Automatic Outlining Tool (Wand)

Traces the edge of a binary, density sliced, or thresholded object, and, optionally, measures and/or numbers it, producing a selection outline in the process. To outline an object, either click inside near the right edge, or outside to the left of the object. To visualize what’s happening, imagine a turtle that starts moving to the right from where you click looking for a binary edge. Once it finds an edge, it follows it in a counter clockwise direction until it returns to the starting point.

Selections created with the wand tool are added to any existing selection if either the shift or control keys are held down and subtracted from any existing selection if the option key is held down.

You can specify that the objects be automatically measured by checking *Wand Auto-Measure* in the Analyze/Options dialog box. In addition, objects will be numbered if *Label Particles* is checked in the Analyze Particles dialog box. The numbers correspond to measurement numbers. Use Undo to remove the most recent label, along with the corresponding measurement.



Density Profile Tool

Creates a straight line selection and uses it to generate a density profile plot. Pixel averaging is done if the current line width is greater than one. Change the line width by clicking on the lines at the bottom of the Tools window. The line selection can be constrained to horizontal or vertical by holding down the shift key. Use the Draw Boundary command (command-B) to draw a reference line in the current foreground color. To highlight the pixels used to generate the profile plot, hold down the mouse button and drag in the Plot window. The Plot window, unlike the Histogram window, can be resized.

Plots can be copied to the Clipboard and then pasted into an image window. In addition to the plot, the Copy command also copies the plot data values as a single column of numbers. These numbers can then be pasted into analysis and plotting programs, such as Excel and KaleidaGraph. Profile plot data values can also be exported to a text file using the Export command.

Various aspects of the plots produced by the profile plotting tool can be altered using the Profile Plot Options dialog box. As a shortcut, you can bring up this dialog box by double-clicking on the density profile tool.



Paint Bucket

Flood fills, using the current foreground color, the area with the same color as the point you click on. Note that the “hot spot” is at the end of the paint coming from the bucket.



Text Tool

Adds text to images using a typeface and style chosen from the Font, Size and Style sub-menus in the Options menu. Various attributes, such as typeface, size and color, can be changed after the text has been entered. Once you choose another tool, however, or type return, the text becomes part of the image's bitmap.

Hold down the option key to get the text tool to automatically type in the most recent length, angle, or area measurement. Clicking repeatedly with the option key down enters multiple readings, starting with the most recent one.



Eyedropper - Sets the foreground color by “picking up” colors from the image or from the LUT window. Option-click to change the background color. If you are using pseudocolor, double-clicking on a color in the LUT window causes the Color Picker dialog box to be displayed, allowing you to modify that color. In density slicing mode, double-clicking in the LUT window allows you to change the density slice color. Note

 
that, when using this tool, pixel values are displayed in the Info window as RGB components.



Angle Tool - Measures the angle formed by two lines drawn through a point. The angle is displayed interactively in the Info window as the lines are drawn. Use Show Results to display the complete list of angle measurements. The angle tool creates a line selection that can be used to draw the angle using the Draw Boundary command. The value of the angle can be permanently displayed in the image by option-clicking with the text tool.




Cross Hair Tool - Counts objects and records their X-Y coordinates, leaving markers so objects are not counted twice. The markers are drawn in the current foreground color and their size is related to the current line width. Holding down various modifier keys alters the behavior of the cross hair tool. Use the option key to label using the current measurement count. Use the control key to display X-Y coordinates. Use the shift key to decrement the count and leave a marker in the background color. Use the Font, Size and Style sub-menus in the Options menu to vary typeface, size, etc. Use Show Results to display the list of X-Y coordinates. The cross hair tool alters the image pixel data. To avoid this, duplicate the image and work on a copy.



Line Width - Allows you to vary the line width used by the line selection tool, the line drawing tool, the profile plotting tool, or the Draw Boundary command. The lines are 1, 2, 3, 4, 6, or 8 pixels wide. Line widths greater than eight can be specified in the Profile Plot Options dialog box.

WINDOWS

Image Windows

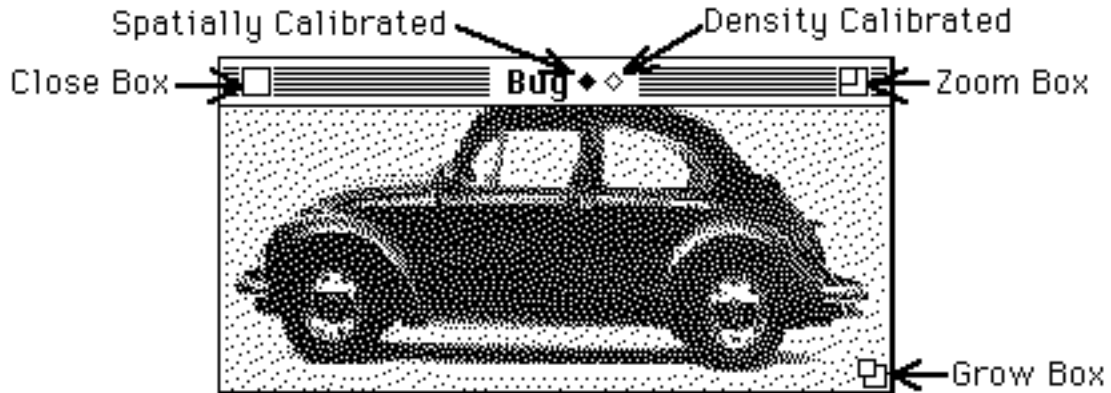


Images are displayed in windows such as the one above. Image windows are created when you use the New, Open, Import or Duplicate commands. Click in the Close Box to close the window and free the memory used to store the image. Hold down the option key when clicking in the Close Box to close all image windows.

Click in the Zoom Box to switch the window to “Scale to Fit Window” mode and make it as large as possible, while still maintaining the same aspect ratio. Restore the window to its original size by clicking again in the Zoom Box, or by using the Unzoom command. Note that the magnifying glass and the grabber tools do not work in Scale to Fit mode.

The Grow Box is used for resizing the window. In Scale to Fit mode, the image will be rescaled to fit any resized window. For magnified images, you can use the Grow Box to make the window larger than its original size.


A black diamond is displayed in the title bar of spatially calibrated images and a white diamond if the image is density calibrated.

Map

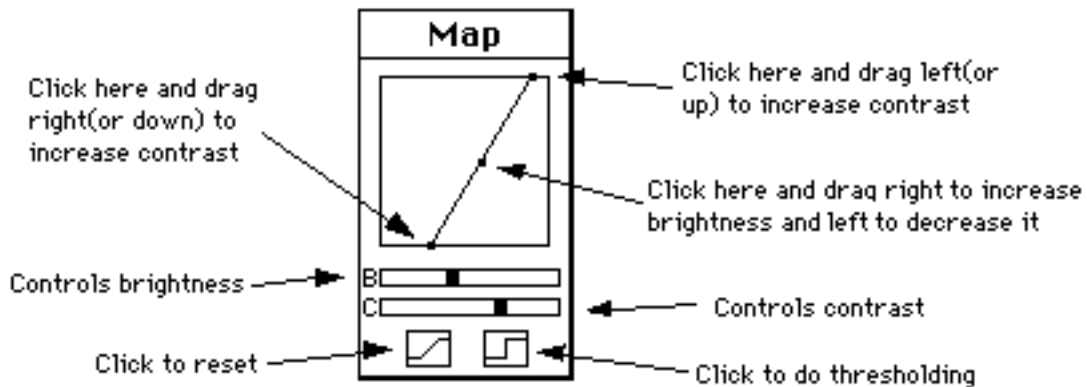

Use the Map window to optimize the brightness and contrast of images by modifying the video look-up table. To vary brightness, click and drag inside the frame. This moves the plot (a piece-wise linear transformation function) horizontally, changing the Y-intercept while maintaining a fixed slope. Brightness can also be altered using the 'B' slide control. To change contrast, click and drag in the margin to move the two end-points that define the function, or use the 'C' slide control. A good strategy for optimizing the contrast of an image is to click (outside the frame) in the lower left hand corner, than drag horizontally to the right until the image starts to saturate. Similarly, click in the upper right hand corner, and drag horizontally to the left.

Histogram

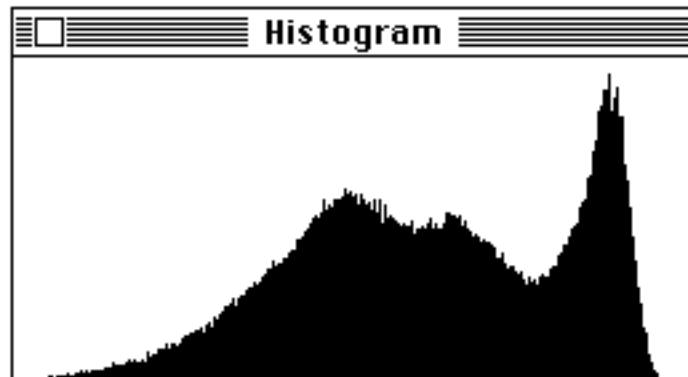

The Histogram window displays the gray value histograms produced by the Show Histogram command. This function shows, for each of the 256 possible gray values, the number of pixels within the selection that have that value. The histogram values are dynamically displayed in the Info window whenever the cursor is over the histogram window. Both the histogram plot and the 256 data values can be copied to the Clipboard (using Copy) whenever the histogram window is active. The data values can also be saved to a text file using the Export command.

Another way to display histograms is to use the macro distributed with *Image* (in "Plotting Macros") that displays histograms in grayscale or color, where each of the 256 columns is drawn in the grayscale or color that that column represents.

LUT




The LUT window displays the contents of the video Look-Up Table (LUT), which *Image* uses to transform each of the 256 possible pixels values into one of 16 million possible screen colors.

Click in the LUT window with any of the drawing tools to “pick up” a new drawing (foreground) color. Click with the eraser, or option-click with any other tool, to pick up a new background color. Select “LUT” in the Save As dialog box to save the look-up table of the current image.

With the LUT tool (the one with double-headed arrow), click and drag near the top or bottom of a color table to adjust the contrast of the current image. Click and drag near the center to adjust brightness. To edit a color in a color table, double-click on it with the eyedropper tool. All 256 entries in the LUT can be rotated by clicking and dragging with the option key held down.

Paste Control

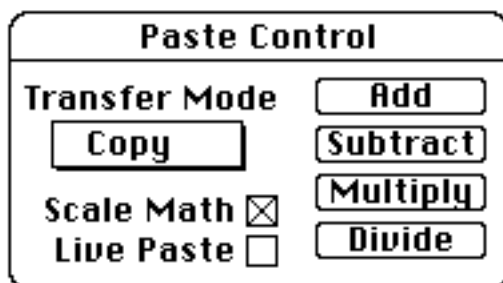

The Paste Control window allows you to control how image selections are pasted, or to do image arithmetic on pasted images. It is only effective during paste operations. Use the *Transfer Mode* pop-up menu to specify the method (*Copy*, *And*, *Or*, *Xor*, *Replace* or *Blend*) used to copy the image during a paste operation. The Paste Control window is activated by selecting Paste Control from the Windows menu, or by typing command-y.

In the default *Copy* mode, pasting occurs normally. When *And*, *Or*, or *Replace* are selected, the selection is copied to the screen using “And”, “Or”, or “Replace with Transparency” modes, respectively, allowing you to see both the object being pasted and the underlying image. When attempting to align two images, it is usually easier if one of the images is first converted to binary using Make Binary, Find Edges, or Dither. Macros are available in the file “More Macros” for rapidly switching among the different transfer modes.

The foreground color is initially set to black and the background color to white whenever *And*, *Or*, or *Replace* are selected, but you can vary the foreground and background colors during the paste operation by clicking (or option-clicking) in the LUT window. This will produce some interesting, and possibly useful, effects. *Or* mode can be used to color objects in binary images created by *Image* or programs such as SuperPaint and MacDraw. Simply select the object you want to color, Copy, switch to *Or* mode, then select a color by clicking in the LUT window.

Replace mode replaces the destination pixel with the source pixel if the source pixel isn't equal to white. *Replace* mode is useful for overlaying colored objects with white backgrounds (e.g. text or plots) onto another image.

In *Blend* mode, destination pixels are replaced with the arithmetic average of the source and destination pixels. It is similar to an *Add* operation with *Scale Math* checked. *Blend* mode, however, works with true color images, and does not terminate the paste operation. Color images to be blended must have the same color palette.


Clicking on *Add*, *Subtract*, *Multiply* or *Divide* causes the specified image arithmetic operation to be performed and terminates the paste operation. For example, clicking on *Subtract* subtracts the selection being pasted from the current window. If *Scale Math* is checked, arithmetic operations are done in two passes. In the first pass, *Image* determines the minimum and maximum gray levels that would result from performing the operation. In the second pass, the image arithmetic is actually performed and the resulting pixel values scaled to the range of 0 to 255. Results are clipped to 0 and 255 if *Scale Math* is not checked. Arithmetic operations are always done on raw pixel values, ignoring any density calibration that may be in effect. *Add*, *Subtract*, *Multiply* and *Divide* only work with rectangular selections.

Subtraction is probably the most useful arithmetic operation. It can be used to subtract the background (the image with features of interest removed from view) from an image. It can also be used to detect differences between two images or for motion analysis.

Selecting *Live Paste* causes the currently pasted selection to use “live” TV camera input. The selection must have been copied from the Camera window and pasted into some other window.

Use the arrow keys to “nudge” the selection currently being pasted in any of four direction by a single pixel. You can get interesting effects, including an embossed look similar to a bas-relief, by using the arrow keys to offset an image by one pixel, and then subtracting it from itself. To see how this works, try *Select All* (command-a), *Copy* (command-c), *Paste* (command-v), down arrow, right arrow, and *Subtract*.

Plot

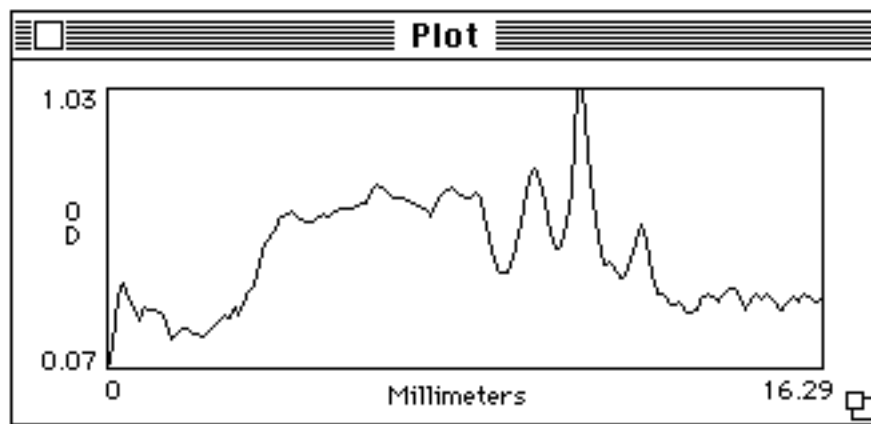


The Plot window is created, or updated, by the density profile tool, the Plot Profile command, or the Calibrate command. Use the Grow Box in the lower right corner of the window to make the plot larger (or smaller). The Plot window must be the currently active window in order to Print or Copy the current plot. To activate the Plot window, click on it, or select Plot from the Windows menu. When active, the Plot window’s title bar will be highlighted (as show above), and Plot will be checked in the Windows menu.

The current plot can be copied to the Clipboard using the Copy command. Once on the Clipboard, the plot can be pasted into an image window, or into another application. The plot is copied to the Clipboard in both graphic and text formats. The Graphic form will be used if you paste into a program that deals primarily with graphics, such as MacDraw. The text form (i.e. the pixel values) will be used if you paste into a program that is text oriented, such as Excel.

Whenever the cursor is over the Plot window, X (the pixel location) and Y (the pixel value) coordinate values are continuously displayed in the Info window. In the case of calibration plots, X is the uncalibrated pixel value (in the range 0-255) and Y is the calibrated value. For straight line selections, holding down the mouse button in the plot window causes a cross hair cursor to appear in the corresponding part of the image.

Several aspects of profile plots, such as y-axis scaling and plot size, can be changed using the Profile Plot Options command.

Info

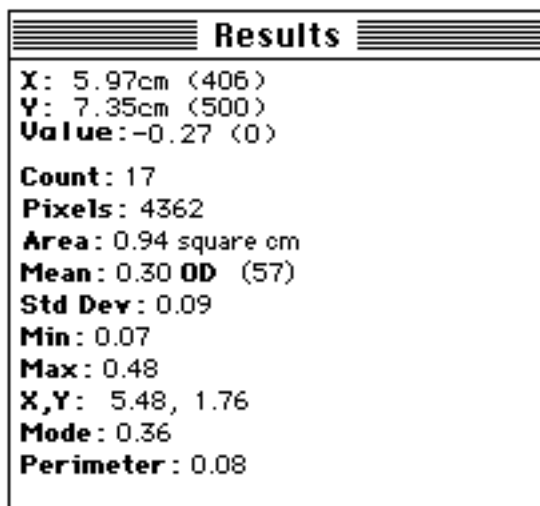

The Info window displays the current cursor position and value, measurement results, and status messages. The values displayed at top of the window (e.g. *X*, *Y* and *Value*) are dynamically updated and have different meanings depending on which window the cursor is in.

Image Window - *X* and *Y* are the current cursor coordinates, where the origin is at the lower left-hand corner and positive *X* is to the right and positive *Y* is up. (Note, you can change the origin to the upper left using the Preferences command.) *Value* is the gray value of the pixel at the current *X*-*Y* coordinates. Gray values range from 0 (white) to 255 (black). For density calibrated images, *Value* is the calibrated pixel value and the gray value is shown in parenthesis. In the case of color images, *Value* is the index used by the color look-up table.

FFT Window - If the mouse is over an active frequency domain (FFT) window, its location is displayed in polar coordinates. The angle is expressed in degrees ($^{\circ}$), while the radius is expressed in either pixels per cycle (p/c) or, if a spatial scale calibration has been made using Set Scale, in [units] per cycle (e.g. mm/c).

LUT Window - *Index* is the look-up table index at the cursor location. *RGB* are the associated red, green, and blue brightness values in the look-up table. You can use this information to help you set the foreground or background grayscale, or color, to a specific grayscale value or index. When using the LUT tool, *Lower* and *Upper* are the lower and upper LUT indexes of the current grayscale or color look-up table.

Map Window - When manipulating the Map, *Lower* and *Upper* are the lower and upper LUT indexes of the current grayscale or color look-up table.

Histogram Window - *X* is the current x-axis (grayscale) value and *Y* is the number of pixels in the selection which have that value.


Plot Window - *X* is the pixel location and *Y* is the corresponding plot y value. For calibration plots, *X* is the uncalibrated pixel value (in the range 0-255) and *Y* is the calibrated value.

TECHNIQUES

Analyzing Electrophoretic Gels

The following is one possible procedure for using *Image* to analyze a one-dimensional electrophoretic gel. It also demonstrates some of the less obvious features in *Image*, and also a few shortcuts. Note that this technique cannot be used to compare bands on different gels unless the gels are calibrated to known standards. Any results obtained using this procedure should not be trusted without testing using standards with known concentrations or by comparing with results obtained using a densitometer.

A 23 page manual that describes this procedure in much greater detail is available from the NIH Image Web site (<http://rsb.info.nih.gov/nih-image/>).

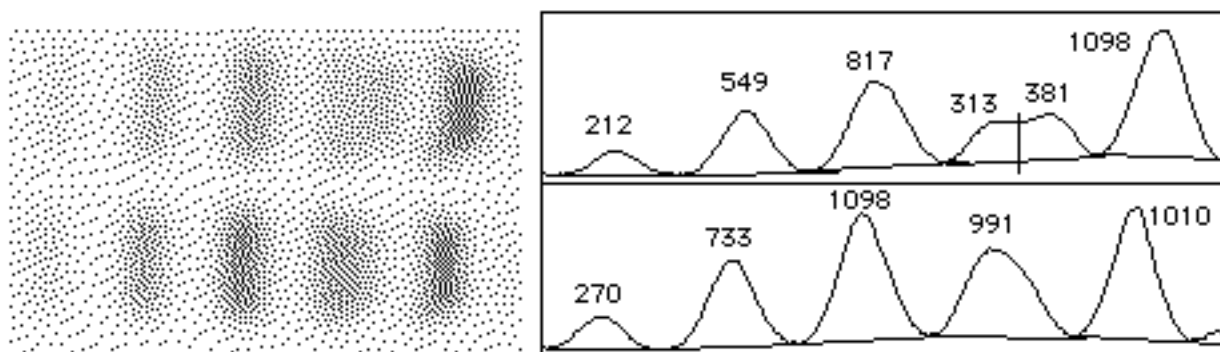

- 1) Use the Calibrate command to calibrate the image to a calibrated optical density step tablet. Failure to do this could result in incorrect and misleading measurements.
- 2) If the commands *Mark First Lane*, *Mark Next Lane* and *Plot Lanes* are not shown in the Special menu then use *Load Macros* to open the file "Gel Plotting Macros" in the Macros folder.
- 3) Use the rectangular selection tool to outline the first lane. This is the left most lane for vertically oriented lanes and the top lane for horizontal lanes.
- 4) Select *Mark First Lane* in the Special menu. A copy of the image will be displayed with the first lane outlined.
- 5) Move the rectangular selection (by clicking inside it and dragging) and outline (using *Mark Next Lane*) each of the other lanes in succession.
- 6) Use *Plot Lanes* to generate the lane profile plots.
- 7) Use the line drawing tool to draw base lines and drop lines so that each peak defines a closed area as shown above. Note that you can hold the shift key down to constrain lines to be vertical.
- 8) Measure the areas of the peaks by clicking inside each one in succession with the wand tool.
- 9) Option-click with the text tool to automatically label the peaks, in reverse order, with the area measurements. The area measurements are also recorded in tabular


form, and can be displayed (Show Results) printed (Print) or exported (Export) to a spreadsheet.

Plot Lanes may fail if it tries to create a plot window that is larger than the Undo buffer. If this happens, you will need to increase *Undo & Clipboard Buffer Size* in the Preferences dialog box, Record Preferences, and restart *Image*.

Note that this macro package changes several of the settings in the Analysis/Options dialog box. It enables *Wand Auto-Measure* so that the area is automatically measured when you click with the wand tool under a peak. It disables *Label Particles* so that peaks are not automatically numbered by the wand tool. It enables *Include Interior Holes*. If this were not done, the wand tool would measure zero area. It enables *Adjust Areas* to compensate for the tendency of the wand tool to underestimate the size of small peaks. The size of small peaks is underestimated because some of the actual peak area is represented on the screen by the pixels which define the boundary, and, on small peaks, the ratio of boundary pixels to interior pixels is higher.

Using Selections

Selections are user defined regions or lines within an image that can be measured, filtered or edited. Region selections are created using the rectangular, oval, polygonal or freehand selection tools. Line selections are created using the line selection tool, which has three forms selected from a pop-up menu. Line selections can be straight, freehand or segmented. Selections are outlined by a moving marquee, sometimes referred to as the “marching ants”. Only one selection can be active at a time.

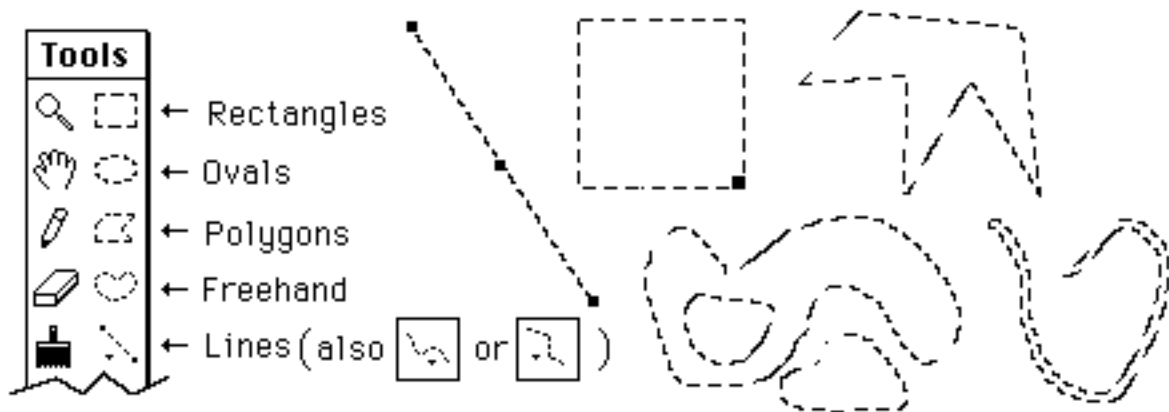

Moving a Selection. Selections can be moved by clicking inside them and dragging. The Info window displays the coordinates of the upper left corner of the selection (or the bounding rectangle for non-rectangular selections) as it is being moved. Notice that the cursor changes to an arrow when it is within the selection. Straight line selections can be moved using the handle (small black box) in the center of the line. If you want to move the *contents* of a selection, rather than the selection itself, do a Copy (command-c), a Paste (command-v), then click within the selection and drag. Use the shift key to constrain movement to be horizontal or vertical. Use the arrow keys to nudge the selection one pixel at a time in any direction.

Stretching a Selection. Rectangular selections can be stretched using the handle (small black box) in the lower right corner. The contents of the selection will also be stretched if the selection is the result of a paste operation. The width and height are displayed in the Info window as the selection is stretched. Use the arrow keys with the

option key down to stretch a rectangular selection one pixel at a time. Straight line selections can be stretched and repositioned using the handles at the ends of the line.

Adding to a Selection. Hold down the control key (notice the little plus sign in the cursor) while making a selection and any new selection you create will be added to the current selection. This feature allows you to edit existing selections, or to create discontinuous selections. The shift key can also be used to extend selections when using either the polygon or freehand tool. Note that it is not possible to measure the perimeter of selections that have been edited in this way except by doing a Draw Boundary and using the wand tool to recreate the selection. Also note that line selections cannot be added to or subtracted from existing selections, but freehand and polygon selections can be added to or subtracted from line selections.

Subtracting from a Selection. Hold down the option key (notice the little minus sign) while making a selection and any new selection you create will be subtracted from the current selection. This feature allows you to edit existing selections, or to create selections with holes in them.

Deleting a Selection. To delete a selection, choose any of the selection tools and click outside the selection. Alternately, choose any tool other than one of the selection tools, the magnifying glass, or the grabber hand. Use Restore Selection to bring the selection back after you have deleted it.

Transferring a Selection. A selection can be transferred from one image window to another using the Restore Selection command. Simply activate the destination window and use the Restore Selection command. The Next Window command (command-``) can be used to activate a series of windows in sequence.

Saving and Restoring Selections.

Selections can be saved to disk using the Save As command (with the Outline option) and restored using Open. Multiple selections can be saved by transferring them to a blank (white) window, using the Draw Boundary command (make sure the boundary is black) for each selection, and saving the resulting binary image as a PICT file. To restore a selection, open the PICT file and click to the left of one of the drawn outlines with the wand tool.

USING *IMAGE* WITH FLATBED SCANNERS

The Acquire command provides direct support for most scanners that have Photoshop plug-ins. Three scanning modes are supported: 8-bit grayscale, 8-bit indexed color and 24-bit color. 24-bit color images are stored as a three-slice (red, green and blue) stacks and the RGB to 8-bit Color command is automatically called to generate an 8-bit color version of the image.

A list of scanners known to work with *Image* is included with the description of the Acquire command. The plug-in that comes with the La Cie Silver scanner is one that works particularly well with *Image*.

You need be careful not to generate images that are too large for *Image* to handle. *Image* was optimized for the 640 x 480 (300K) images produced by frame grabber cards, whereas an 8 x 10 inch page scanned at 300 DPI is 2400 x 3000 pixels (7.2MB), much larger than *Image* was designed to handle. The following table gives suggested maximum scan areas for different scanning resolutions and monitor sizes. *Image* can handle scans somewhat larger than these, but you will probably run into problems if you greatly exceed these recommended sizes.


Monitor	75 DPI	150 DPI	300 DPI
14" (640x480)	8" x 6"	4" x 3"	2" x 1.5"
17" (832x624)	11" x 8"	5.5" x 4"	3" x 2"
20" (1152x870)	14" x 11"	7" x 5.5"	3.5" x 2.75"

Use the Preferences command to increase the size of the Undo and Clipboard buffers to 600K when working with scans of the size suggested for 17" monitors, and to 1000K for 20" monitors. Note that making the Undo and Clipboard buffers larger than necessary can require a lot of extra memory. For example, increasing the buffer sizes from 1000K to 1500K increases *Image's* memory requirements by 1MB.

You should probably stick to 75 DPI unless scanning small selections. 75 DPI also has the advantage of producing images that are near actual size when displayed or printed, since nominal screen and printer resolution on the Macintosh is 72 DPI.

RECOVERING DATA FROM LINE PLOTS

Image can be used to recover numeric coordinate data from printed line plots using the following procedure.

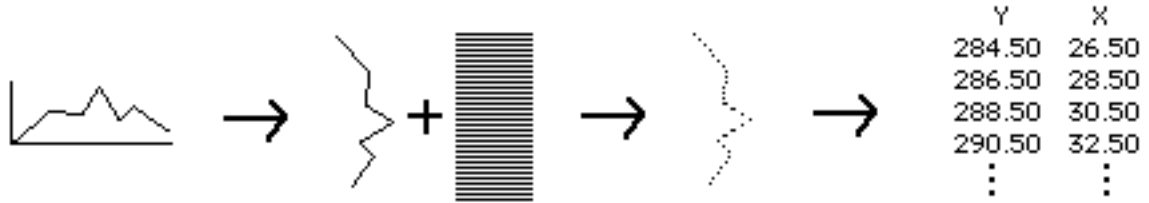

- 1) Digitize the plot using a TV camera or flat bed scanner.
- 2) Edit the plot to remove the x-axis, y-axis and labels.
- 3) Rotate the plot 90° clock-wise.
- 4) Create a line mask similar to the one above using the line drawing tool and repeated use of Copy and Paste.
- 5) Convert the line plot to a scatter plot by ANDing the plot with the mask using the Image Math command.
- 6) Select *X-Y Center* in the Analyze/Options dialog box.
- 7) Deselect *Invert Y-Coordinates* in the Preferences dialog box.
- 8) Use the Analyze Particles command to record the X-Y coordinates.

Alternately, and much easier, use the macros in the file “Line Plots->Data”, which automates most of these steps. Use the wand tool to outline the plot (click to the left of the curve), then use the Clear Outside macro to erase everything except the plot. Next, use Convert Line Plot to Points, which will perform steps 3-8 above. It assumes the active window contains a binary image and you have selected, using the rectangular selection tool, a single isolated line plot drawn on a white background. Use the Plot Points macro to display the resulting coordinate data.

USING THE OPTION KEY

Holding the option key down when using many of the commands and tools in *Image* causes alternative functions to be performed. When using menu commands, you only need to hold the option key down when you first select the command.

Starting *Image* - Use QuickCapture card instead of Scion card, assuming both are installed

Menu Command Options

Close - Changes to Close All

Save - Changes to Save All

Export (Measurements) - Exports measurement results with column and row headers

Copy (Measurements) - Copy measurement results with column and row headers

Rotate Left, Rotate Right - Erase before rotating

Smooth - More (unweighted) smoothing

Sharpen - Increased sharpening

Analyze Particles - Omit dialog box

Calibrate - Allows you to edit the measured values

Stop Capturing - Omit shading correction

Average Frames - Omit dialog box

Animate - Erase screen to background color before doing animation

Photo Mode - Move window to top of screen before erasing screen

Cascade Images - Move all image windows to the “home” position (upper left corner)

Tile Images - Use “Scale to Fit” mode to draw image windows

Tool Options

Magnifying Glass - Zoom out instead of zooming in

Grabber - Scroll all other tiled windows to the same position

Text Tool - Draw results of area or length measurements

Eraser - Pick up background color from image window

LUT Tool - Rotate the LUT

Brush - Pick up foreground color from image window

Eyedropper - Select background color rather than foreground color

FREQUENTLY ASKED QUESTIONS

How do I (un)subscribe to the NIH Image mailing list?

The NIH Image mailing list is a forum to post and answer questions concerning NIH Image and its use. There are over a thousand subscribers to the list. Subscription and all mail routing is done via a listproc server at the University of Minnesota. Subscribe to the NIH Image mailing list by sending a message containing the line:

```
subscribe nih-image [your real name]
```

Note: substitute subscribe or unsubscribe as appropriate Send this message to listproc@soils.umn.edu There is a separate email address (nih-image@soils.umn.edu) for posting your question or answer regarding NIH Image.

Is there a way to search posts for an answer to my questions?

You can do a keyword searches of the NIH Image mailing list archives at:

```
gopher://gopher.soils.umn.edu
```

Note: you can narrow searches by combining keywords using AND.

How do I post a question on the NIH Image mailing list?

Send a message to the list (you must be subscribed) at the address:

```
nih-image@soils.umn.edu
```

Your message will be routed to each and every person on the list. You should, therefore, consider the nature of your post and by all means do not send email subscription requests to this address.

I don't want a ton of email but I want to subscribe, how?

You can set your subscription to "digest" mode, which collects all the daily messages (sometimes there will be very many) and sends it out once per day. Send an email message to listproc@soils.umn.edu with the command:

```
set nih-image mail digest
```

To reset your subscription to "trickle", or many mailings mode send:

```
set nih-image mail ack
```

Does NIH Image run on a PC?

Scion Corporation is porting NIH Image to Windows 95. See the "What's New?" section of the NIH Image home page for more information. NIH Image also runs under DOS, Linux, or NextStep using the Executor Mac emulator from Ardi (<http://www.ardi.com>).

Is there a UNIX version of NIH Image?

NIH Image has not been ported to UNIX but it runs on SUN and HP workstations using Apple's Mac emulator for UNIX called Macintosh Application Environment (MAE).

Information about MAE is available from "<http://www.mae.apple.com>".

My Mac has 128MB of RAM but the NIH Image About Box shows only 2500K free. Why is that?

You need to allocate more memory to NIH Image. Click (once) on the NIH Image icon (a microscope), select the Finder's Get Info command, and increase "Preferred size".

Why does the desktop change color when I run NIH Image?

NIH Image uses all but two of the 256 available screen colors when the monitor is set to 256 colors. The two "colors" that Image never changes are white (0) and black (255). Objects on the screen that are not black and white are likely to change color when NIH Image is being used. You can avoid this problem by selecting "Desktop Friendly" in Preferences, but this reduces the number of grays displayed to 16. If your hardware supports it, you can also avoid this problem by switching the monitor to "thousands" or "millions" of colors.

Why does text look ragged when I print an image on a laser printer?

NIH Image treats text as if it were part of the bitmapped image. To create high quality text for laser printer output and slide makers you need to export the image to a multi-layer, object-oriented drawing program, such as ClarisDraw or PowerPoint.

In NIH Image, white is 0 and black is 255, which is the opposite of what I'm used to. How can I change this?

Check "Invert Pixel Values" in Preferences. This sets up an inverting density calibration function, causing pixels values displayed in the Info and Results windows to be inverted.

Why does the Paste command sometimes get dimmed out?

Images copied to the clipboard are stored in the Clipboard buffer. In some situations, such as filtering, NIH Image has to use the Clipboard buffer for internal operations. When this happens, the Paste command gets dimmed out.

How can I create a composite color image?

You can't normally combine two images that have different LUTs, but if you check "Keep LUT" when you open the second image (which must be stored as a PICT file) its pixel values will be remapped to conform to the LUT of the first image. You will then be able to successfully Copy and Paste, since both images have the same LUT.

How can I convert a stack to a QuickTime movie?

NIH Image 1.61 and later can save a stack as a QuickTime movie.

How should I cite NIH Image

Published research assisted by NIH Image should use a statement similar to the following in the materials and methods section "... analysis performed on a Macintosh computer using the public domain NIH Image program (developed at the U.S. National Institutes of Health and available on the Internet at <http://rsb.info.nih.gov/nih-image/>)".

Is there an NIH Image Home Page?

The NIH Image home page provides on-line documentation, links to download the

software, tutorials, links to other image processing software, an archive to search for answers to questions and more. The NIH Image home page is located at:

<http://rsb.info.nih.gov/nih-image/>

How do I download NIH Image using a Web browser?

The latest version of NIH Image, documentation, source code, macros and more can be downloaded by going to NIH Image Home Page and following the "Download" link.

How do I download the latest version of NIH Image via FTP?

The latest version of NIH Image, documentation, source code, macros and more can be found on the anonymous ftp server [zippy.nimh.nih.gov](ftp://zippy.nimh.nih.gov). Choose the directory `/pub/nih-image`. The best way to download the program is to use the user-friendly Macintosh FTP client Fetch.

A. Macro Programming Language

Image's built-in macro programming language can be used to automate complex or repetitive tasks. Macros are similar to Pascal procedures, except the procedure keyword is replaced by "macro" and the procedure heading is a text string that becomes a command in the Special menu when the macro is loaded. Macros are stored in text files that may also contain Pascal-like functions and procedures. Macro files are created and edited using *Image's* built-in text editor. The best way to learn how to write your own macros is by studying and customizing the many example macros distributed with *Image* in the Macros folder.

The documentation provided here assumes the reader has some Pascal programming experience. If this is not the case, you will probably need to read an introductory Pascal text book such as "Programming in Pascal" by Peter Grogono, or "Oh! Pascal" by Doug Cooper and Michael Clancy. There is also an "alternative" macro reference manual available from ftp://zippy.nimh.nih.gov/pub/nih-image/documents/macro_notes.hqx.

Here is an example macro file containing one macro and a function called by that macro. You can try the macro by copying the indented text to the Clipboard, pasting it into a blank NIH Image text window, selecting "Load Macros from Window" from the Special menu, and then selecting "Do Exponentiation... [P]" from the Special menu.

```
{Example macro file.}
{Comments go between curly braces.}

var
  x,y,z: integer; {Global variables}

function Power(x, n: real): real;
{raise x to the nth power}
begin
  power := exp(ln(x) * n);
end;

macro 'Do Exponentiation... [P]';
var
  base, ex: real;
begin
  base := GetNumber('Base:', 2);
  ex := GetNumber('Exponent:', 5);
  PutMessage(power(base, ex):6:3);
```

end;

Global variables (optional) are defined at the beginning of the file before any functions, procedures or macros. Text within curly braces ({ }) is treated as a comment. Macro files cannot be larger than 32K.

The text in quotes following the keyword Macro is passed unchanged to the Macintosh Menu Manager, becoming a new command at the bottom of the Special menu. Macros may be assigned to keys by enclosing the key character in brackets. For example, you can execute the "Do Exponentiation..." macro by pressing the "P" key. Use "F1", "F2", etc. to assign macros to function keys. A few characters (';', '^', '!', '<', '/', '(') have special meaning to the Menu Manager, and should normally be avoided. You can use / to assign a command key equivalent to a macro, e.g., 'Test Macro /6'. Use '(-' as the name of an empty macro to create a dividing line in the Special menu.

Functions and procedures may not be nested inside other functions and procedures, or inside macros. However, unlike Pascal, variables declared in a calling procedure or macro are made available to a called procedure. Function and procedure names must be unique in the first twelve characters.

Key Words

MACRO FUNCTION PROCEDURE BEGIN END VAR FOR TO DO
IF THEN ELSE WHILE REPEAT UNTIL

Operators

+ - * / DIV MOD :=
= < > <> <= >= AND OR NOT

Types

INTEGER REAL BOOLEAN STRING

Both integer and real variables are stored internally in extended precision real format, which has a range of 1.9×10^{-495} to 1.1×10^{4932} and 19-20 digits precision. Real numbers are automatically converted (by rounding) to integer without warning as needed. Strings have a maximum length of 255 characters and string comparisons are case insensitive. Variable names must be unique within the first twelve characters.

Built-in Arrays

Several one-dimensional arrays are predefined. User-defined arrays, however, are not supported. Measurement results can be accessed using arrays named *rArea*, *rMean*, *rStdDev*, *rX*, *rY*, *rMin*, *rMax*, *rLength*, *rMajor*, *rMinor*, and *rAngle*. These arrays use indexes ranging from 1 to *Max Measurements*, where the value of *Max Measurements* can be changed in the Options dialog box. Use the *rCount* function to get the value of the current measurement counter and *SetCounter(n)* to change it.

Two predefined arrays (*rUser1* and *rUser2*) can be used to record and display derived results. Unlike the other results arrays, *rUser1* and *rUser2* are reserved for use by macros, and are never written to by any of the commands in *Image*. The column headings used for User1 and User2 can be set from within macros using the routines *SetUser1Label('Label')* and *SetUser2Label('Label')*. After computing a derived result, use *UpdateResults* to redisplay the last line in the results table or *ShowResults* to

redisplay the entire table. Use *SetCounter* to control the number of lines displayed by *ShowResults*. Several example macros distributed with *Image* (in “Measurement Macros”) use these arrays to display derived results.

Histogram values are available using the read-only array *Histogram*, which accepts indexes in the range 0 to 255. For example, after using *Measure*, *histogram[0]* returns the number of white pixels.

Three built-in read/write arrays (*RedLUT*, *GreenLUT*, and *BlueLut*) provide access to the video lookup table (LUT) associated with each open image. These arrays use indexes in the range 0-255 and return intensity values in the range 0-255. Use the *UpdateLUT* command to redraw the LUT window using newly modified LUT array values. Several macros (in “LUT Macros”) that use these arrays are distributed with *Image*, including a macro to export the current LUT as a text file, macros to load various functions into the LUT, a macro to plot the current LUT, and a macro to load a grayscale step function (“Posterize”) into the LUT.

The built-in array *LineBuffer* provides access to the internal line buffer used by *GetRow*, *PutRow*, *GetColumn* and *PutColumn*. *LineBuffer* uses indexes in the range of 0-4095 and returns pixel values in the range 0-255. Using *GetRow*, *LineBuffer[x]* and *PutRow* to do pixel-by-pixel processing is up to twice as fast as using *GetPixel* and *PutPixel*, but is still at least 100 time slower than using compiled code.

The X-Y coordinates of the current selection are available from within macros using the built-in arrays *xCoordinates[n]* and *yCoordinates[n]*. The number of coordinates can be obtained using the macro function *nCoordinates*. The coordinates are relative to the upper left corner of the selection’s bounding rectangle. For an example, look at the macro “Plot X-Y Coordinates” in “Plotting Macros”.

A four element built-in array (*Scion*) allows access to the Scion LG-3’s I/O registers. The four elements are defined as follows:

<i>Scion</i> [1]	8-bit DAC(A)	read/write
<i>Scion</i> [2]	8-bit DAC(B)	read/write
<i>Scion</i> [3]	8-bit Control Reg 1	read only
<i>Scion</i> [4]	4 digital out bits	read/write

Example macros for setting and reading the LG-3 I/O registers are available in the file “Video”.

The data values generated by the *PlotProfile* and *GetPlotData* macro commands are stored in a built-in real array named *PlotData*, which uses indexes in the range 0-4095. The macro “Plot Profile” in “Plotting Macros” illustrates how to use *GetPlotData* and *PlotData*.

Here is a summary of the built-in arrays.

Name	Index Range	Value Range	Permission
results arrays	1 - Max Meas.	real	read/write
<i>Histogram</i>	0 - 255	pos. integer	read only
<i>RedLUT</i>	0 - 255	0 - 255	read/write
<i>GreenLUT</i>	0 - 255	0 - 255	read/write
<i>BlueLUT</i>	0 - 255	0 - 255	read/write
<i>LineBuffer</i>	0 - 4095	0 - 255	read/write
<i>xCoordinates</i>	1 - 10000	real	read only
<i>yCoordinates</i>	1 - 10000	real	read only
<i>Scion</i>	1 - 4	0 - 255	varies

PlotData 0 - 4095 real read only

Built-in Commands and Functions

The macro language has more than 200 built-in commands and functions. Macro commands corresponding to menu commands are listed below under the heading for the appropriate menu. Note that ROI means Region of Interest.

File Menu

MakeNewWindow('Name')

Creates a new image window. Use SetNewSize to specify the size of the new window.

SetNewSize(width,height)

Specifies *width* and *height* of new image windows.

NewTextWindow('Name',w,h)

Creates a new text window with the title '*Name*'. *W* and *h* (optional) specify the width and height of the new window.

Open('File Name')

Opens the specified image file.

SetImport('string')

Set various file Import options, where *string* contains some combination of: 'TIFF', 'DICOM', 'MCID', 'Palette', 'Text', 'Custom', '8-bits', '16-bits Unsigned', '16-bits Signed', 'Swap Bytes', 'Auto-Scale', 'Fixed Scale', 'Calibrate', 'Open All' and 'Import'.

SetCustom(width,height,offset,slices)

Specifies the *width*, *height*, *offset*, and number of *slices* for imported files. The *slices* argument is optional.

SetImportMinMax(min,max)

Disables auto-scaling and fixes the range for imported 16-bit images and images in text (ASCII) format.

Import('File Name')

Imports the specified file using parameters specified by SetImport, SetCustom and SetImportMinMax.

Close

Closes the active image, text, profile plot, Histogram or Results window.

Dispose

Similar to Close, but user is never prompted to save changes.

DisposeAll

Closes all open image windows without prompting to ask if changes should be saved.

Save

Resaves the contents of the current image or text window.

SaveAll

Saves all open image windows.

SetSaveAs('mode')

Sets various file Save options, where '*mode*' is one of: 'TIFF', 'RGB TIFF', 'PICT', 'MacPaint', 'PICS', 'LUT' or 'Outline'.

SaveAs('name')

Saves the current image using the specified file name. Use SetSave to specify the format. Uses the window title as the file name when saving a text file or if SaveAs is used with no argument. When saving images, the dialog box should only be displayed the first time SaveAs is called within a macro. For both image and text windows, '*name*' can be a full folder path (e.g., 'HD400:Images:MyImage'). In this case, no dialog box is displayed.

SetExport('mode')

Sets various file Export options, where *mode* is one of: 'Raw', 'MCID', 'Text', 'LUT', 'Measurements', 'Plot Values', 'Histogram Values' or 'XY Coordinates'

Export('name')

Use SetExport to specify what to export. Similar to SaveAs, the dialog box is not displayed more than once per macro and full folder paths are allowed.

RevertToSaved

Restores the the previously saved version of the current image from disk.

Duplicate('Window Title')

Creates a new image window using the specified name and copies the contents of the current selection to the new window.

GetInfo

Creates a new image window that displays information about the current image window.

Acquire('Plug-in Name')

Loads and runs a Photoshop compatible acquisition plug-in. The plug-in is assumed to be in the Plug-ins folder.

CallExport('Plug-in Name')

Loads and runs the specified export plug-in.

Print

Prints the active image (or selection), text, Plot, Results or Histogram window.

Edit Menu**Undo**

Reverses the effect of the last undoable operation.

Copy

Copies contents of the current ROI to the Clipboard.

CopyResults

Copies measurement results to Clipboard.

Paste

Pastes into current ROI if Clipboard object and ROI have the same dimensions, otherwise, pastes into center of image.

PasteLive

Pastes “live” from video (frame grabber) source into a selection. Note that the destination window cannot be larger than the Camera window.

Clear

Erases current ROI to background color.

Fill

Fills current ROI with foreground color.

Invert

Inverts image or ROI, i.e., $value = 255 - value$ for all pixels in the image or ROI.

DrawBoundary

Outlines current ROI using foreground color. Use `SetLineWidth` to control width of outline.

DrawScale

Draws a grayscale ramp in the current rectangular ROI.

SelectAll

Creates a rectangular ROI consisting of the entire image.

SetScaling('string')

Sets `ScaleAndRotate` options, where *string* contains some combination of: 'Nearest', 'Bilinear', 'New Window', 'Same Window' or 'Interactive'.

ScaleAndRotate(xscale,yscale,angle)

Scales and/or rotates the current rectangular ROI, where $0.05 \leq xscale, yscale \leq 25.0$ and $-180 \leq angle \leq 180$.

RotateLeft(b)

Rotates the current image or rectangular ROI counter-clockwise 90 degrees. Creates a new window if *b* is true.

RotateRight(b)

Rotates the current image or rectangular ROI clockwise 90 degrees. Creates a new window if *b* is true.

FlipVertical

Vertically inverts the current rectangular image or ROI.

FlipHorizontal

Horizontally inverts the current rectangular image or ROI.

Options Menu

InvertLUT

Inverts the video look-up table.

SetPalette(string, ExtraColors)

Loads a new look-up table, where *string* is one of: 'Grayscale', 'PseudoColor', 'System Palette', 'Rainbow' or 'Spectrum'. *ExtraColors* (optional) is the number (0-6) of LUT entries reserved for extra colors.

SetFont('Font name')

Specifies the typeface used for drawing text, where '*Font Name*' is 'Geneva', 'Monoco', 'Helvetica', 'Times', etc.

SetFontSize(size)

Sets font size in points, where $6 \leq \text{size} \leq 720$.

SetText(string)

Specifies text style, where *string* contains some combination of: 'Bold', 'Italic', 'Underline', 'Outline', 'Shadow', 'Left Justified', 'Right Justified', 'Centered', 'No Background' or 'With Background'.

ScaleConvolutions(b)

Sets or resets Scale Convolutions flag in Preferences, where $b = \text{true}$ or false .

InvertY(b)

Invert Y-coordinates if b is true.

SetPlotLabels(b)

Specifies whether or not profile plots are to be labeled, where, $b = \text{true}$ or false .

SetPlotScale(min,max)

Set *min* and *max* to zero for auto-scaling.

SetPlotSize(width,height)

Set *width* and *height* to zero for auto-sizing of plots.

SetThreshold(level)

Sets the threshold, where $0 \leq \text{level} \leq 255$. `SetThreshold(-1)` disables thresholding.

AutoThreshold

Set threshold level to an automatically determined value.

SetDensitySlice(lower,upper)

Sets the lower and upper threshold levels, where $1 \leq \text{lower}, \text{upper} \leq 254$.
`SetDensitySlice(255,255)` enables density slicing without changing the levels.
`SetDensitySlice(0,0)` disables density slicing.

GetThresholds(lower,upper)

In density slicing mode, returns the lower and upper thresholds. In thresholding mode, lower is set to the threshold and upper is set to 255. Otherwise, both are set to zero.

PropagateLUT

Propagates current LUT to all other open images.

PropagateSpatial

Propagates current spatial calibration to all other open images.

PropagateDensity

Propagates current density calibration to all other open images.

Process Menu

Filter('name')

Runs the specified filter, where '*name*' is one of the following: 'smooth', 'smooth more', 'sharpen', 'sharpen more', 'find edges' (or 'sobel'), 'median', 'max', 'min' or 'dither'.

Shadow('direction')

Set '*direction*' (optional) to 'N', 'NE', 'E', 'SE', 'S', 'SW', 'W' or 'NW'.

Convolve('Kernel file name')

Note that the name can be a directory path such as 'HD80:Image:Kernels:Smooth'.

CallFilter('name')

Runs the specified filter plug-in, which is assumed to be in the Plug-ins folder.

MakeBinary

Converts the current grayscale image to binary.

Erode

Removes pixels from the edges of objects.

Dilate

Adds pixels to the edges of objects.

SetBinaryCount(n)

See description of Set Count command.

Outline

Generates one pixel wide object outlines.

Skeletonize

Reduces objects to single pixel wide skeletons.

AddConstant(n)

Adds n to the current image or rectangular selection, where $-255 \leq n \leq 255$.

MultiplyByConstant(n)

Multiplies the current image or rectangular selection by n , where $0.0 \leq n \leq 255.0$.

ImageMath('op',pic1,pic2,scale,offset,result)

Where 'op' is one of 'add', 'sub', 'mul', 'div', 'and', 'or', 'xor', 'min', 'max' or 'copy'. Add the keyword 'real' (e.g. 'add real') to generate a 32-bit real result. *Pic1* and *pic2* are pic numbers or pid numbers. ImageMath performs the specified operation, the result is multiplied by *scale*, *offset* is added and, if *real* wasn't specified, the final result is clipped to 8-bits. The arithmetic operation is performed in the upper left corner of each image using the largest common rectangle. *Result* can be either a string or a pid number. If it's a string, a window with that name is created to store the result, otherwise the result is stored in the image specified by the pid number.

FFT('foreward')

Generates a Fourier transform of a square, power of two size image. The image can be either 8-bit or real. For real images, the transformation is done in-place.

FFT('inverse')

Does an in-place inverse transform with black or white regions in the 8-bit power spectrum used as a mask to generate a filter. Duplicates the behavior of the "Inverse FFT" menu command.

FFT('inverse with mask')

Same as FFT('inverse').

FFT('inverse with filter')

Uses the 8-bit grayscale component of the FFT window as a filter that the frequency domain image is multiplied by prior to retransformation. This means that the power spectrum must be replaced by a grayscale filter before retransformation. The "High Pass" and "Low Pass" macros in "FFT Macros" use this variation of the FFT command.

FFT('inverse without filter')

No masking or filtering is done before retransformation.

FFT('Display Power Spectrum')

Recomputes the power spectrum.

FFT('Swap Quadrants')

Swaps quadrants 1 and 3 and quadrants 2 and 4 of the current 8-bit image.

SubtractBackground('str',radius)

Where 'str' is one of: '1D Horizontal', '1D Vertical', '2D Rolling Ball' or '2D Remove Streaks'. Add 'faster' to 'str' (e.g. '2D Rolling Ball (faster)') for faster operation.

ApplyLUT

Transforms the pixel data using the current look-up table.

EnhanceContrast

Does a histogram stretch on the LUT. Does not alter pixel values.

ChangeValues(v1,v2,v3)

Changes pixels with a value in the range $v1-v2$ to $v3$.

Analyze Menu

Measure

Results are stored in the results arrays `rArea[]`, `rMean[]`, etc. and in the `Histogram[]` array.

GetResults(*n,mean,mode,min,max*)
 Use after Measure. Returns the pixel count, the mean pixel value, the most frequently occurring pixel value, and the minimum and maximum pixel values. Values are always uncalibrated. Use `cValue` function to calibrate them.

AnalyzeParticles('options')
 Does particle analysis, where '*options*' (optional) contains some combination of 'label', 'outline', 'ignore', 'include' and 'reset'. Any option not listed is disabled. Use "AnalyzeParticles('dialog')" to display the dialog box using the existing settings.

SetParticleSize(*min,max*)
 Particles smaller than *minimum* (pixels) and larger than *maximum* (pixels) will be ignored by AnalyzeParticles.

ShowResults
 Displays the Results window.

ShowHistogram
 Generates a density histogram and displays it in the Histogram window.

RestoreRoi
 Same as the Restore Selection menu command.

MarkSelection
 Same as the Label Selection menu command.

SetOptions('string')
 Specifies measurement options as listed in the Options dialog box. '*String*' should contain some combination of 'Area', 'Mean', 'Std. Dev.', 'X-Y Center', 'Mode', 'Perimeter' (or 'Length'), 'Major', 'Minor', 'Angle', 'Int. Den.', 'Min/Max', 'User1' or 'User2'. Any variable not listed is disabled.

Redirect(*b*)
 Enables/disables redirected sampling. *b*=true or false.

WandAutoMeasure(*b*)
 Sets the "Wand Auto-Measure" flag in Measurement/Options. *b*=true or false.

AdjustAreas(*b*)
 Sets the "Adjust Areas" flag in Measurement/Options. *b*=true or false.

SetPrecision(*digits,fwidth*)
 Specifies the format of displayed results, where *digits* is the number of digits to the right of the decimal point and *fwidth* (optional) is the field width.

GetScale(*scale,unit,AspectRatio*)
 Returns the number of pixels per unit of measurement in the real variable *scale*, the unit of measurement in the string variable *unit*, and (optional) the pixel aspect ratio in the real variable *AspectRatio*. For uncalibrated images, *scale* and *AspectRatio* are set to 1.0 and *unit* to 'pixel'.

SetScale(*scale,'unit',AspectRatio*)
Scale is the number of pixels per unit of measurement. Set '*Unit*' to 'nm', 'µm', 'mm', 'cm', 'meter', 'km', 'inch', 'ft', 'mile' or 'pixel' or use an arbitrary unit up to 11 characters in length. *AspectRatio* (optional) is the x/y pixel aspect ratio. Use `SetScale(0,'pixel')` to disable spatial calibration and `SetScale(0,"")` to activate the Set Scale dialog box.

Calibrate('fit', 'unit', *m1, k1, m2, k2, ...*)
'*fit*' is one of 'straight', 'poly2', 'poly3', 'poly4', 'exp', 'power', 'log', 'rodbard', 'uncalibrated' or 'uncalibrated od'. '*unit*' is the unit of measurement, *m1*, *m2*, etc. are the measured values and *k1*, *k2*, etc. are the known values. For example, "Calibrate('Straight', 'Invert', 0, 255, 255, 0)" sets up a simple inverting function. Use "Calibrate('Uncalibrated OD')" to enable uncalibrated OD and "Calibrate('Uncalibrated')" to disable calibration.

PlotProfile
 Generates a gray scale profile plot of the current rectangular selection or line selection.

GetPlotData(*count,ppv,min,max*)
 Performs the equivalent of PlotProfile and returns the results in the built-in PlotData array. *Count* is the number of values, *ppv* is the number of pixels averaged for each value, and *min* and *max* are the minimum and maximum values.

SurfacePlot

Creates a surface plot of the current image. Use `SetNewSize` to specify the size of the plot.

ResetCounter

Sets the measurement counter to zero.

Special Menu

StartCapturing

Starts "live" video capture.

StopCapturing

Stops "live" video capture.

Capture

Captures and displays a single video frame.

AverageFrames('str',frames)

Averages or integrates video frames. '*str*' is some combination of 'Average', 'Integrate', 'Video Rate Capture' and 'On-chip' and *frames* is the number of frames. Any option not specified is disabled. Set *frames* to zero to display the Average Frames dialog box.

SetVideo('string',gain,offset)

Where '*string*' is some combination of 'Invert', 'Highlight', 'Oscillating', 'Trigger', 'Blind' or 'Separate'. Any option not specified is disabled. *Gain* and *Offset* (optional) are integers in the range 0-255.

SetChannel(channel)

Sets the video input channel, where channel=1, 2, 3, or 4.

PhotoMode(b)

Set *b* true to enable "Photo Mode" and false to disable it.

Stacks Menu

AddSlice

Adds a slice following the current slice.

DeleteSlice

Deletes the current slice.

MakeMovie('str',frames,interval)

Captures a sequence of video frames to a stack. '*str*' is some combination of 'blind', 'buffer', 'time stamp', 'existing', 'trigger first', 'trigger each', and 'dialog'. *Frames* is the number of frames to capture, and *interval* is the interval between frames in seconds. See the "Movie Making" macro file for examples.

AverageSlices

Averages all the slices in the current stack.

Capture Color

Capures a 24-bit RGB color image.

RGBToIndexed('string')

Converts a 3-slice RGB stack to an 8-bit image with color LUT. '*String*' contains some combination of 'System LUT', 'Existing LUT', 'Custom LUT' and 'Dither'. Custom LUT and Dither are the defaults.

IndexedToRGB

Converts an 8-bit color image to a 3-slice RGB stack.

SetProjection('string',n)

Specifies 3D projection variables, where *n* is integer and '*string*' is one of the following: 'Initial Angle', 'Total Rotation', 'Rotation Increment', 'Surface Opacity', 'Surface Depth-Cueing' or 'Interior Depth-Cueing'. Use `SetDensitySlice` to set the transparency bounds.

SetProjection('string',b)

Set projections flags, where *b* is boolean (true or false) and '*string*' is either 'Save Projections' or 'Minimize Size'.

SetProjection('string')

Set projection options, where '*string*' is one of: 'X-Axis', 'Y-Axis', 'Z-Axis', 'Nearest', 'Brightest', 'Mean Value'

Project

Does 3D projection of current stack. Dialog box is not displayed if SetProjection() has been called.

Reslice

Reslice stack along current line selection.

Windows Menu

NextWindow

Switches to the next image window.

TileWindows

Repositions and resizes all open image windows so they don't overlap.

ShowPasteControl

Activates the Paste Control window.

Miscellaneous Macro Commands

AutoOutline(x,y)

Equivalent to clicking with the wand tool at location x, y . The outline was successfully created if GetRoi returns a width greater than zero.

Beep

Makes a short sound.

ChangeValues(v1,v2,v3)

Changes the value of all pixels with a value in the range $v1-v2$ to $v3$.

ChoosePic(n)

Selects then Nth image window without activating it. Faster than SelectPic but changes, if any, are not displayed. Also accepts PidNumbers (see description of PidNumber function).

ChooseSlice(n)

Selects the Nth slice in a stack without displaying it. ChooseSlice is faster than SelectSlice but changes, if any, are not displayed. Use SelectSlice before exiting macro to make sure the stack is correctly displayed.

Exit('error message')

Terminates execution of the macro and, optionally, displays an error message.

GetColumn(x,y,length)

Copies a column of pixels from active image to the built-in LineBuffer array.

GetHistogram(left,top,w,h)

Generates a density histogram of the specified rectangular ROI and stores it in the built-in histogram array.

GetLine(x1,y1,x2,y2,LineWidth)

Returns the starting coordinates, ending coordinates and width of current straight line selection. Sets $x1 = -1$ if there is no line selection.

GetMouse(x,y)

Returns the current cursor location in local pixel coordinates.

GetPicSize(width,height)

Returns, in pixels, the *width* and *height* of active image.

GetRoi(left,top,width,height)

Returns ROI location and size in pixels. Sets *width*=0 if no ROI. Returns location and size of bounding rectangle for non-rectangular ROIs and for line selections.

GetRow(x,y,length)

Copies a row of pixels from the active image to the built-in LineBuffer array.

GetTime(year, month, day, hour, minute, second, dayofweek)

Returns the current date and time.

InsetRoi(delta)

Shrinks or expands (if $\text{delta} < 0$) the current ROI by *delta*.

KillRoi

Disables the current “marching ants” selection.

LineTo(x,y)

Draws a line from current location to x, y .

MakeLineRoi(x1,y1,x2,y2)

Creates a new straight line selection. The origin (0,0) is assumed to be the upper left corner of the image. Coordinates are in pixels but they can be real numbers.

MakeNewStack('name')

Creates a new 1-slice stack. Use SetNewSize to specify the size.

MakeRoi(left,top,width,height)

Creates a new rectangular selection. *Left* and *top* are the coordinates (in pixels) of the upper left corner of the ROI. The origin (0,0) of the coordinate system is the upper left corner of the image.

MakeOvalRoi(left,top,width,height)

Creates an elliptical ROI, where *left* and *top* define the upper left corner of the bounding rectangle..

MoveRoi(dx,dy)

Moves ROI right *dx* pixels and down *dy* pixels.

MoveTo(x,y)

Sets the current drawing location. The origin is always assumed to be the upper left corner of the image.

MoveWindow(x,y)

Moves current window to global screen coordinates *x*, *y*.

PlotXYZ

Plots XYZ coordinate data stored in a text file. See the example macro in "Plotting Macros".

PutColumn(x,y,length)

Copies *length* pixels from the built-in LineBuffer array to a column starting at *x*, *y* in the current image.

PutMessage('message')

Displays 'message' in a dialog box. Like the Write routine, accepts multiple string and numeric arguments.

PutPixel(x,y,value)

Stores *value* (an integer in the range 0-255) at location *x*, *y*. When storing a sequence of pixels, it's usually faster to store them in the built-in LineBuffer array and use PutRow to display the line.

PutRow(x,y,length)

Copies *length* pixels from the built-in LineBuffer array to a row in the current image starting at *x*, *y*.

ResetGrayMap

Equivalent to using the Options/Grayscale menu command or clicking on the reset icon in Map window.

SaveState

Saves foreground and background color, new window width and height, status of Invert Y flag, text attributes, and various ScaleAndRotate and SetScaling parameters. Use RestoreState to restore the saved settings.

ScaleMath(b)

b=true or false. Sets or resets *Scale Math* flag in the Paste Control dialog box.

RequiresVersion(n)

Aborts macro if *Image* version number is less than *n*, where *n* is a real number.

RestoreState

Restores settings saved by SaveState.

SelectPic(n)

Activates the Nth image window. Also accepts PidNumbers (see description of PidNumber function).

SelectSlice(n)

Displays the Nth slice of the current stack.

SelectTool(tool)

Selects a tool from the tool palette, where tool is one of: 'magnifier', 'grabber', 'pencil', 'eraser', 'brush', 'drawline', 'paintbucket', 'profile', 'wand', 'angletool', 'rectangle', 'oval', 'polygon', 'freehand', 'straightline', 'freeline', 'segmentline', 'lut', 'text', 'spraycan', 'picker' or 'crosshair'.

SelectWindow('name')

Activates the window with the title *'name'*.

SetCounter(n)

Sets the measurement counter to *n*.

SetCursor('shape')

Changes the cursor shape, where *'shape'* is 'watch', 'cross', 'arrow' or 'finger'.

SetForegroundColor(c)

Sets the foreground color, where $0 \leq c \leq 255$ (note that 0=white and 255=black).

SetBackgroundColor(c)

Sets the background color, where $0 \leq c \leq 255$.

SetLineWidth(width)

Specifies the line width (in pixels) used by LineTo, DrawBoundary and MakeLineRoi.

SetUser1Label('Label')

Replaces the label used for User 1 column in Results window. The maximum length of the label is 9 characters.

SetUser2Label('Label')

Replaces the label used for User 2 column in Results window. The maximum length of the label is 9 characters.

SetPicName('Name')

Renames the active image window.

SetOption

Equivalent to holding down option key while executing the immediately following macro command.

SetSliceSpacing(n)

Sets the slice spacing (in pixels) used by the Reslice and Project commands.

ShowMessage('message')

Displays *'message'* in the Info window. Accepts multiple arguments in the same way the Write routine does. Use a back-slash ('\') to start a new line.

SortPalette

Sorts the current LUT by hue.

UpdateResults

Redisplays the last measurement in Info and Results windows.

UpdateLUT

Redisplays the LUT window.

UserCode('name',p1,p2,p3)

Calls a user written Pascal routine, where *'name'* is the name of the routine and *p1*, *p2* and *p3* are real input parameters. See "Inside NIH Image" and the User.p source file for more information.

Wait(seconds)

Delays for *seconds* seconds. Fractions of a second are allowed, e.g., wait(1.5).

WaitForTrigger

Waits for an external trigger. Requires a QuickCapture or Scion frame grabber card. Use "repeat until button" to wait for a mouse down event.

Write(e1,e2,...)

Draws text, variables, or constants in the current image at the current location. Like the Writeln procedure in Pascal, expressions may have optional field width specifications in the form e:f1:f2 (e.g., write('M=',mean:8:3), where f1 is the field width, and f2 specifies the number of digits to the right of the decimal point.

Writeln(e1,e2,...)

Similar to Write, but does the equivalent of a line feed and carriage return after displaying the specified values.

Miscellaneous Functions

AllSameSize

Returns true if all open images have the same dimensions.

Button

Returns true if mouse button is down.

Calibrated
Returns true if current image is density calibrated.

cValue(PixelValue)
Converts a raw pixel value (an integer in the range 0-255) to a density calibrated value.

Get('FreeMem')
Returns the total amount of free memory, in bytes.

Get('MaxBlock')
Returns the size (in bytes) of the largest free memory block.

Get('MaxMeasurements')
Returns the value of "Max Measurements".

Get('Offset')
Returns the current frame grabber offset.

Get('Gain')
Returns the current frame grabber gain.

Get('MaxMeasurements')
Returns the value of "Max Measurements".

Get('RoiType')
Returns a code that specifies the current ROI type, where 0 = no ROI or no image, 1 = rectangle, 2 = oval, 3 = polygon, 4 = freehand, 5 = traced, 6 = straight line, 7 = freehand line and 8 = segmented line.

Get('ScreenWidth')
Returns the screen width in pixels

Get('ScreenHeight')
Returns the screen height in pixels

Get('UndoBufSize')
Returns size (in bytes) of the Undo and Clipboard buffers.

GetNumber('Prompt', default, d)
Displays a dialog box and returns with the value entered. *Prompt* is the prompting string. *Default* is the default value. *d* (optional) is the number of digits to the right of the decimal point (default is 2). Set *d* to zero to display an integer default value.

GetPixel(x,y)
Returns the value of the pixel at *x, y*.

GetSliceSpacing
Returns slice spacing (in pixels) of current stack.

KeyDown('key')
Checks the state of the specified modifier key. 'key' is one of: 'option', 'shift' or 'control'. Returns TRUE if the specified key is down.

nCoordinates
Returns the number of XY coordinates used to define the current selection. The coordinates are stored in the `xCoordinates[]` and `yCoordinates[]` built-in arrays.

nPics
Returns number of image windows.

nSlices
Returns number of slices in current stack.

PicNumber
Returns number (used by `SelectPic`) of the active image.

PidNumber
Returns a negative permanent ID number for the current image. This number can be passed at a later time to `SelectPic` or `ChoosePic` to activate this image.

PidExists(pid)
Returns TRUE if image with this `PidNumber` is still open.

rCount
Returns current measurement counter value.

SliceNumber
Returns number of current slice in a stack.

TickCount

Returns the number of ticks (sixtieths of a second) since system last started.

WindowTitle

Returns a string containing the title of the active window.

Math Functions

abs(n)

Returns absolute value of n .

arctan(n)

Returns arctangent of n (radians).

BitAnd(n1,n2)

Returns $n1$ AND $n2$.

BitOr(n1,n2)

Returns $n1$ OR $n2$.

cos(n)

Returns cosine of n (radians).

exp(n)

Returns exponential of n

ln(n)

Returns natural logarithm of n .

odd(n)

Returns TRUE if integer n is odd.

random

Returns a random number between 0 and 1.

round(n)

Converts a real value to an integer with rounding.

sin(n)

Returns sine of n (radians).

sqr(n)

Returns square of n .

sqrt(n)

Returns square root of n .

trunc(n)

Converts a real value to an integer with truncation.

Paste Control Related Commands

DoCopy, DoAnd, DoOr, DoXor, DoReplace, DoBlend, Add, Subtract, Multiply, Divide

These commands are equivalent to clicking on the corresponding button in the Paste Control dialog box. They must be used immediately after the Paste command. Precede DoCopy, DoAnd, etc. with SetOption to switch paste transfer modes, otherwise the operation is performed and the paste operation terminated. The foreground color is set to black and the background color to white unless SetOption is used. See the "More Macros" macro file for examples of how to use SetOption with these commands. Add, Subtract, Multiple and Divide only work with rectangular selections.

String Functions

str:=GetString('Prompt','default')

Displays a dialog box and returns with the string entered. The first argument is the prompting message and the second argument (optional) is the default input string.

str:=concat(str1, str2,...)

Concatenates a series of strings. Will also convert one or more numbers to a string.

str:=chr(n)

Converts a positive integer in the range 0..255 to a one character string (e.g. chr(65) = 'A').

Delete(str,index,count)

Removes *count* characters from *str*, beginning at *index*.

GetFileInfo(FullPath, FileType, FileSize)

Returns information about the file specified by FullPath, a string containing a path name (e.g. 'HD500:Images:image01'). Returns the file type ('TIFF', 'PICT', 'TEXT' etc) in the string variable FileType and the file size in bytes in the integer variable FileSize. If the file isn't found, FileType is set to an empty string and FileSize is set to -1. See the 'File Paths Demo' macro in 'Input/Output Macros' for an example of how to use GetFileInfo.

path := GetPath('window')

Returns the folder path (e.g. 'HD500:Images:') of the current current image or text window. Returns an empty string if no window is open or the current window has no file associated it. The 'File Paths Demo' macro in 'Input/Output Macros' demonstrates how to use the GetPath functions.

path := GetPath('startup')

Returns the path of the folder from which NIH Image was started.

path := GetPath('pref')

Returns the path of the Preferences folder in the System Folder.

i:=length(str)

Returns the length of *str*.

n:=ord(str)

Returns the ordinal number of the first character in a string (e.g. ord('A')=65). Returns -1 if the string is empty.

i:=pos(substr,str)

Searches for *substr* within *str* and returns an integer that is the index of the first character of *substr* within *str*. Returns zero if *substr* is not found.

n:=StringToNum(str)

Converts a string to a real number. Returns zero if the string contains no digits.

str:=WindowTitle

Returns the title of the currently active window.

Serial I/O

OpenSerial('Options')

Sets up the modem port for serial I/O. 'Options' contains '300 baud', '1200 baud', '2400 baud', '9600 baud' or '19200 baud'; 'no parity', 'even parity' or 'odd parity'; 'seven data' or 'eight data'; 'One stop' or 'two stop'. The default is 9600 baud, no parity, eight data, one stop.

str:=GetSerial

Returns the next available character in the serial (modem) input buffer as a one character string or returns an empty string if the buffer is empty.

PutSerial(str)

Writes 'str' to the modem port. Like the Write routine, it accepts multiple arguments (e.g. PutSerial('v=',v:1:2)).

Note that routines that require a file name or window title (MakeNewWindow, MakeNewStack, Open, SaveAs, Import, Export, Duplicate and SetPicName) accept multiple arguments similar to the Write routine, except that numeric fields are left filled with zeros rather than spaces. As an example, SetPicName('PIC',n:2) result in window titles in the form 'PIC01', 'PIC02', 'PIC03', etc. Several other routines (PutMessage, ShowMessage, PutSerial, Concat) also accept multiple arguments.

B. Frame Grabber Cards

Image directly supports four frame grabber cards for acquiring images from video sources, such as TV cameras and VCR's: the Data Translation QuickCapture, the Scion LG-3, Scion AG-5, and the Scion VG-5. All allow brightness, contrast and pseudocolor to be adjusted during "live" capture. All allow continuous histogram display and "live" paste, which can be useful for image alignment.

The fastest screen refresh rate is achieved using the PCI versions of the Scion cards. A 16 inch, or larger, monitor is required to see the entire 640x480 frame without panning. *Image* supports the 768 x 512 resolution available with 50Hz (PAL/CCIR) versions of all four cards. It also supports external triggering.

All of the Scion cards support software control of analog gain and offset and on-chip integration. The LG-3 features a frame buffer that can be expanded to 64MB using standard Mac SIMMS. The AG-5 supports video rate averaging and integration. The VG-5 is a short NuBus card that will fit in the Quadra 610 and PowerMac 6100. The PCI versions of the Scion cards, which are faster than the NuBus versions, can capture 30 full size frames per second to system RAM using the Make Movie command.

Using VDIGs (QuickTime Video Digitizer extensions), *Image* also supports QuickTime compatible video digitizers such as those built into "AV" Macs and the PowerMac7500/8500. Some third party digitizers, such as the Data Translation 3155 PCI card and the Connectix QuickCam, are also supported. The directly supported frame grabber cards, however, currently provide the following advantages:

1. 30 frames per second capture (Scion PCI cards only)
2. Ability to adjust gain and offset in "Live" capture mode
3. External trigger support
4. On-chip integration
5. Use of pseudo-color LUTs during "Live" capture
6. Highlighting of saturated pixels during "Live" capture
7. Capture with virtual memory or Ram Doubler enabled

1) **Data Translation**

DT2255 QuickCapture: \$1295 (Requires EP205 Cable: \$125)
DT3155-PM for PCI Bus: \$995 (Requires EP277 Cable: \$165)

Phone: 508-481-3700, fax: 508-481-8620
<http://www.datx.com>

2) **Scion**

LG-3: \$895, VG-5: \$1395, AG-5: \$2495
(The LG-3, AG-5 and VG-5 are available in PCI versions. Optional cables are required for color capture and on-chip integration.)

Scion Corporation
Frederick, Maryland 21701
Phone: 301-695-7870, Fax: 301-695-0035
<http://www.scioncorp.com>, info@scioncorp.com

C. Cameras and Light Boxes

Quantitative image analysis using *Image* requires the use of a high quality TV camera and light source. You should select a high resolution solid-state (CCD) monochrome camera designed for imaging applications. There should be a way to disable any automatic gain control (AGC) or automatic black level features. The light source should provide uniform illumination, as well as stable output with normal line voltage variation.

One CCD camera that is well suited for quantitative densitometry is the Sony XC-77. Other CCD cameras to consider include the Sierra Scientific MS-4030, the COHU Model 4815-5000, and the Dage CCD-72. Sierra Scientific, COHU and Dage also sell lenses and filters. When ordering a camera, particularly the Sony XC-77, make sure it comes with all necessary components, such as power supply, tripod attachment (if needed), and documentation.

Imaging Research, creator of the highly regarded MCID biomedical image analysis system for the IBM-PC, makes a stabilized fluorescent light box that provides the uniform illumination needed for autoradiographic densitometry. They also sell several needed accessories, including the Nikon Micro-Nikkor f2.8/55 mm lens, the F-C adapter needed to connect the lens to a TV camera, and the Kaiser RS-1 copy stand. In addition, they sell Sony and Dage cameras.

For digitizing gels, Fotodyne has an unstabilized light box called the VariQuest 100 that is considerable less expensive than the one from Imaging Research. Fotodyne also distributes a program called "Collage" for imaging of electrophoresis gels, blots and autoradiograms.

For specialized applications, Perceptics has a NuBus frame grabber card that supports the 1340X1037 resolution Videk MegaPlus camera, and can supply a version of *Image* that supports the MegaPlus. Photometrics has a cooled CCD imaging system for the Macintosh that supports CCDs with a resolution of up to 2K X 2K. The Photometrics system, however, is not directly supported by *Image*. Dage-MTI has a real-time video processor (the DSP-200) that does real-time averaging and integration to enhance noisy, low intensity images. They also have an image intensifier for CCD cameras.

COHU Inc.
San Diego, California
619-277-6700
fax: 619-277-0221

Dage-MTI, Inc.
701 N. Roeske Ave.
Michigan City, Indiana 46360
219-872-5514

Fotodyne Inc.
Hartland, Wisconsin
1-800-362-3642
fax: 414-369-7013

Imaging Research Inc.
Brock University
St. Catharines, Ontario
Canada L2S 3A1
905-688-2040
fax: 905-685-5861

Perceptics Corp.
Knoxville, TN
615-966-9200
fax: 615-966 9330

Photometrics Ltd.
Tucson, AZ
602-889-9933
fax: 602-573-1944

Sierra Scientific
Sunnyvale, CA
408-773-5600

Sony Corporation of America
Component Products Company
10833 Valley View St.
Cypress, CA 90630
714-229-4197
fax: 714-229-4285

D. Alternative Macintosh Analysis Systems

Alice (was DIP Station)

(Medical image analysis, 16-bits, surface rendering, DICOM)
Hayden Image Processing Group
Boulder, Colorado (help@perceptive.com)
303-449-3433, fax: 303-449-3772

BRAIN

(2-DG and receptor autoradiography)
Image and Computer Vision Center, Drexel University
Philadelphia, PA
215-895-1381

Image Analyst

Automatix
Billerica, MA
508-667-7900

IPLab Spectrum

(>8-bits precision, 24-bit color, gel analysis, microscopy)
Signal Analytics, Vienna, Virginia
703-281-3277, fax: 703-281-2509
info@iplab.com

NCSA Image, PalEdit, Layout, and Gel Reader (all public domain)

(Scientific visualization, palette editing, gels)
NCSA, Champaign, IL
217-738-3160
ftp: zaphod.ncsa.uiuc.edu

Photoshop

(Color image processing, 24-bit to 8-bit color conversion, file conversion, plug-in modules)
Adobe Systems
Mountain View, CA
415-961-4400

Synapse-IP

(8, 12 bit combined image and electrophysiology)
Synergy Research Inc.
Silver Spring, MD
301-942-6601, fax: 301-942-6656
<http://www.his.com/synergy>

BDS Image

(Fluorescence microscopy, calcium imaging)
Biological Detection System, Inc.
Rockville, Maryland
301-990-0100, fax: 301-990-8391
72204.70@compuserve.com

Enhance, Color-It!

(Image editing, Photoshop plug-ins)
Micro Frontier
Des Moines, Iowa
515-270-8109

ImportACCESS

(Plug-in for importing medical images in DICOM, ACR-NEMA and other formats)
Designed Access
Chicago, IL 60614
312-880-2034, fax: 312-472-8834
email: daccess@interaccess.com

MedVision

(Medical imaging, multi-modality studies, 16-bits, extendible, DICOM, ACR-NEMA)
Evergreen Technologies, Castine, Maine
207-326-8300, fax: 207-326-8333
jsiegel@lunis.nucmed.luc.edu

OSIRIS

(Medical imaging, 16-bits, DICOM, ACR-NEMA)
University Hospital of Geneva
fax:: 41 22 37 26 198
e-mail: yves@cih.hcuge.ch
ftp: expasy.hcuge.ch

PixelTools, TCL-Image

(Video rate processing, 1340x1035 frame grabber)
Perceptics Corporation
Knoxville, TN
615-966-9200
fax: 615-966 9330

Transform, View, Format, and Dicer

(Scientific visualization, presentation graphics, volume visualization)
Spyglass, Inc.
Savoy, IL
217-355-6000

Ultimage
GTFS Inc.
Santa Rosa, CA
707-579-1733

VoxBlast
(Volume rendering, video microscopy)
VayTek, Inc
Fairfield, Iowa
515-472-2227

VoxelView/Mac
(Volume rendering)
Vital Images
Fairfield, Iowa
515-472-7726

E. File Formats

TIFF Files Created by *Image*

Bytes 0-7 contain the TIFF header. Bytes 8-129 contain the TIFF Image File Directory (IFD). Within the IFD, bytes 30-31 contain the image width and bytes 42-43 contain the height. Bytes 130-255 are currently unused and are set to zero. Bytes 256-767 contain a 512 byte header unique to the *Image* program. Image data starts at byte 768, stored in row order, one byte per pixel. In the case of a stack, there are two or more consecutive images starting at byte 768 and bytes 516-517 contain the number of images (slices). The TIFF color table, if any, follows the image data. It consists of 256 16-bit red values, 256 16-bit green values, and 256 16-bit blue values. Any additional TIFF IFDs (only needed for stacks) follow the color table. Note that the 16-bit integers containing the width, height, and number of images have the opposite byte order as IBM PC and VAX systems.

TIFF files created by *image* can be read using the Import command by selecting *Custom, 8-bits*, entering *Width* and *Height*, and setting *Offset* to 768. *Slices* should be set to one for a single image and to the number of slices for a stack. Note that you have to hold down the option key when selecting the Import command to override *Image's* automatic TIFF file detection.

The information provided here should be adequate for writing a program to read a TIFF file created by *Image*. It is not sufficient for creating TIFF files that *Image*, or any other program, can read. More detailed information on TIFF is available via anonymous FTP from zippy.nimh.nih.gov, in the directory `/pub/nih-image/documents`.

F. Program Limitations

There is no arbitrary limit (other than memory requirements) on the maximum number of lines in an image. The width of images, however, should be limited to 4096 pixels, since that is the size of *Image's* internal line buffers. *Image* uses two 300K buffers as Undo and Clipboard buffers. Many functions will not work with images larger than these buffers. The size of these buffers can be changed in the Preferences dialog box. You must Quit, and then restart *Image* before the buffer size change will take effect.

The maximum number of characters that can be displayed, printed, or copied to the clipboard is 32,700. There is no limit to the number of measurements that can be exported to a text file.

The default maximum number of measurements is 200. This can be changed in the Options dialog box. You must Quit, and then restart *Image* before the change will take effect.


The maximum size of a macro file is 30,000 bytes. A macro file can contain up to 100 macros. The push-down stack used by the macro language can contain up to 150 variables.

The maximum number of images that can be opened is 250. The maximum number of slices in a stack is 1000.


A maximum of 5000 characters can be copied from the Results window or a text window and pasted into an image window.

G. Shortcuts

Double-Click on tool to:

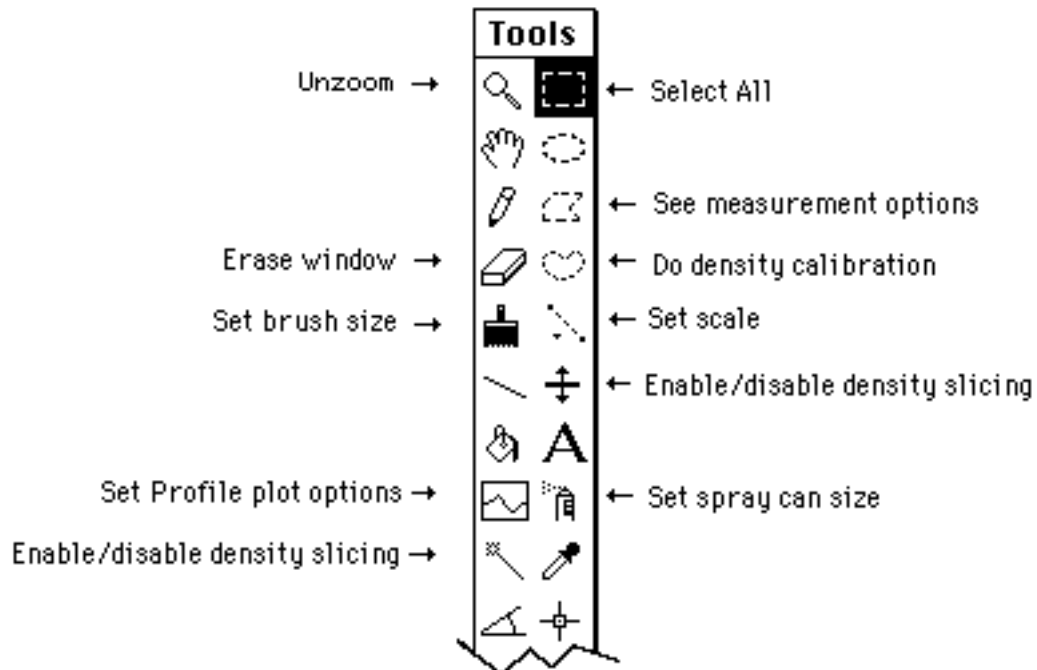


To constrain tool functions hold down the shift key:

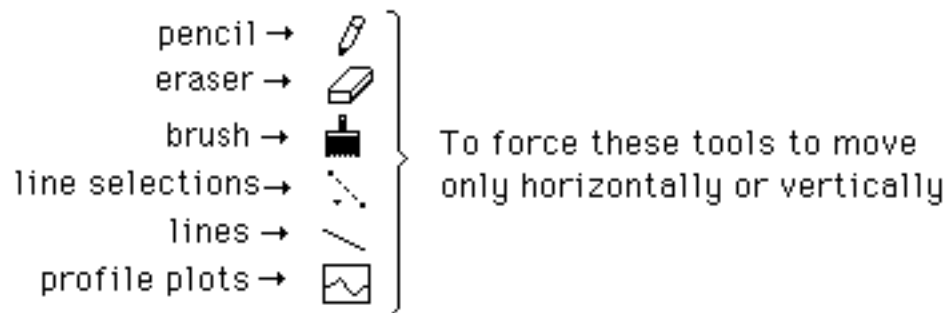

□ To create squares

○ To create circles

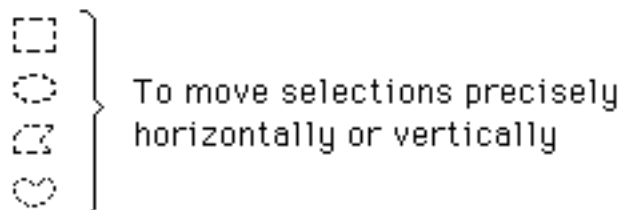

H. References

- Joseph Ayers and Garth Fletcher, Color, Motion Analysis and Biological Imaging. *Advanced Imaging*, November 1990, 39-42.
- S.D. Barrett, et al., Customized Image Analysis Made Easy, *Microscopy and Analysis*, July 1995, 17-19.
- Gregory Baxes, *Digital Image Processing: A Practical Primer*. Prentice-Hall, 1984.
- A. B. Busbey, Image Processing Approaches Using the Macintosh. *Photogrammetric Engineering and Remote Sensing*, December 1992, 1665-1668.
- Kenneth Castleman, *Digital Image Processing*. Prentice-Hall, 1979.
- Ricardo Correa-Rotter, et al., Loading and Transfer Control for Northern Hybridization. *BioTechniques*, Vol. 12, No 2, 1992, 154-158.
- Thomas Ford-Holevinski et al., Microcomputer-based Three-dimensional Reconstruction of in situ Hybridization Autoradiographs. *Journal of Chemical Neuroanatomy*, Vol 4, 1991, 373-385.
- Brand Fortner, *The Data Handbook: A Guide to Understanding the Organization and Visualization of Technical Data*. Spyglass (Phone: 217-355-6000), 1992.
- Steven Hollinger, A Six-Pack for the Mac. *ESD: The Electronic System Design Magazine*, June 1989, 26-36.
- Paul Lennard, Image Analysis for All. *Nature*, Vol 347, 6 September 1990, 103-104.
- Shinya Inoue, *Video Microscopy*. Plenum Press, 1986.
- Robert Morris, Image Processing on the Macintosh. *IEEE Computer*, August 1990, 103-106.
- Raymond O'Neill et al., Use of Image Analysis to Quantitate Changes in Form of Mitochondrial DNA After X-irradiation. *Applied and Theoretical Electrophoresis*, 1989-1, 163-167.
- Robert Parry, et al., Computer-Aided Cell Colony Counting. *BioTechniques*, Vol. 10, No 6, 1991, 772-774.
- PCs Invade Processing of Biomedical Images, *Diagnostic Imaging*, February 1990, 139-148.
- W.S. Rasband and D.S. Bright, NIH Image: A Public Domain Image Processing Program for the Macintosh. *Microbeam Analysis Society Journal*. 4 (1995), 137-149.
- John C. Russ, *The Image Processing Handbook (Second Edition)*. CRC Press, 1995.
- Sidney Shaw, et al., Digital Photography for the Light Microscope: Results with a Gated, Video-Rate CCD Camera and NIH-Image Software. *BioTechniques*, Vol. 19, No 6, December 1995, 946-955.
- M.A. Vivino, et al., Quantitative Analysis of Retroillumination Images. *Eye* 1995-9, 77-84.

I. Updated Versions and Bug Reports

The latest version of *Image* is always available from the NIH Image Web site (<http://rsb.info.nih.gov/nih-image/>) or by anonymous FTP from zippy.nimh.nih.gov. A reasonably current version, including complete documentation, Pascal source code and example images, is available from one of the following sources:

1. From a friend. The *Image* program, including source code and documentation, is public domain and may be freely distributed and modified. If you modify it, however, please update the "About NIH Image" dialog box before distributing your version of the program.
2. The best place to get the latest version of *Image* is the NIH Image Web page at:

<http://rsb.info.nih.gov/nih-image/>

This site also has a FAQs (Frequently Asked Questions) section, on-line documentation, and links to related Web sites.

3. By anonymous FTP from zippy.nimh.nih.gov. Enter "anonymous" as the user name and your e-mail address as the password. The /pub/nih-image directory contains executable versions of *Image* for both 68000 Macs and Power Macs, documentation in Word format, and complete Pascal source code. There is a plain text README file (OREADME.txt) describing the files, subdirectories and file formats.

4. Subscribe to the NIH Image mailing list by sending a message containing the line "subscribe nih-image <your name>" to listproc@soils.umn.edu. Next obtain a list of the available NIH Image archive files by sending an "index nih-image" command to listproc@soils.umn.edu. These files can then be retrieved by means of a "get nih-image filename" command. The files are Binhexed and broken into chunks less than 32K in size. The NIH mailing is maintained by the Soil Science Department at the University of Minnesota.

5. *Image* is on the \$35 Apprentice CD-ROM from Celestin Company, Inc. This CD is a collection of source code and utilities for Mac programmers. To order, phone 360-385-3767, fax 360-385-3586, or send email to celestin@celestin.com.

Bug reports and suggestions are welcome, as are corrections or additions to this manual. Before reporting a bug, please make sure you are using the latest version of *Image*. Also try disabling extensions by holding down the shift key while restarting the computer, try deleting the file "Image Prefs" from both the System folder and Preferences folder, try switching the monitor to 256 colors, and try to reproduce the problem on more than one Mac. Send bug reports to Wayne Rasband (wayne@codon.nih.gov), the author of *Image*.

INDEX

- 16-bit images 11, 16
- 16-bit TIFF 11, 16
- 24-bit (RGB) TIFF files 9
- 24-bit color 49, 52
- 3D reconstruction 55
- 8-bit Color to RGB 53
- Acquisition plug-ins 17
- ACR-NEMA 11
- Add 32, 67
- Add Slice 49
- Analyze Particles 37
- AND paste mode 67
- Angle Tool 15, 63
- Animate 51
- Apply LUT 35
- Arithmetic 31
- Arrow heads, drawing 48
- ASCII dump 48
- AV Macs 17
- Average 51
- Average Frames 44
- Background color 61
- Binary 30
- Blend paste mode 67
- Brightness, adjusting 65
- Brush tool 61
- Calibrate... 42
- Capture Color 52
- Cascade Windows 57
- Citing NIH Image 8
- Clear 20
- Closing 31
- Color printing 25
- Color Tables 23
- Composite Images 52
- Contrast, adjusting 65
- Converting color to grayscale 35
- Convolve 30
- Copy 19
- Cross Hair Tool 15, 63
- Custom Settings 16
- Cut 19
- Delete Measurement 43
- Delete Slice 49
- Density calibration 42
- Density Profile Tool 62, 68
- Density slicing 27, 61
- Deselect 21
- DICOM 11
- Dilate 31
- Distance Map 31
- Dither 30
- Divide 32, 67
- Draw Boundary 20
- Draw Scale 20
- Duplicate 16
- Edge detection 28
- Editing 6
- Enhance Contrast 36
- Equalize 36
- Eraser 61
- Erode 30
- Export plug-ins 18
- Export... 14
- External Trigger 46
- Eyedropper tool 62
- FFT 33
- File Formats 5, 98
- Fill 20
- Filter plug-ins 30
- Filters 28
- Find 20
- Find Edges 28
- FITS 48
- Fix Colors 36
- Flatbed scanners 17
- Flip Horizontal 21
- Flip Vertical 21
- Frame Grabber Cards 94
- Freehand Selection Tool 60
- GE SIGNA scanner 12
- Get Info 17
- Grabber 59
- Grayscale 23
- Grayscale erosion and dilation 29
- Grayscale step function 48
- Grow Box 64, 68
- Hand (scrolling) tool 59
- Help 7
- Highlight Saturated Pixels 25, 46
- Histogram 15, 65
- Image arithmetic 31, 67
- Import... 11
- Inside Image 5
- Invert 20
- Invert Pixel Values 25
- Invert Video Input 46
- Invert Y Coordinates 25
- Label Selection 43
- Last Slice 49
- Line Drawing Tool 61
- Line Selection Tools 60
- Line widths 63
- Live Paste 20, 68
- Load Macros... 48
- Log 32
- Look-Up Table (LUT) 15, 66
- LUT Options 23

LUT tool 23, 27, 61
 MacPaint 9
 Macros 5, 48
 Magnifying Glass 59, 64, 75
 Mailing list 7
 Make Binary 30
 Make Montage... 52
 Make Movie... 50
 Map 65
 Measure 36
 Measurement Options 39
 Median filter 29
 Memory Requirements 4
 MRI 12
 Multiply 32, 67
 New... 9
 Next Slice 49
 Next Window 57
 NIH Image Mailing List 7
 Nudging a selection 68, 71
 Opening 31
 Open... 9
 Optical density 42
 Option key 75
 Options... 39
 OR paste mode 67
 Outline 31
 Oval Selection Tool 60
 Overview 3
 Page Setup... 18
 Paint Bucket 62
 Palettes 14
 Paste 19, 67
 Paste Control 20, 67
 Pencil tool 61
 Photo Mode 47
 PICS 10, 14
 PICT 9, 13
 Plot Profile 38, 68
 Plot window 68
 Plug-ins 5, 17, 18, 30
 Polygonal Selection Tool 60
 Preferences 15, 24
 Print... 18
 Profile Plot Options 68
 Profile Plot Options... 26
 Profile plotting tool 62
 Project... 55
 Propagate 27
 Pseudocolor 14, 27, 62
 QuickTime 13
 QuickTime movies 14
 QuickTime movies. The Open command will place images from a QuickTime movie into a new stack. Note, however, that the current LUT is always used. Therefore, before opening the movie, you must switch to the Grayscale LUT when opening a grayscale movie a 10
 Quit 19
 Rank Filters 29
 Record Preferences 15
 Rectangular Selection Tool 59
 Redo Measurement 43
 Reduce Noise 29
 References 100
 Register... 54
 Rescale 16
 Reset 43
 Reslice 57
 Restore Selection 43
 Revert to Saved 16
 RGB 49, 52, 63, 69
 RGB to 8-bit Color... 53
 RGB to HSV 53
 Rodbard fit 42
 Rotate Left 21
 Rotate Right 21
 Save As... 13
 Save Blank Field 45
 Scale and Rotate... 22
 Scale to Fit Window 26
 Scaling 22
 Scion AG-5 45
 Select All 20
 Selection tools 59, 71
 Set Count... 31
 Set Iterations... 31
 Set Scale... 41
 Shadow 28
 Sharpen 28
 Shortcuts 99
 Show Clipboard 22
 Show Histogram 38
 Show Results 38
 Sine wave, generating 48
 Skeletonize 31
 Smooth 28
 Sobel edge detection 28
 Spatial calibration 41
 Spray Can Tool 61
 Stack Info 57
 Stack to Windows 49
 Stacks 4, 49
 Start Capturing 44
 Subtract 32, 67
 Subtract Background 35
 Surface Plot... 39
 System Requirements 2
 Text Tool 62
 Text Windows 7
 Threshold 26

TIFF 9, 11, 13, 98
Tile Windows 58
Tool palette 59
Ultimate Points 31
Undo 19
Undo & Clipboard Buffer Size
24
Video Capture 5
Video Control... 46
VideoSpigot card 18
Volume rendering 55
Wand tool 27, 61
Watershed 31
Windows to Stack 49
X-Y coordinates 15, 81
XOR paste mode 67
Zooming 59